


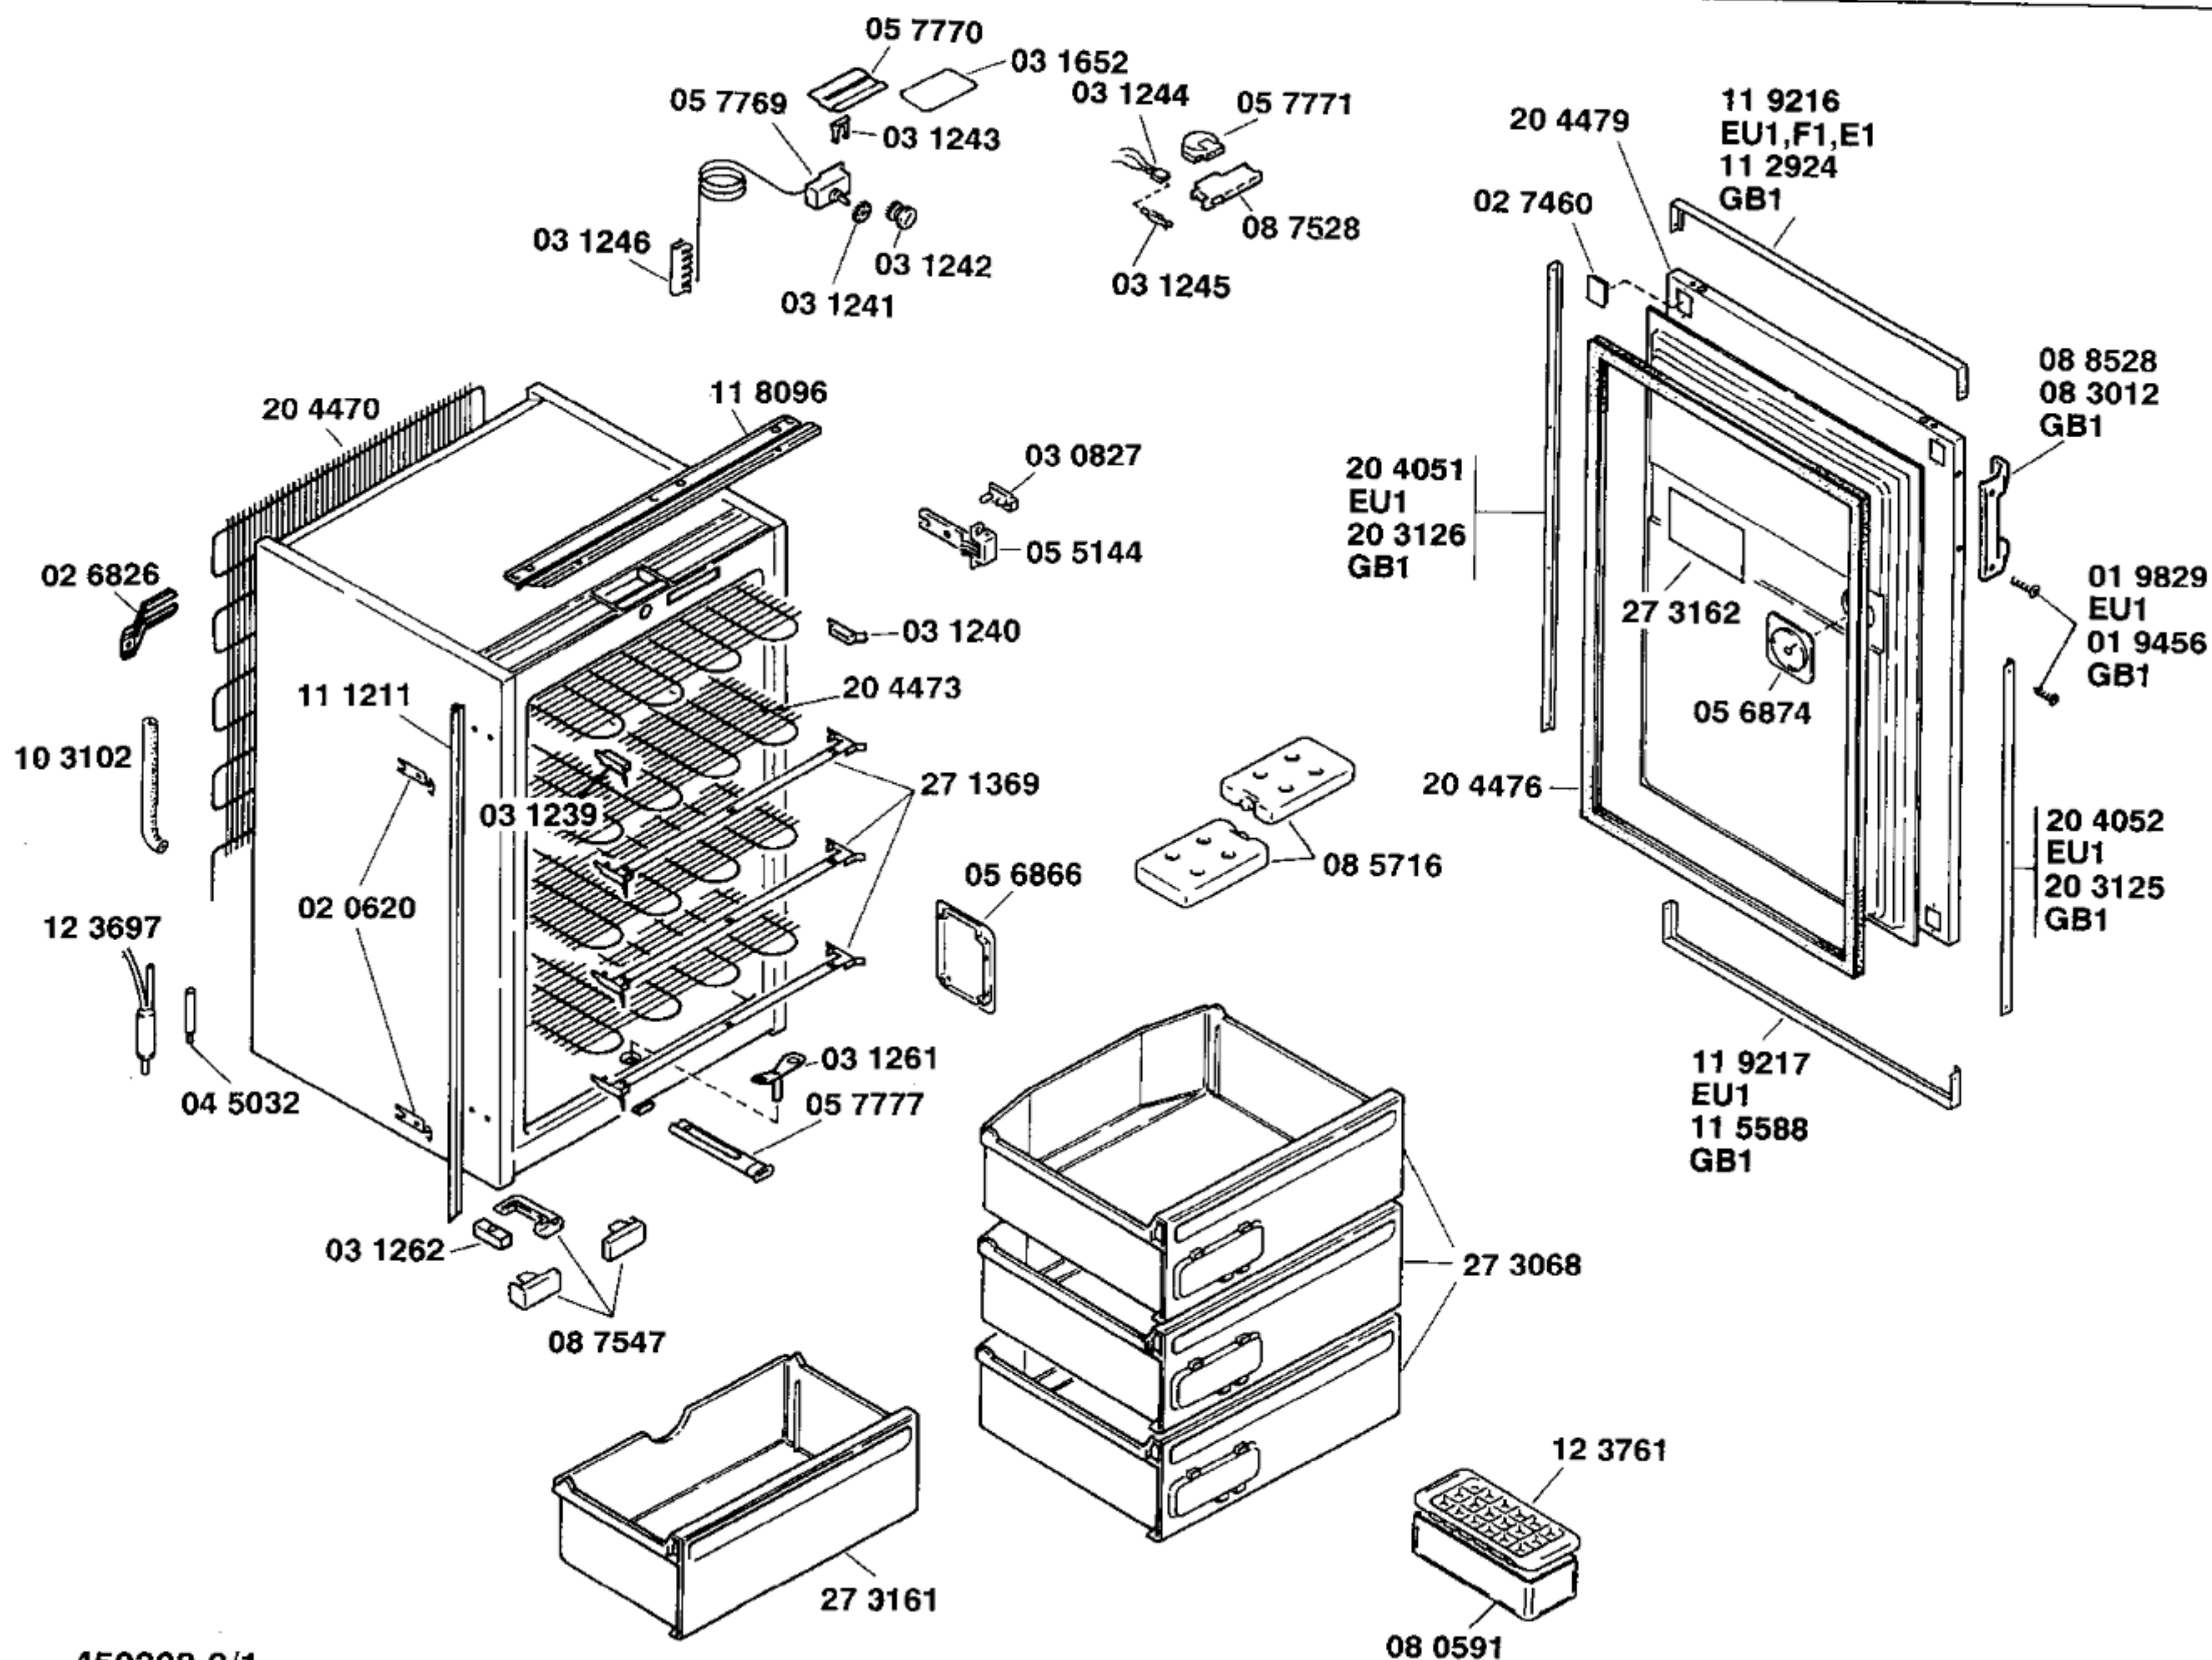


51 4778
Gebrauchsanweisung
(D,GB,F,I,NL)
51 4779
Montageanleitung
(D,GB,F,I,NL,DK,N,
SF,E,S)
08 4136
Schraubensatz

Zubehör:

Dekorrahmen
Z4120B0, braun
Z4120W0, weiss

Ausgleichs-
blenden
Alu:
Z4210A0, 37mm
Z4220A0, 56mm

braun:
Z4210B0, 37mm
Z4220B0, 56mm

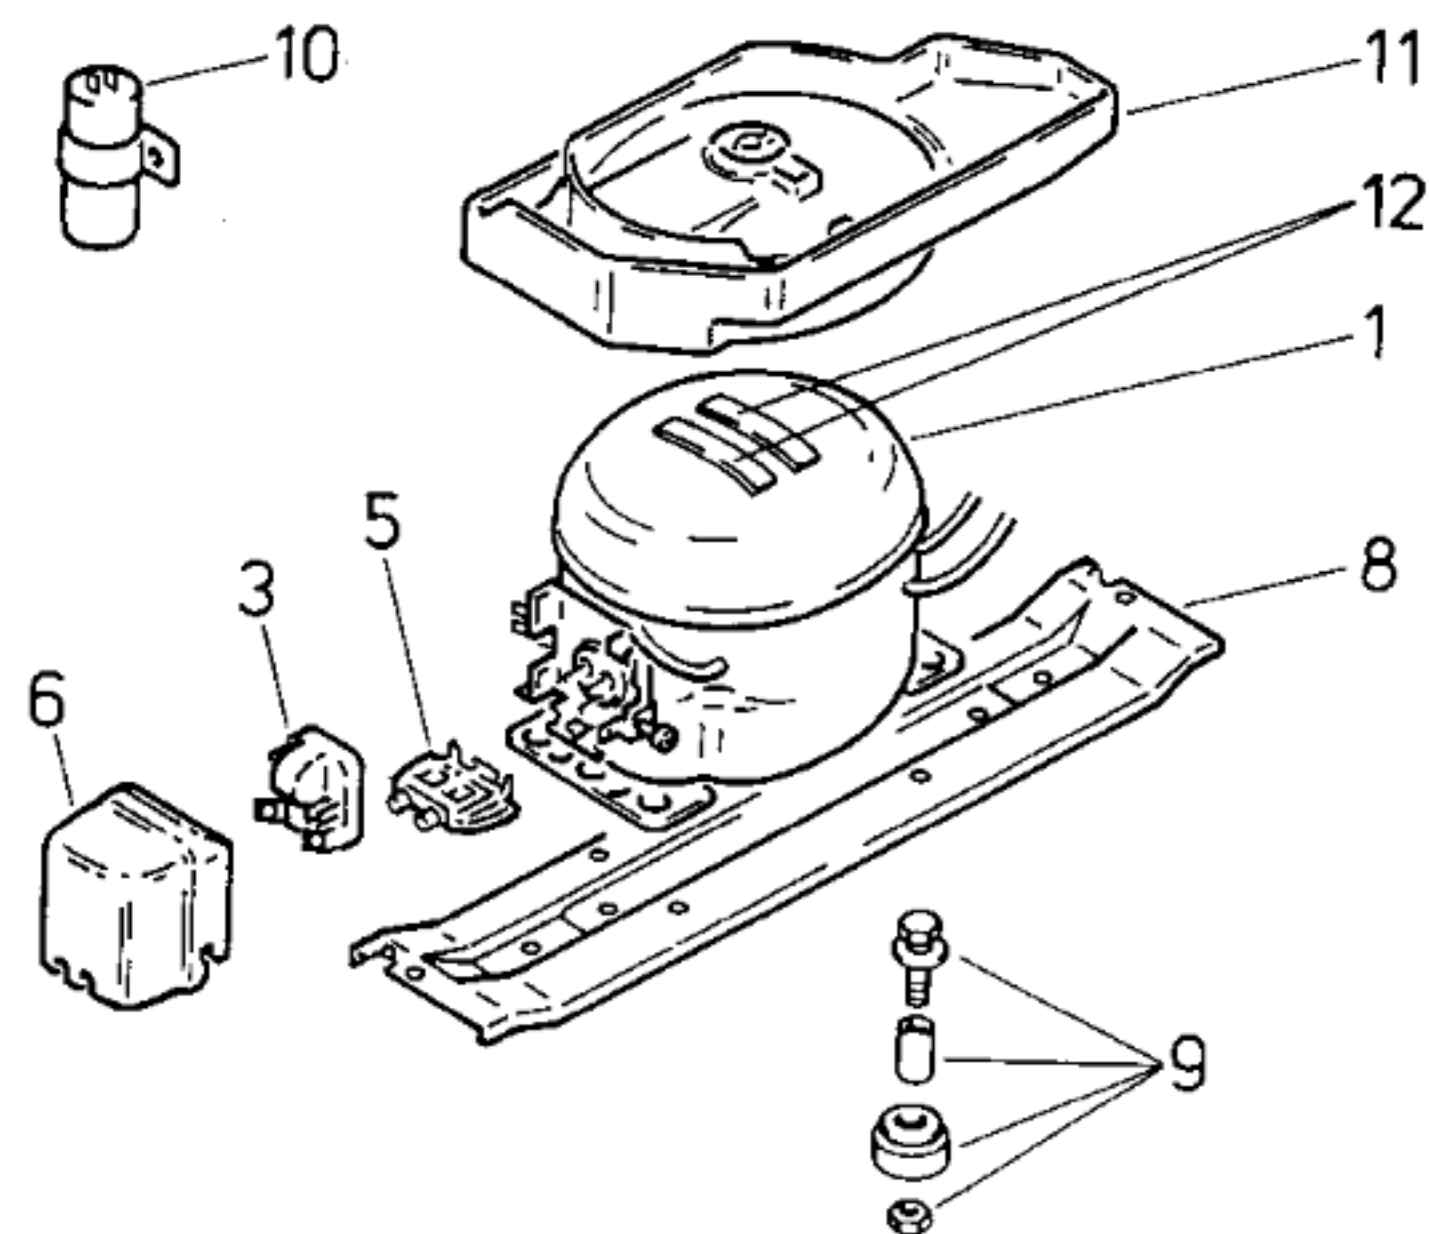

Pos.			
	Danfoss TL 5 A		
1	14 0065		
2			
3	02 0108		
4			
5	02 7310		
6	05 1413		
7			
8	27 1375		
9	05 0166		
10			
11			
12			

Verdichter/Compressor/Compresseur				
Typ/Type				
Förderleistung/Delivery/Débit	l/h			
Anlaufstrom/Starting current/Cour. de démarrage	A			
Widerstand/Resistance/Résistance	Ω			
Hi/main/prin.	Ω			
Hi/aux	Ω			
Temp.-Regler/Thermostat				
Typ/Type				
Reglerstellung/Position				
Schaltwerte/Switching values/	„ein“	°C		
Valeurs de commutation	„aus“			
(„abtauen“ od.)	„alarm“			
Fullmenge/Fill.quantity/Charge	R12	g		
Anschlußwert/Conn.load/Puiss. connectée	W			
Heizung/Heater/Chauffage				
Widerstand/Resistance/Resistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			