




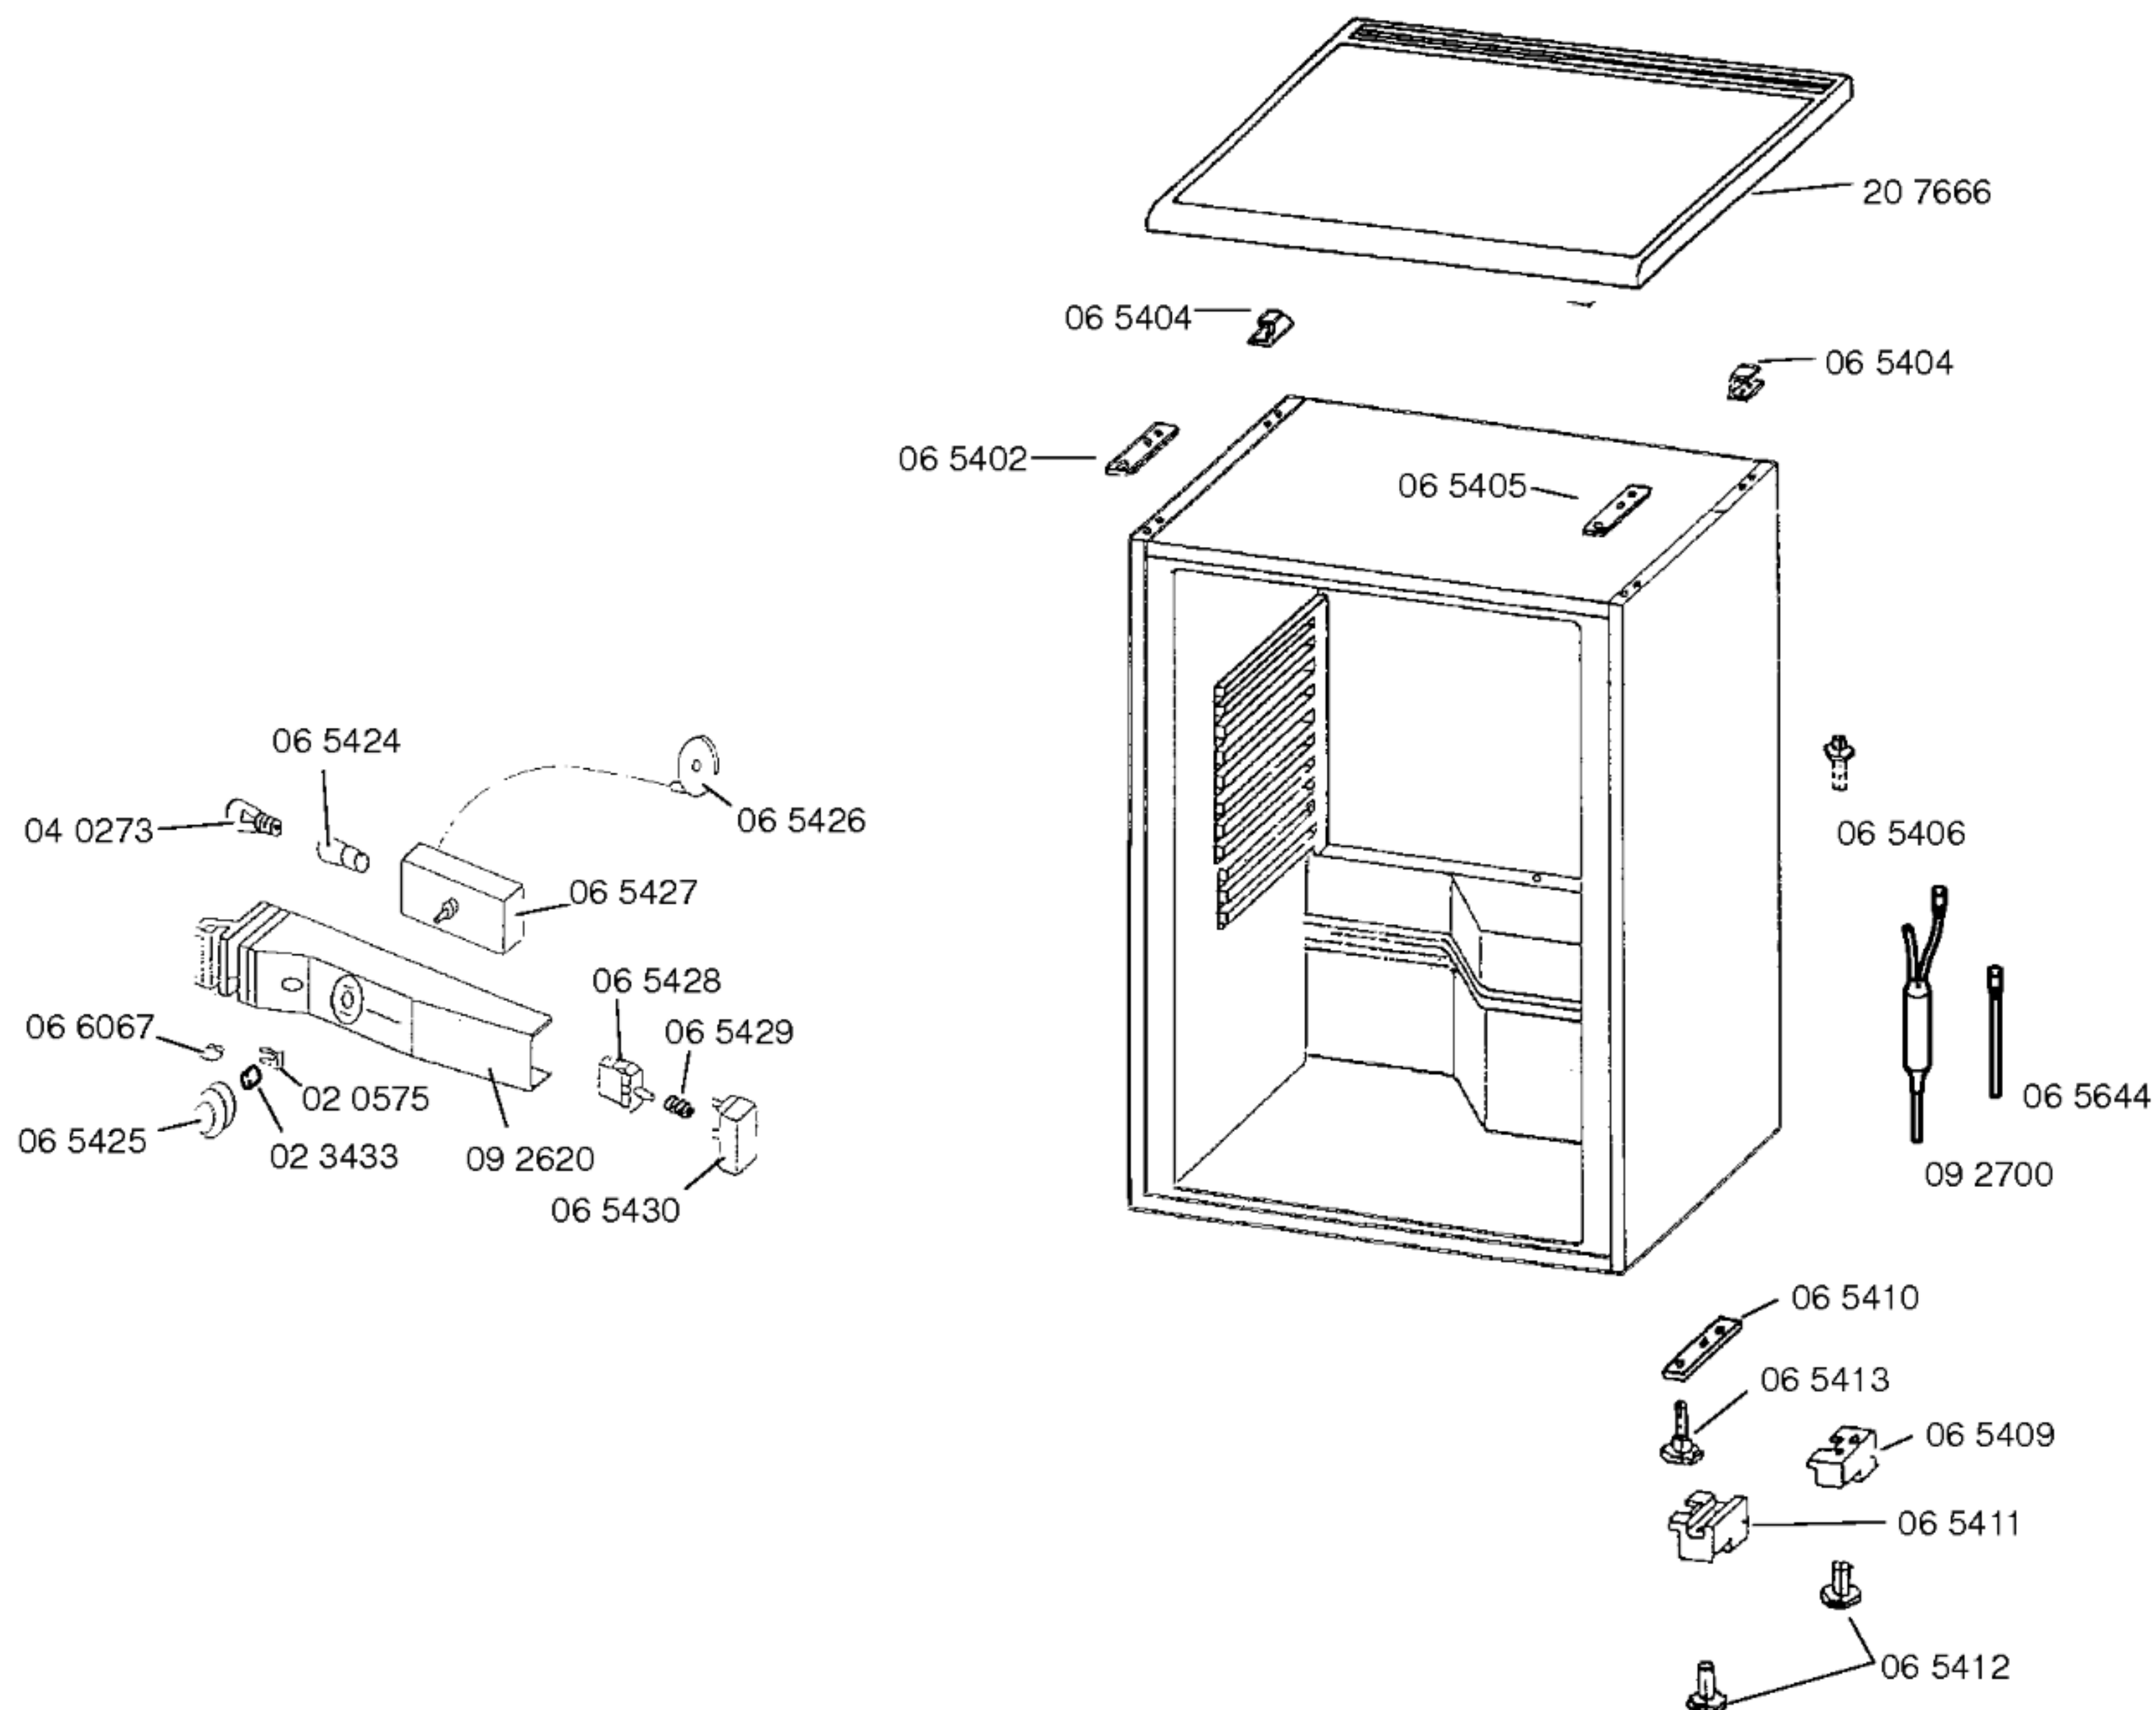

Gebrauchsanweisung
51 5687
(D,GB,I,F,E,NL)

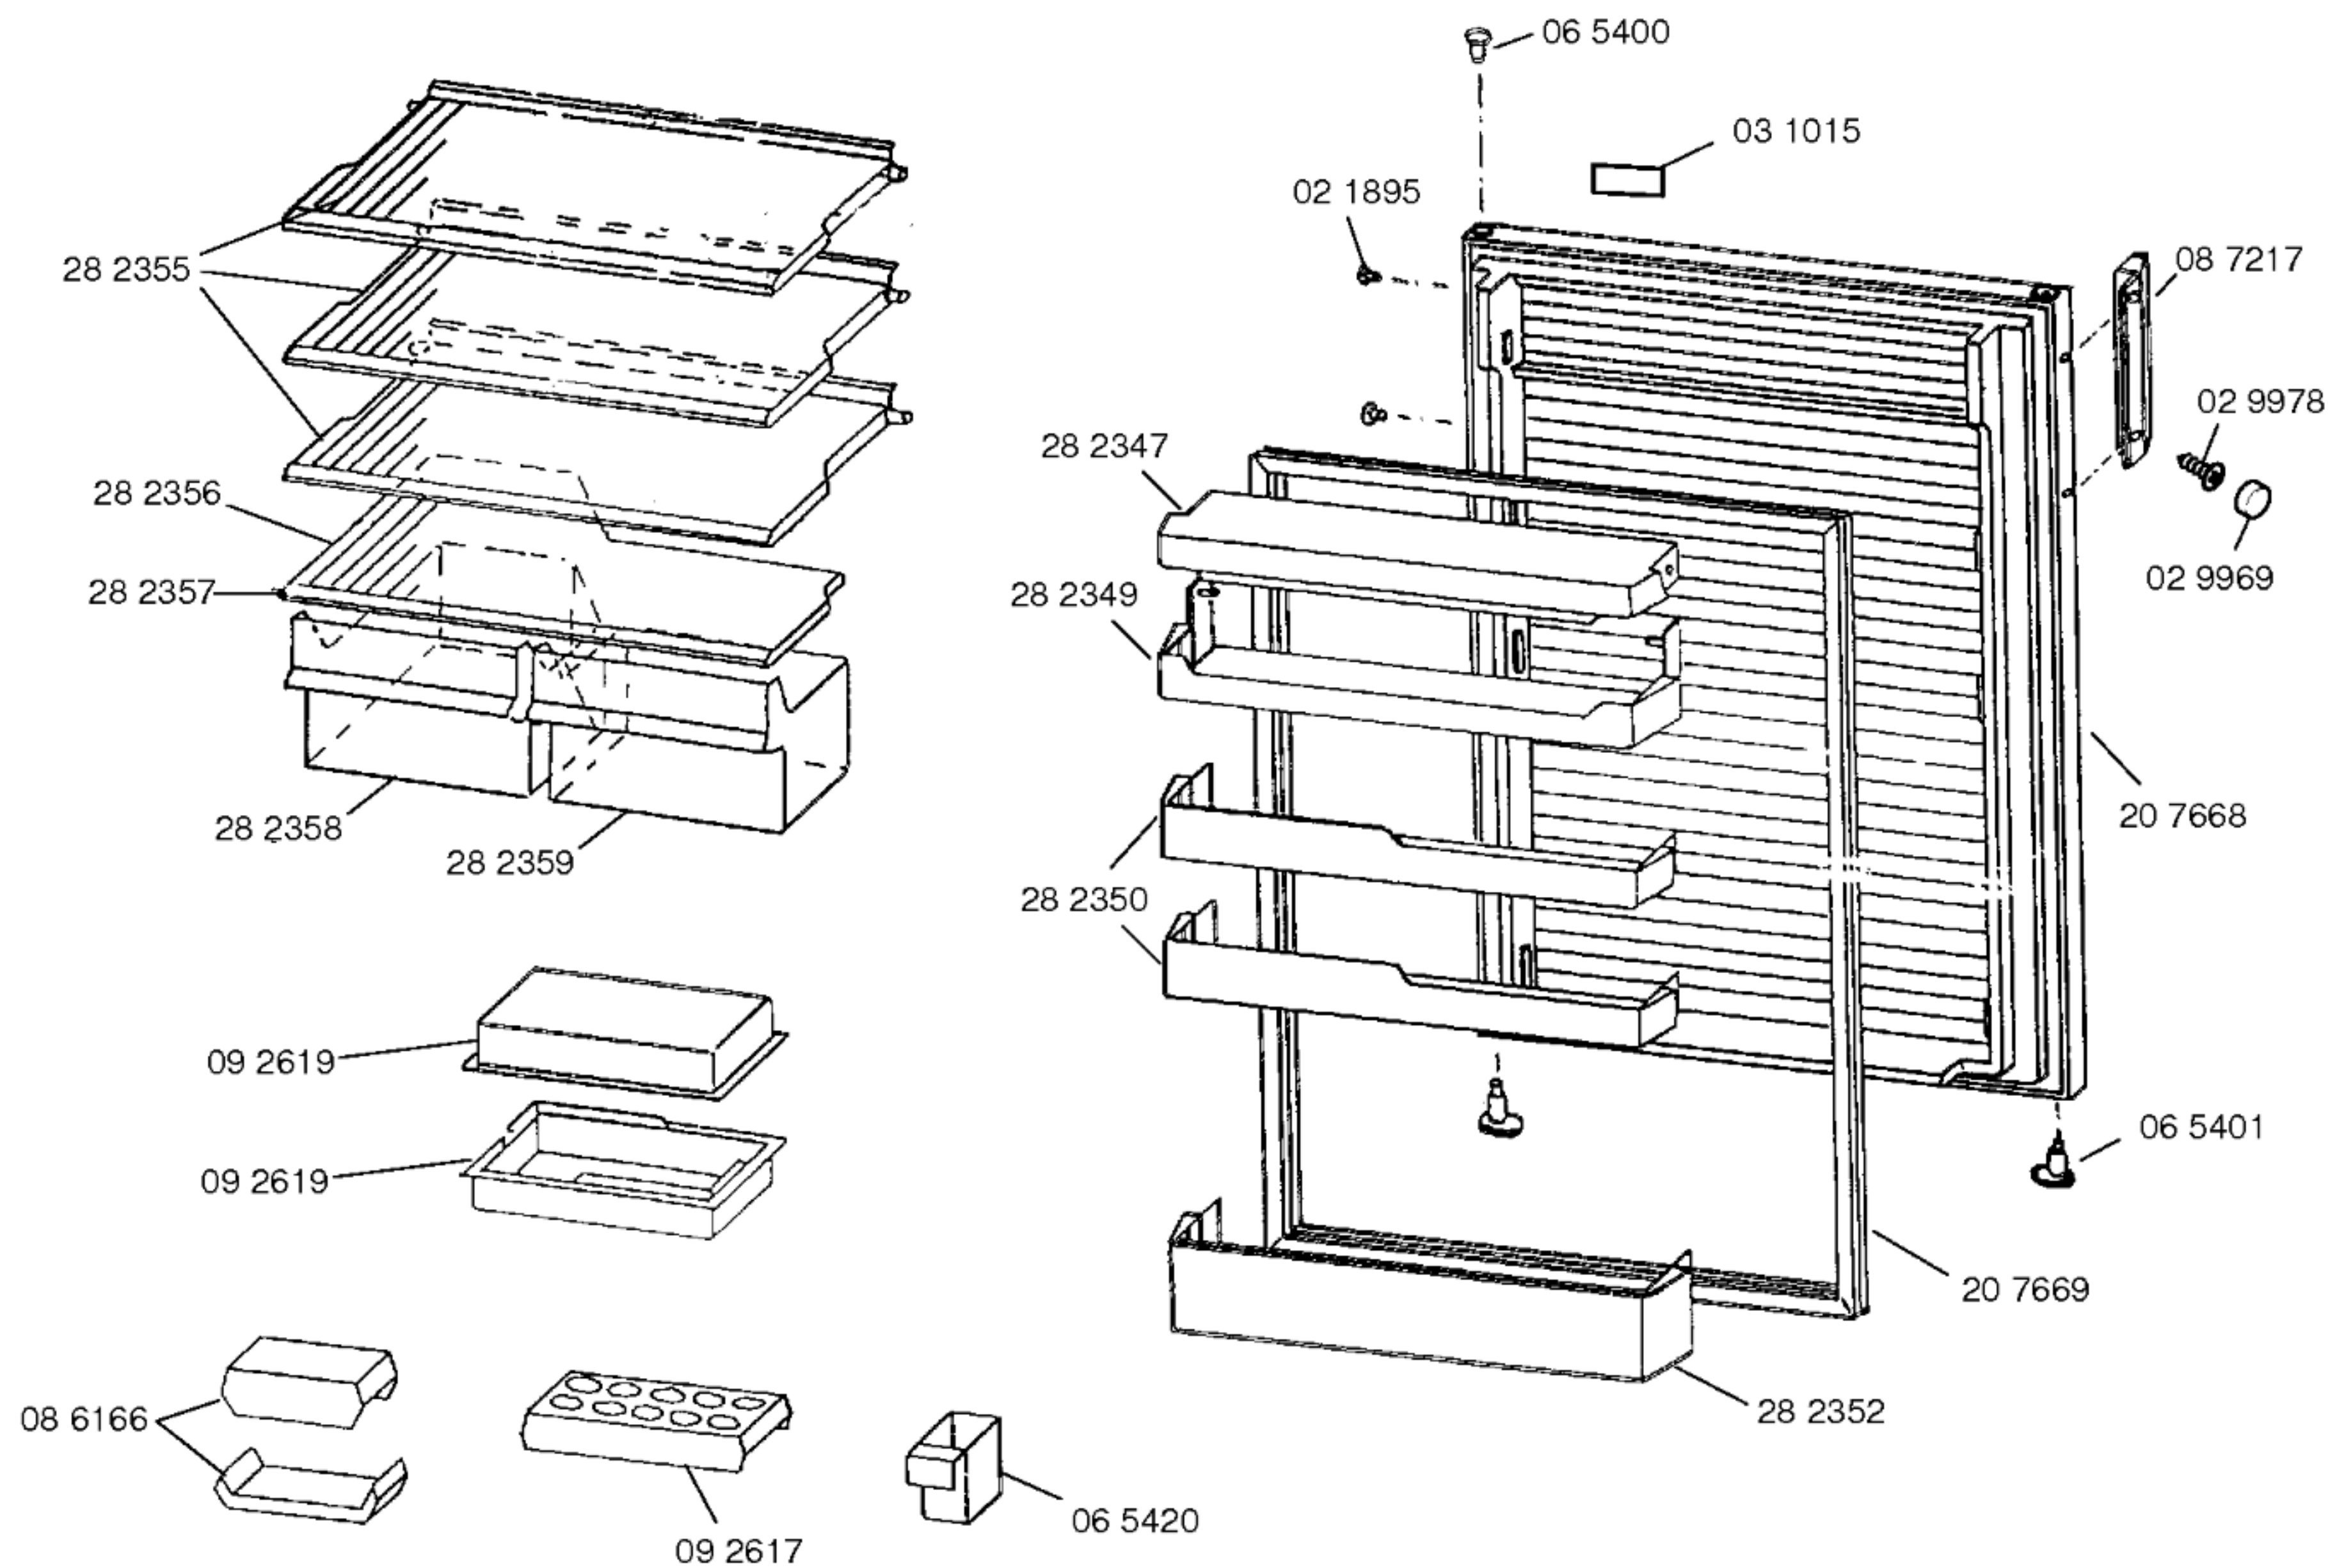

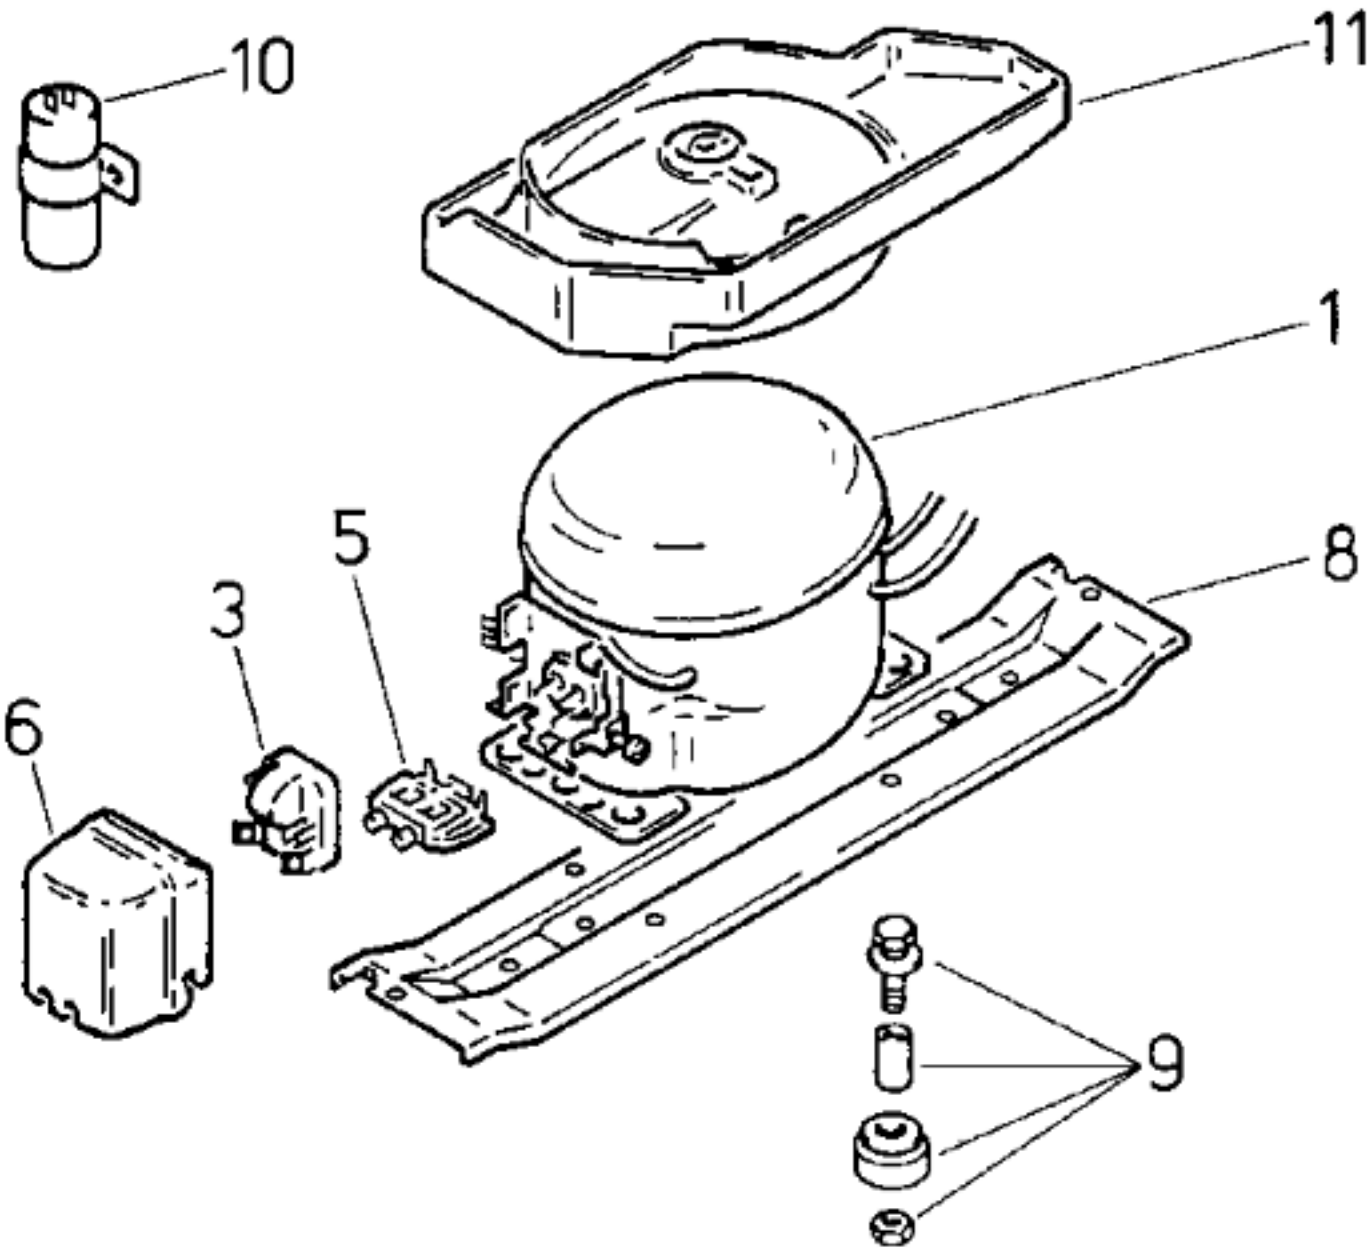

Pos.			
	Danfoss		
	TL 3 A		
1	14 0080		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8			
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL3A		
Förderleistung/Delivery/Débit		l/h	563	
Anlaufstrom/Starting current/Cour de démarrage		A	7,2	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	31,4	
		Hi/aux Ω	15,5	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57		
Reglerstellung/Position		warm kalt		
Schaltwerte/Switching values/ Valeurs de commutation		$^{\circ}\text{C}$	+4	+4
		„ein“	-16	-28,5
		„aus“ („abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	80
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		