


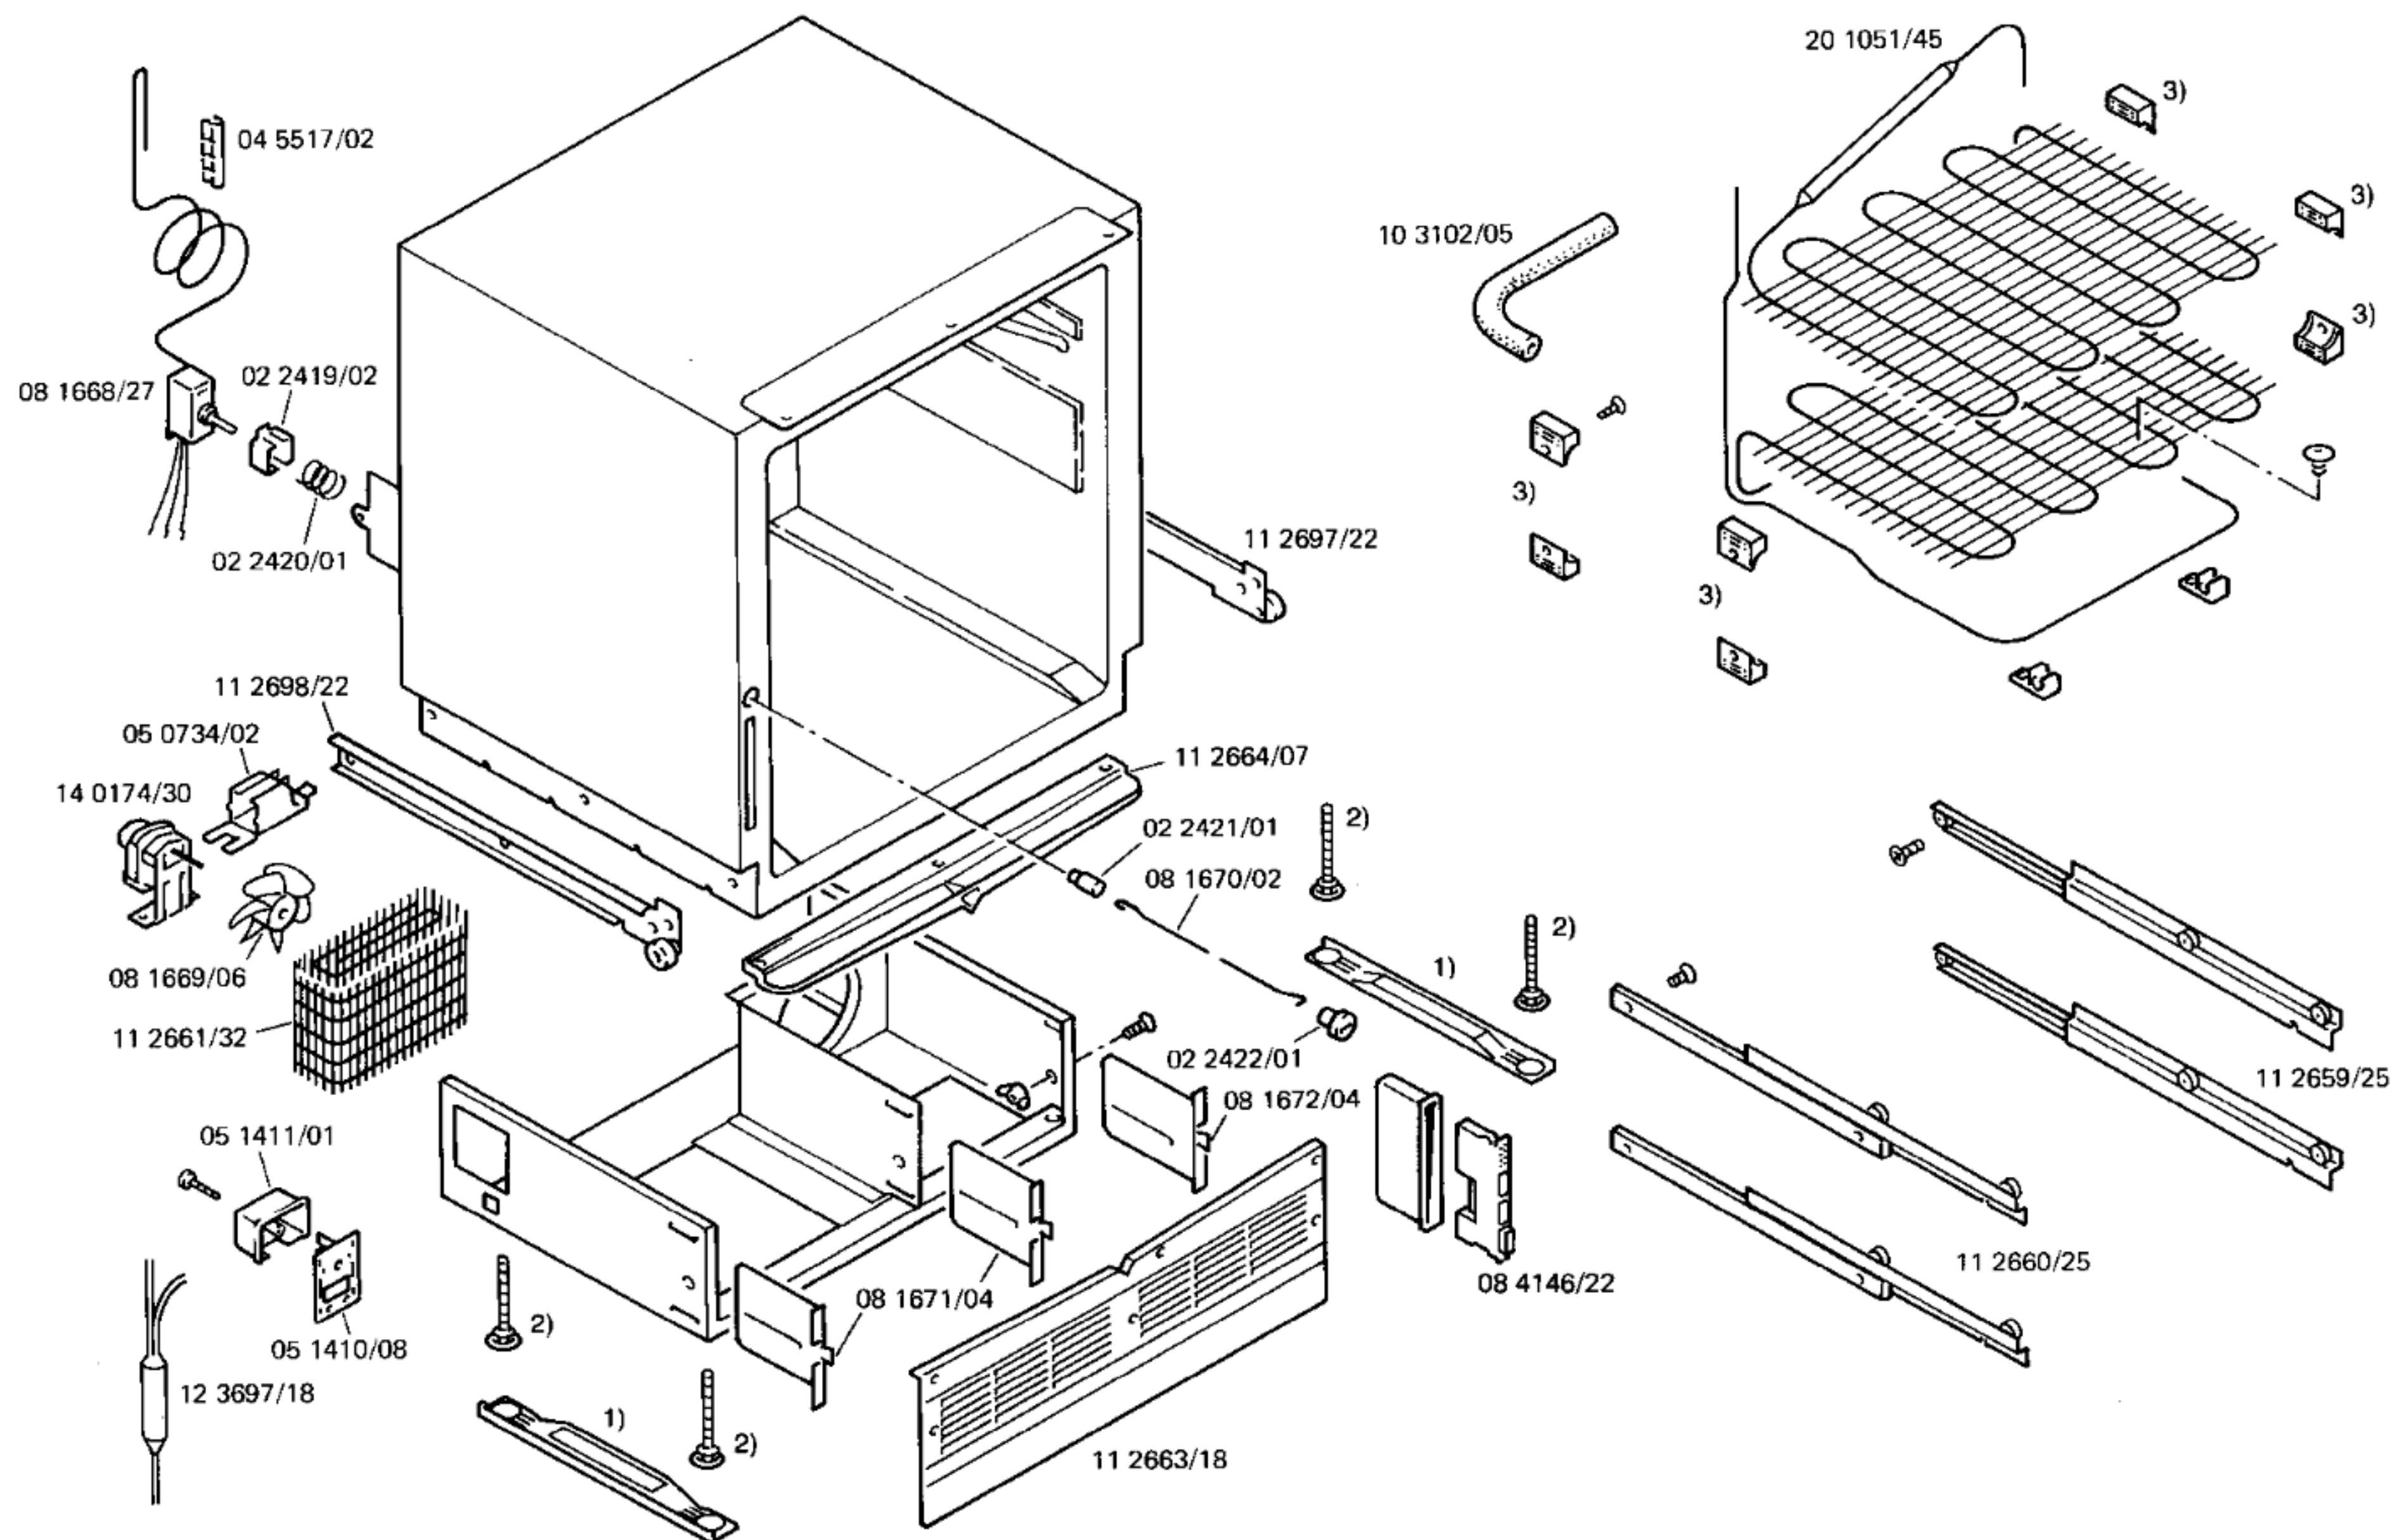



51 1329/00
Gebrauchsanweisung
51 1315/00
Montageanleitung

1) 11 2700/02

2) 08 0424/02

3) 02 2423/01

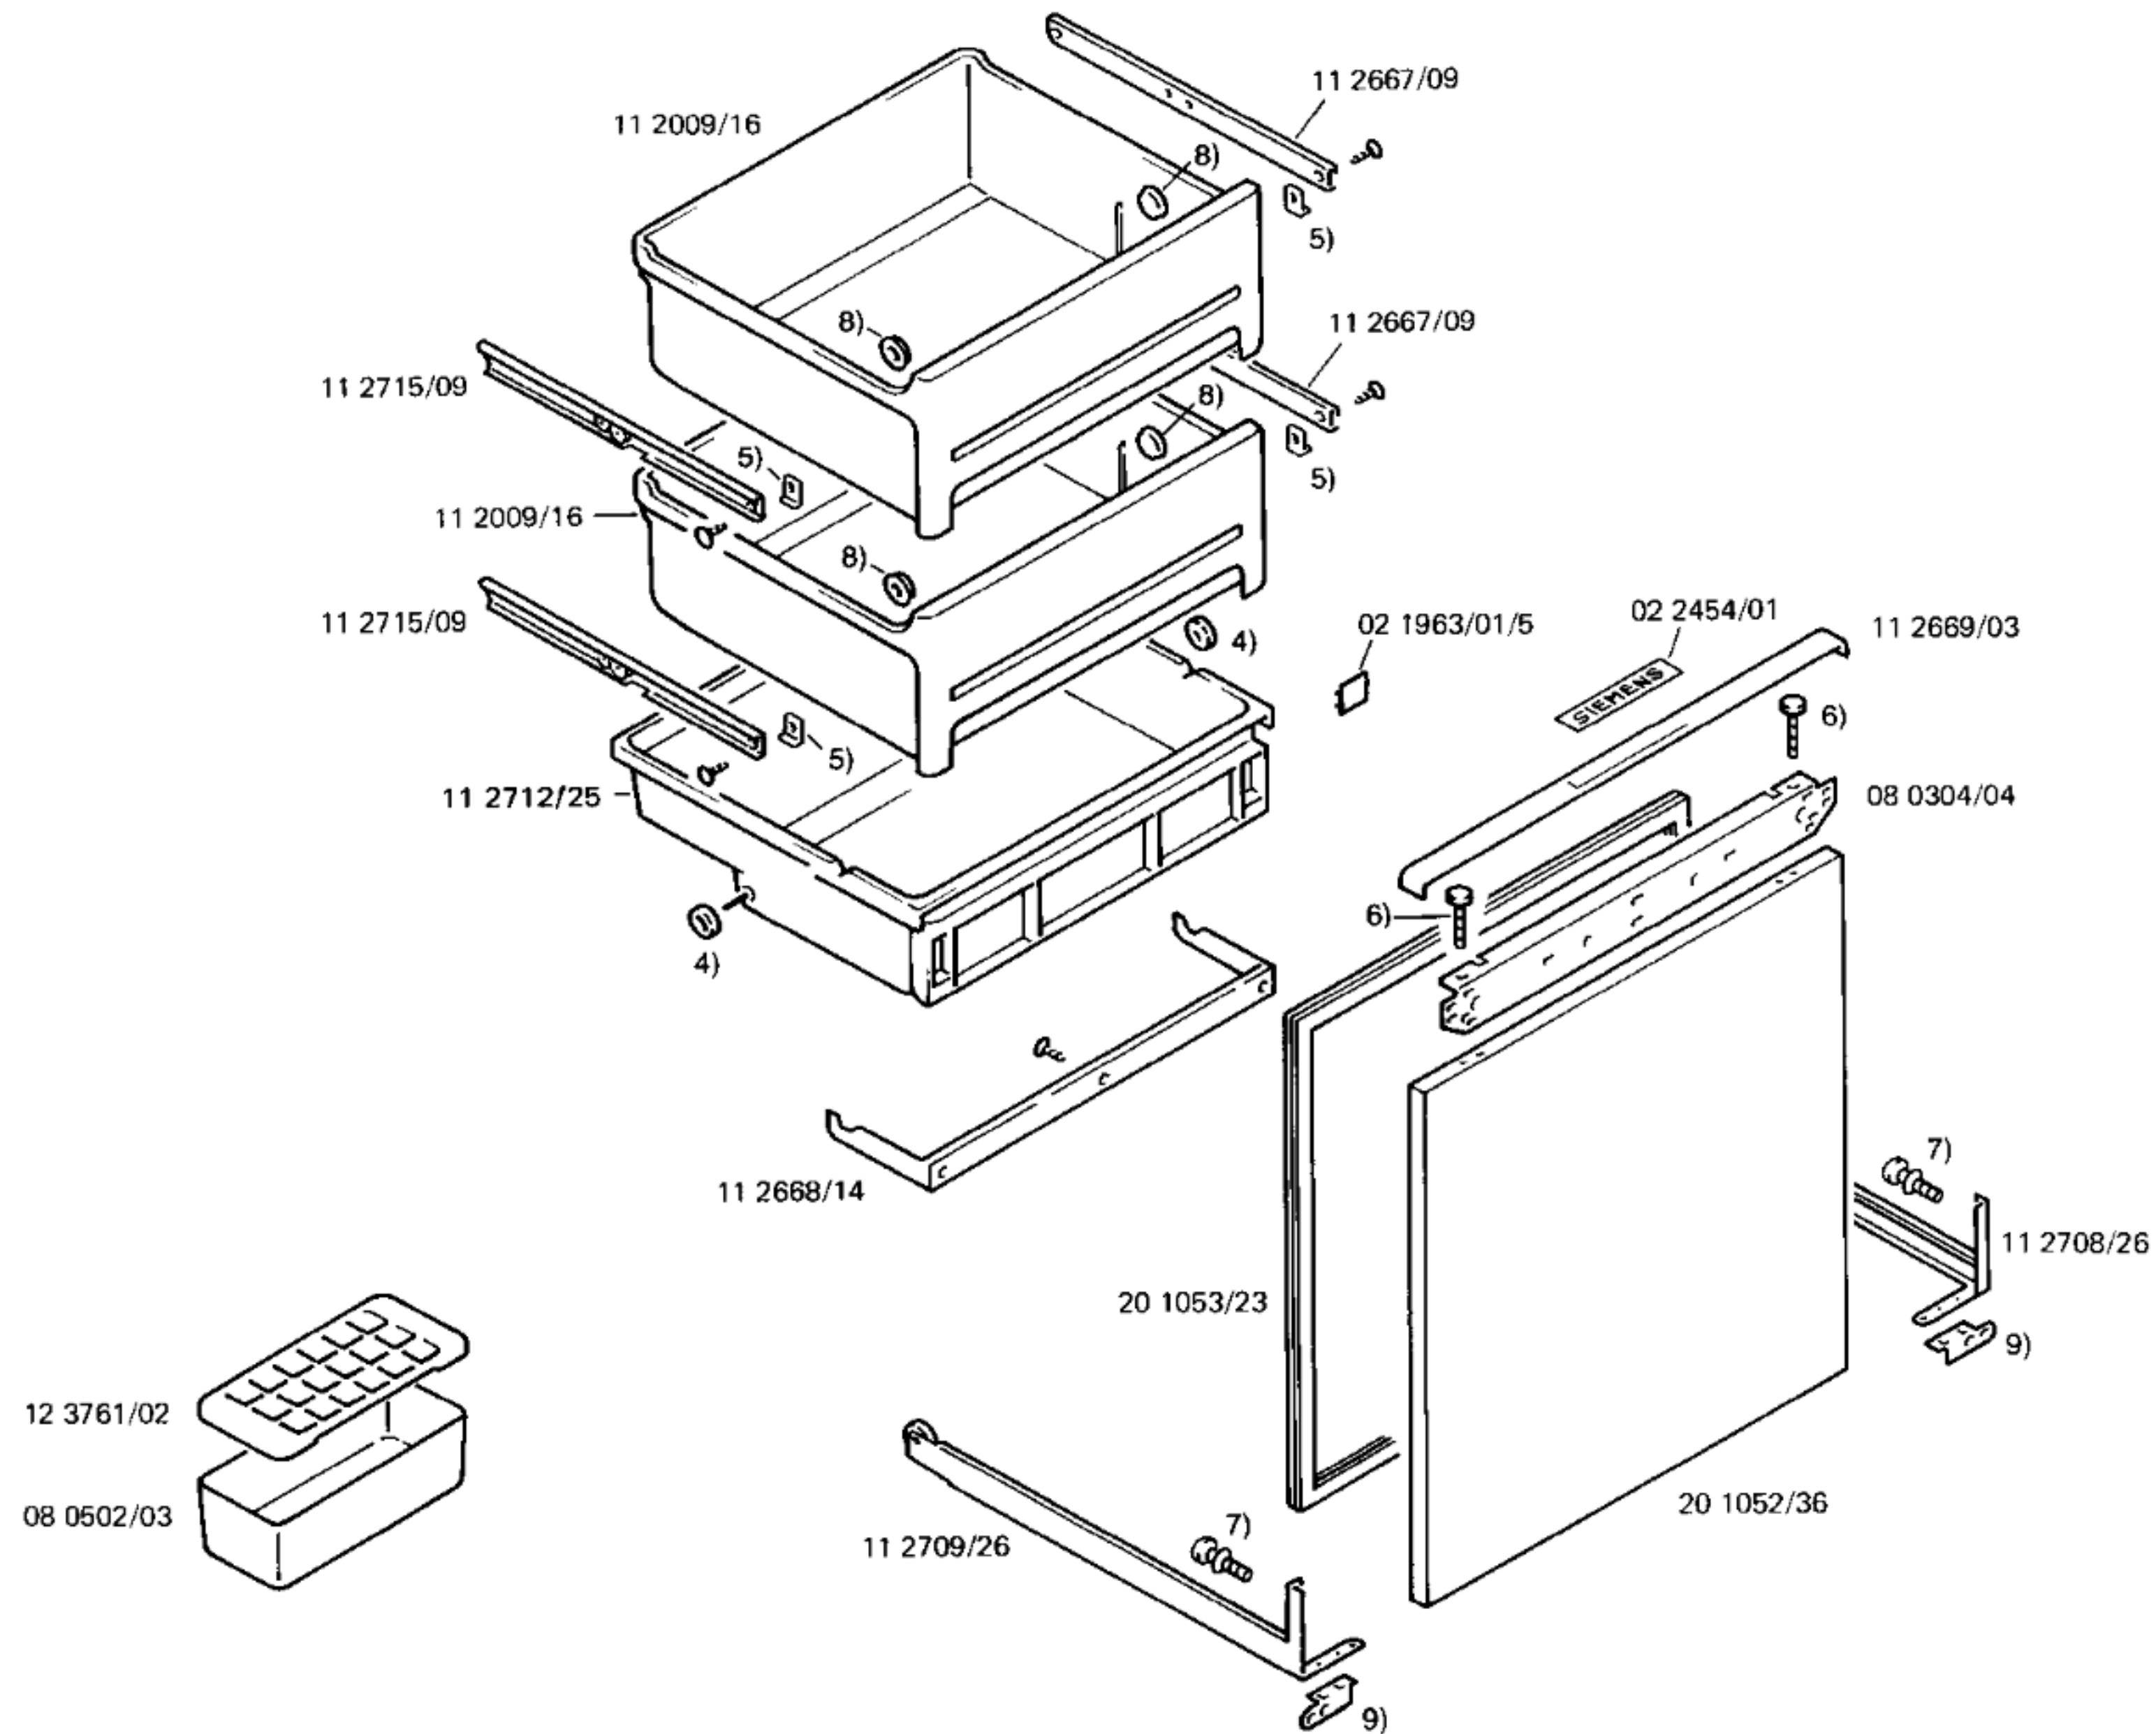

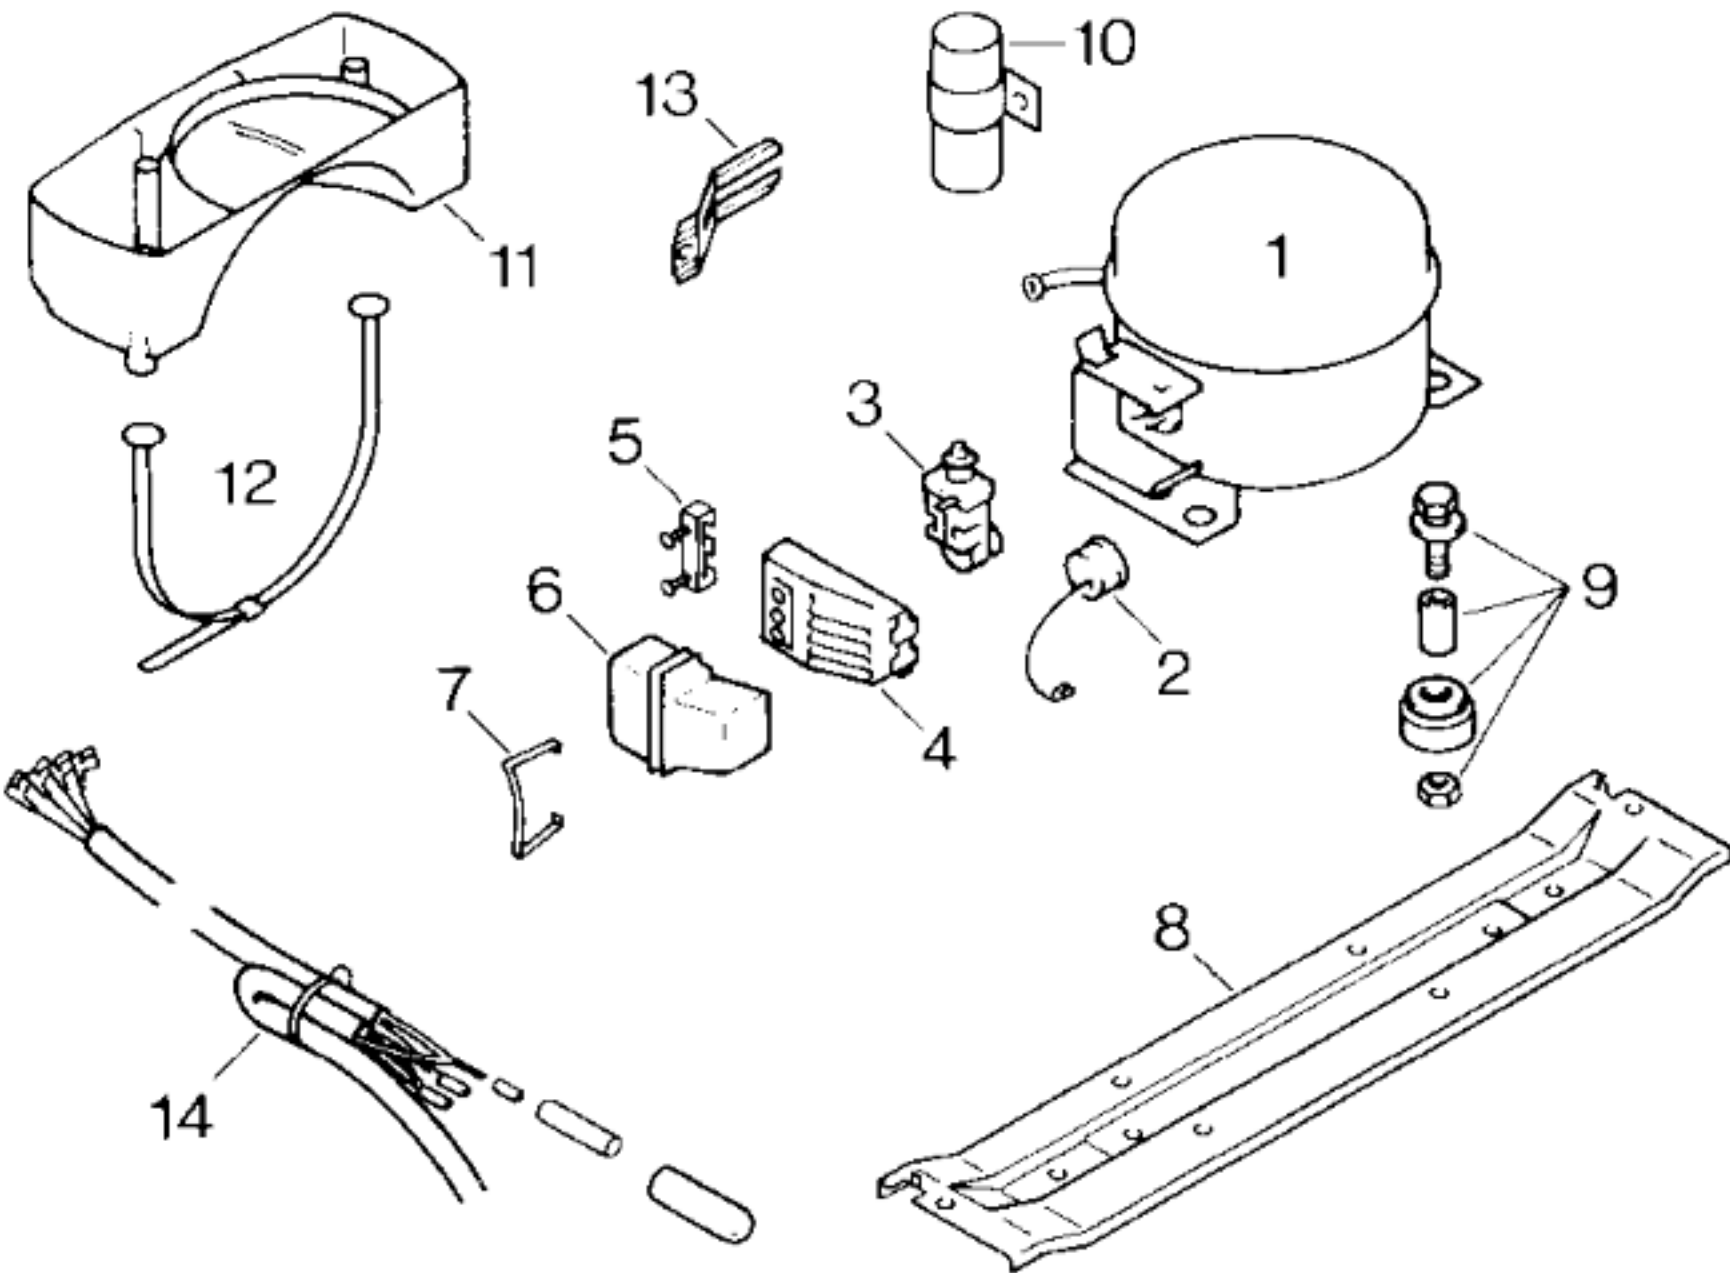

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Aspera		
Typ/Type		BY 1112 A		
Förderleistung/Delivery/Débit		l/h	1060	
Anlaufstrom/Starting current/Cour. de démarrage		A	8,5	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	17,9
		Hi/aux	Ω	43,7
Temp.-Regler/Thermostat		M & J		
Typ/Type		TF 57 SF 2		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		„ein“	°C	-25 -17
Valeurs de commutation		„aus“		-37 -27
		(„abtauen“ od.)	„alarm“	-20 -13
Füllmenge/Fill.quantity/Charge		R12	g	150
Anschlußwert/Conn.load/Puiss. connectée		W		130
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.				
	Aspera			
1	14 0166/45			
2	02 2337/16			
3	02 2342/16			
4	05 1748/06			
5				
6	05 1746/01			
7	02 2339/01			
8				
9	05 0166/05			
10				
11				
12				
13				
14				