



51 1948
EU1
Gebrauchsanweisung
(D,GB,F,I)

- 1) 02 6828
- 2) 01 2418
- 3) 02 6824
- 4) 02 6815
- 5) 02 6823
- 6) 01 8901
- 7) 05 4795

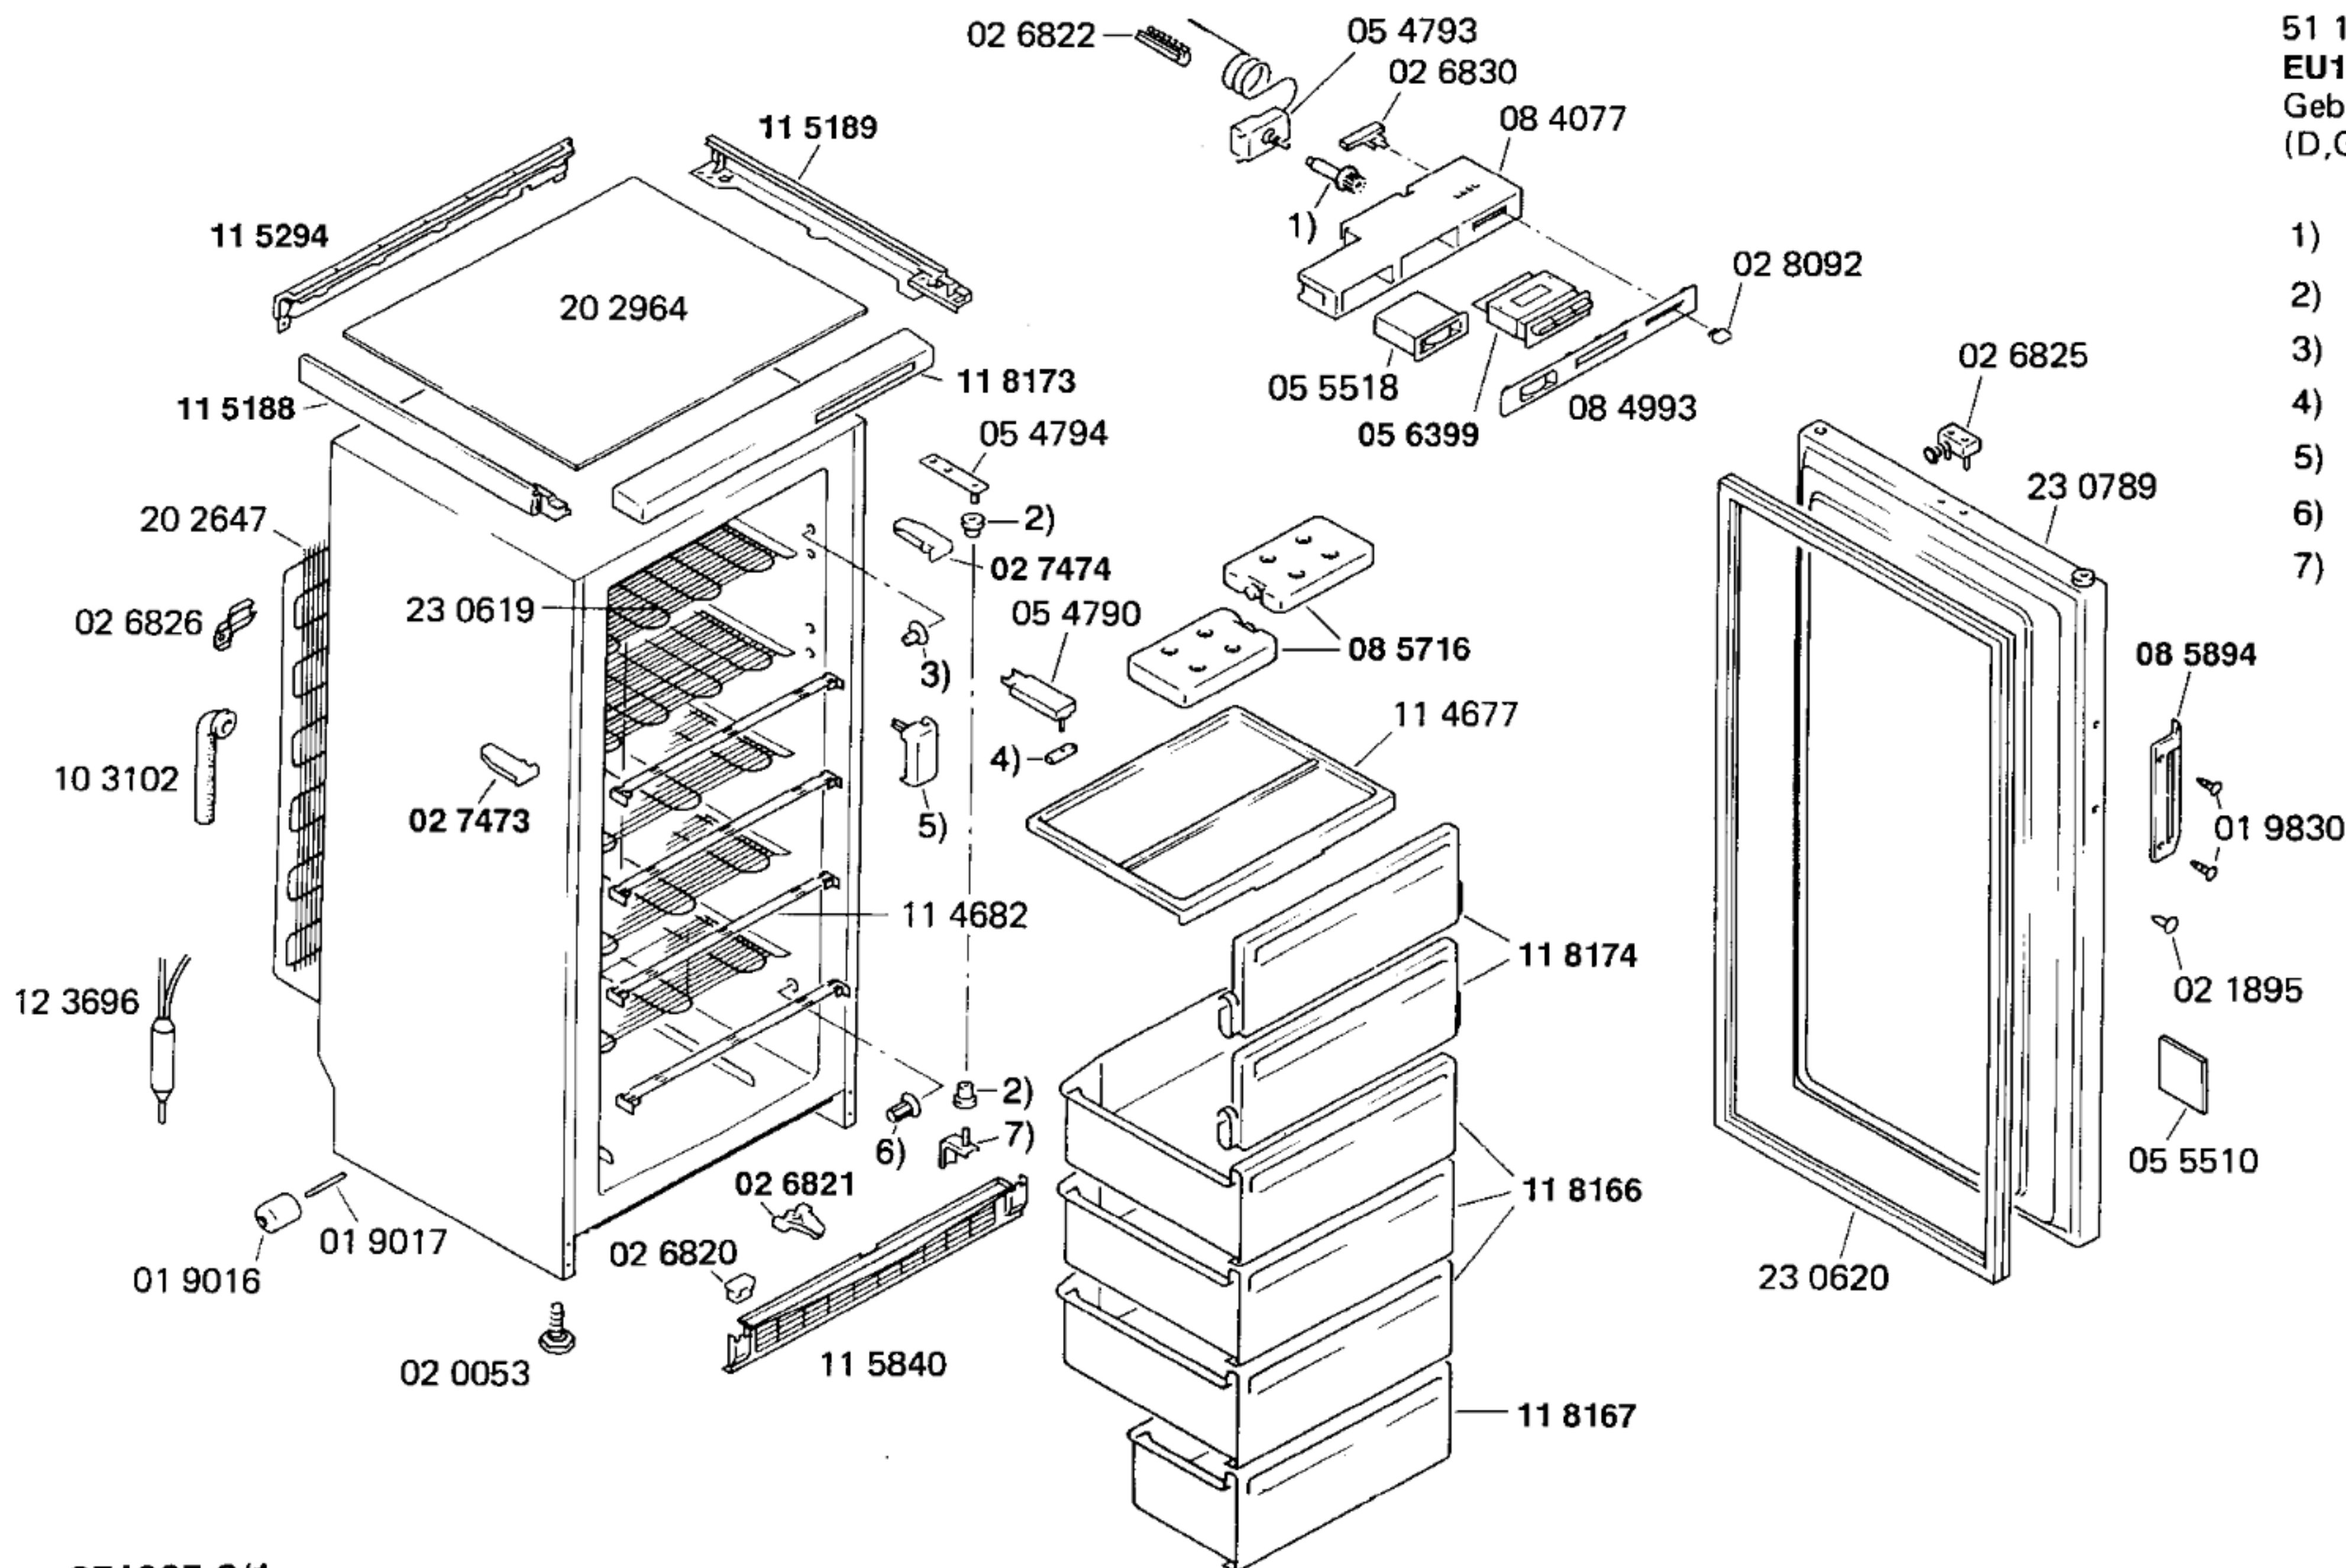

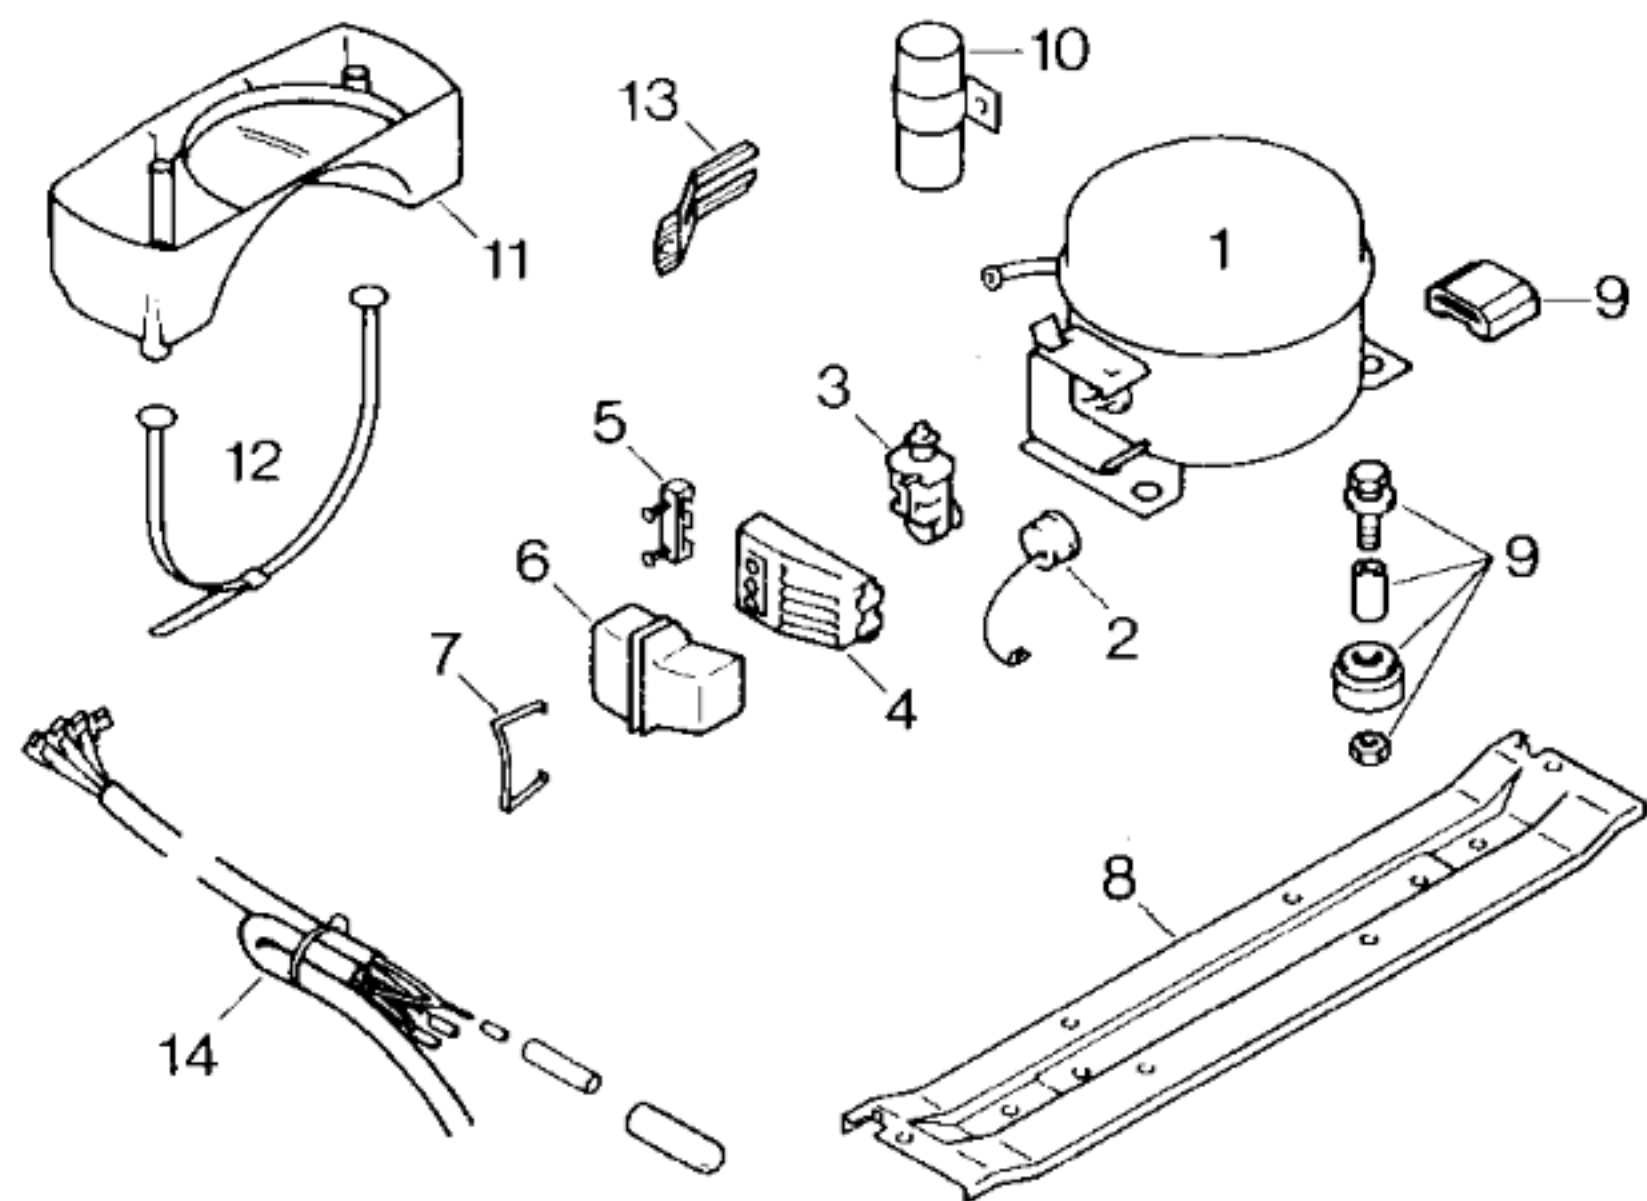

Pos.	Danfoss	
1	14 0157	
2		
3	02 0108	
4		
5	02 1361	
6	05 1413	
7		
8		
9		
10		
11		
12		
13		
14		

TECHNISCHE DATEN / TECHNICAL DATA / DONNÉES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		FR 8,5 A		
Förderleistung/Delivery/Débit	l/h	1430		
Anlaufstrom/Starting current/Cour. de démarrage	A	10,3		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	12,2	
	Hi/aux	Ω	13,7	
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		077 B 2054		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/	„ein“	°C	- 24	- 16
Valeurs de commutation	„aus“		- 34	- 24
	(„abtauen“ od.)		- 19	- 12
Füllmenge/Fill.quantity/Charge	R12	g	185	
Anschlußwert/Conn.load/Puiss. connectée		W	150	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		