



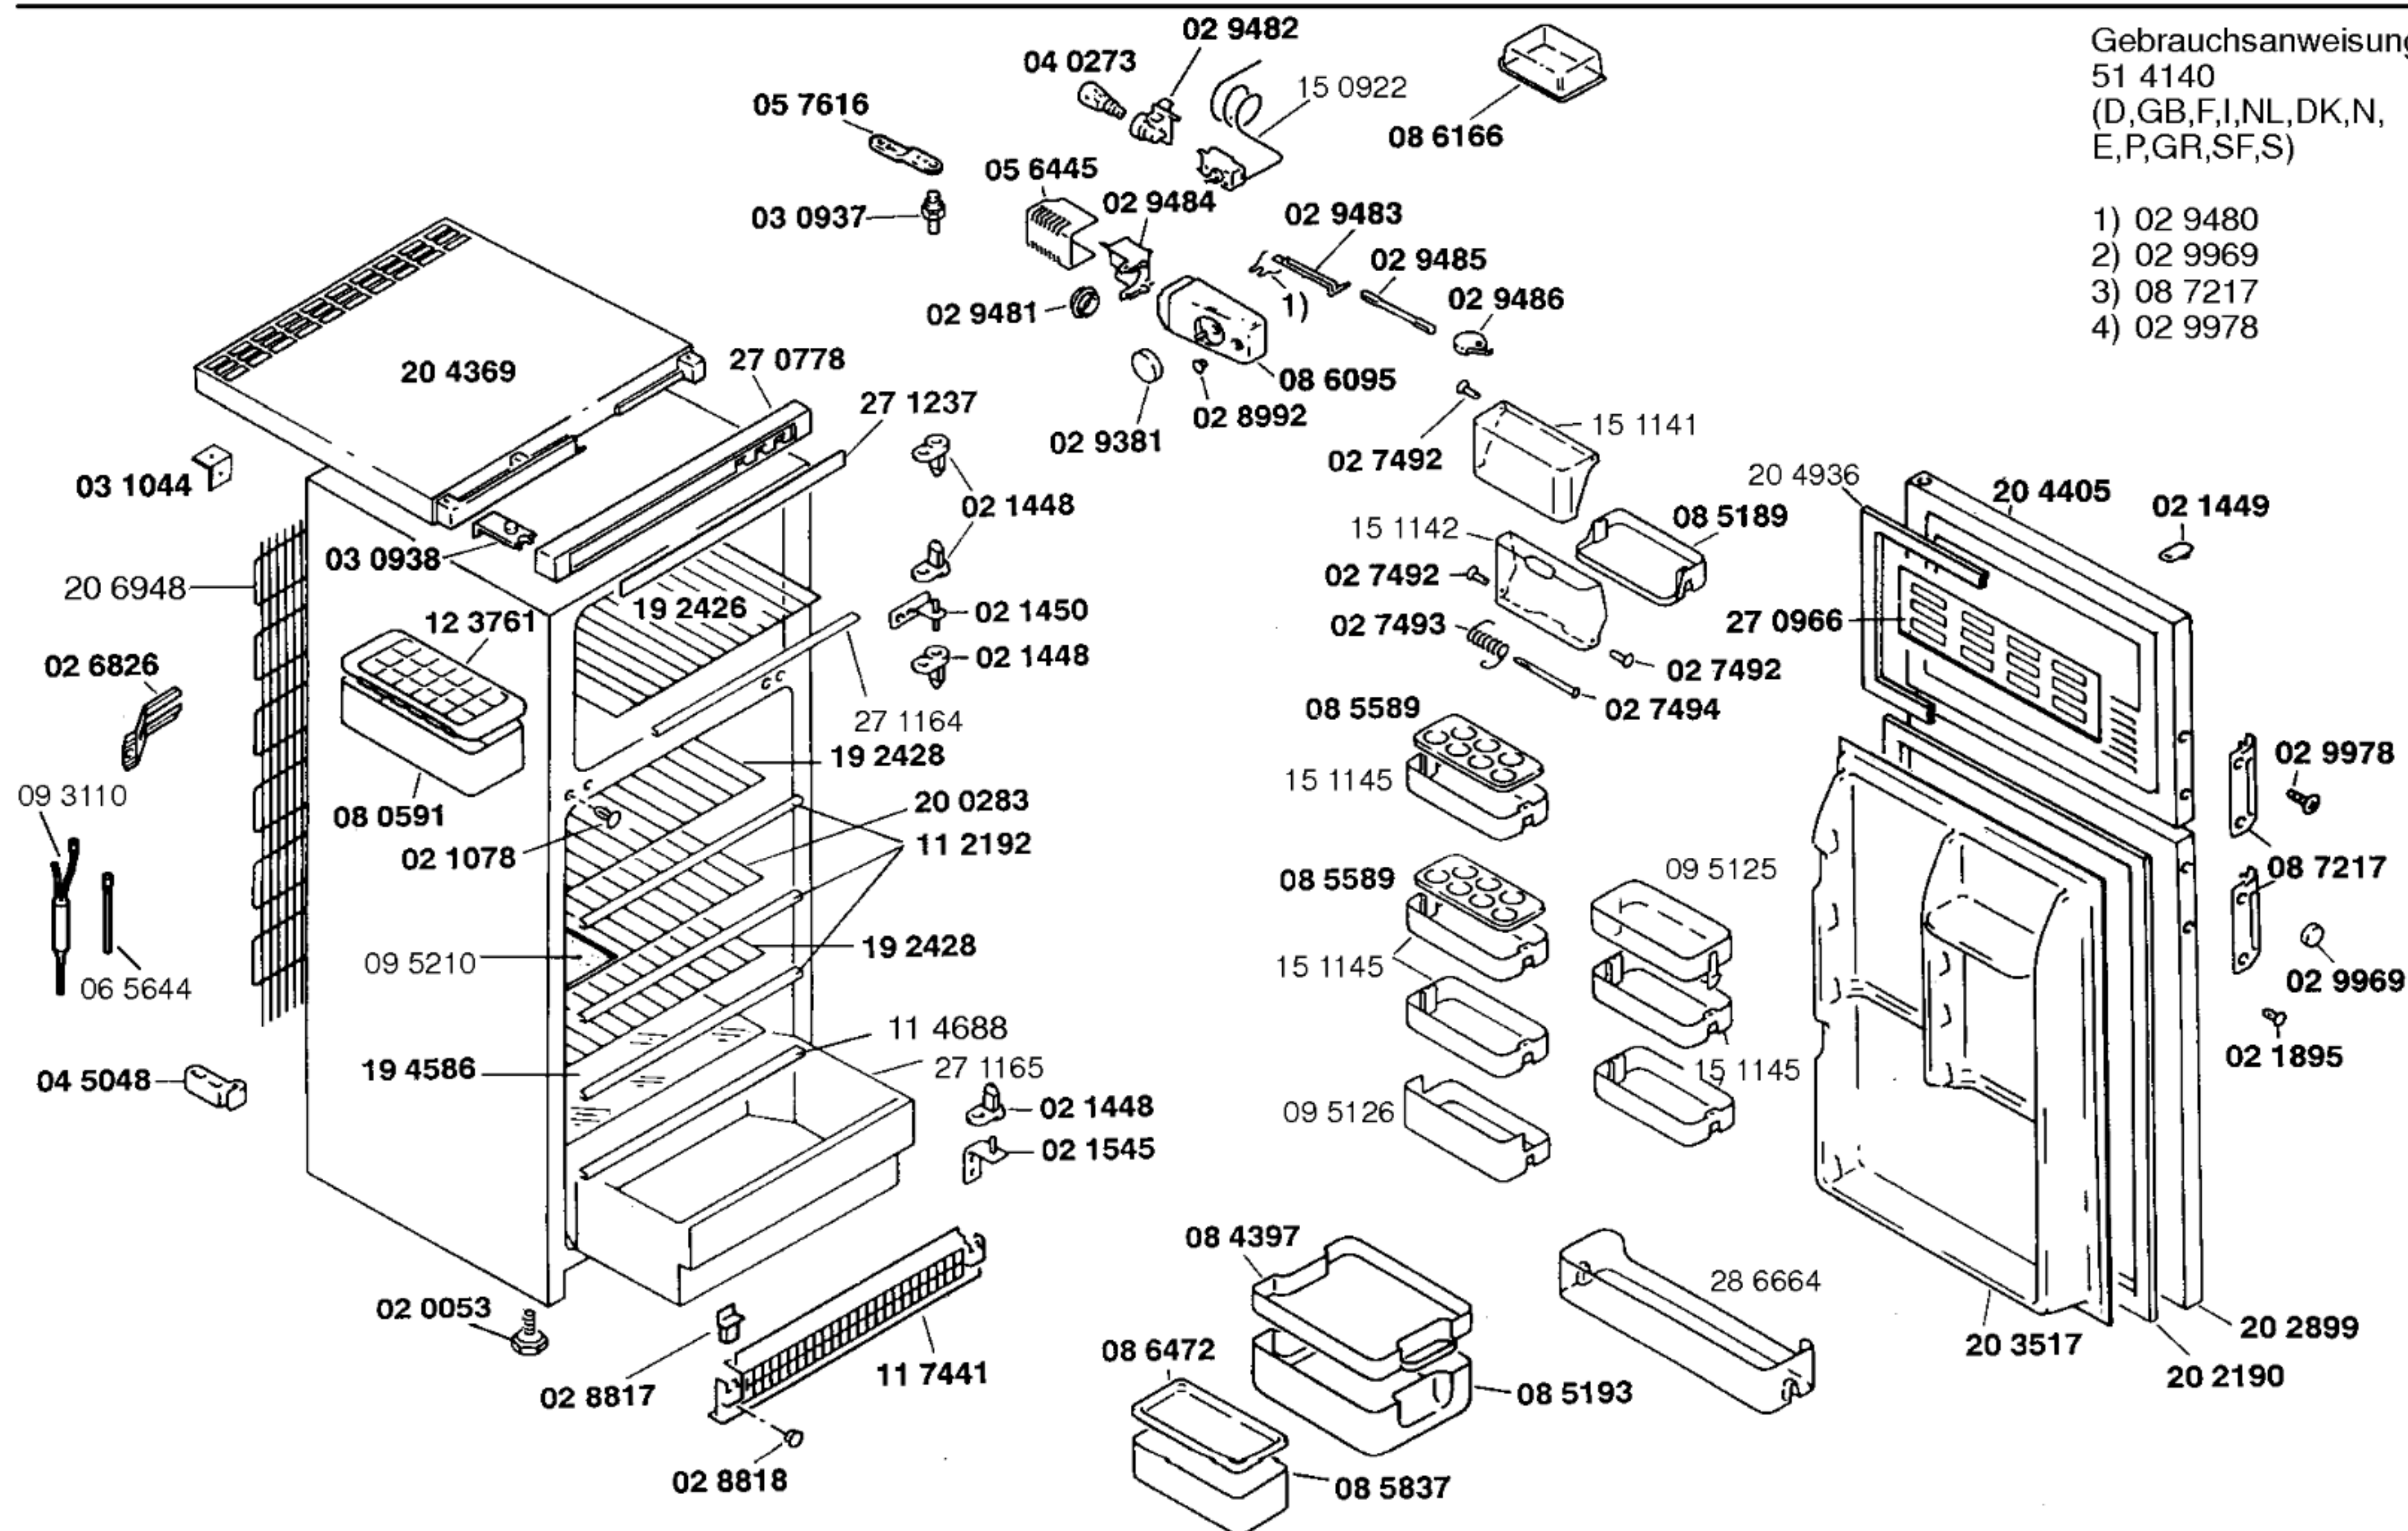

Gebrauchsanweisung
51 4140
(D,GB,F,I,NL,DK,N,
E,P,GR,SF,S)

- 1) 02 9480
- 2) 02 9969
- 3) 08 7217
- 4) 02 9978

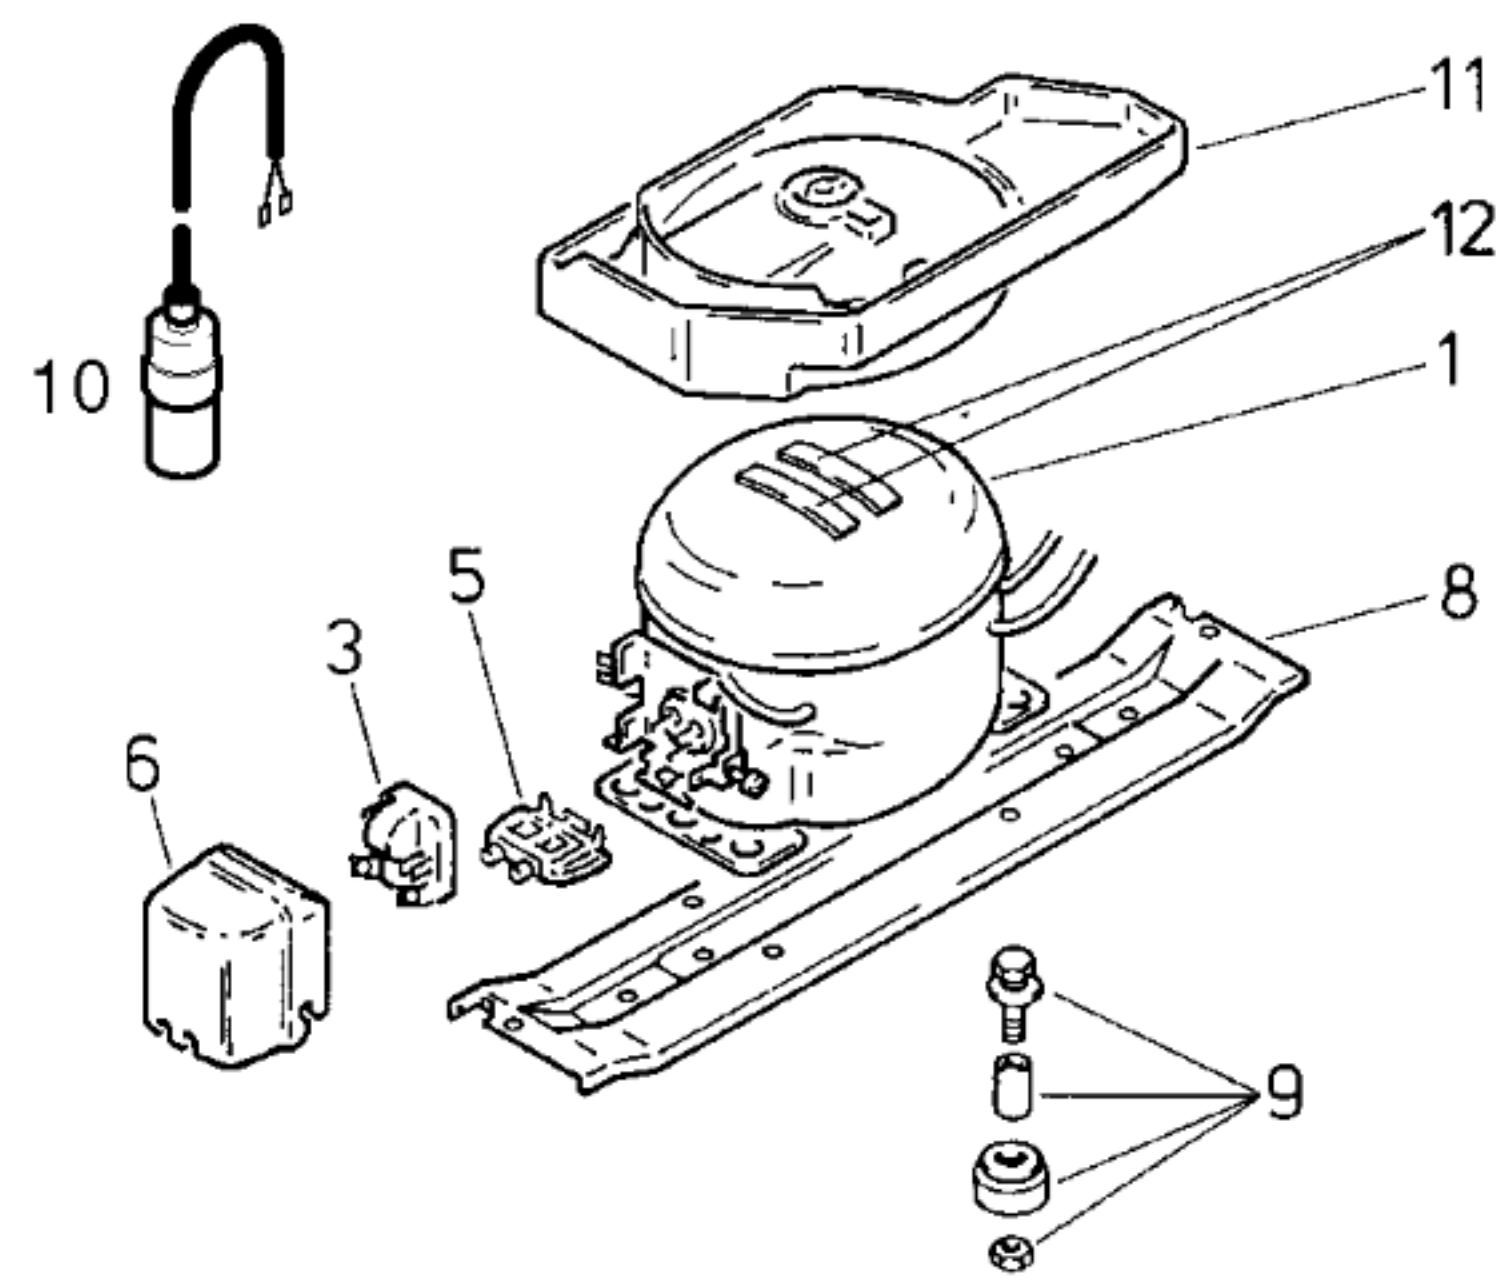

Pos.	V01	V02	
	Danfoss	Danfoss	
	NLE7F	NL7F	
1	14 1279	14 1255	
2			
3	15 1055	15 1055	
4			
5	15 1053	15 0760	
6	15 1072	15 1072	
7			
8	11 1567	11 1567	
9	05 0166	05 0166	
10			
11	28 1828	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NLE7F	NL7F	
Förderleistung/Delivery/Débit	l/h	1314	1314	
Anlaufstrom/Starting current/Cour de démarrage	A	10,5	10,5	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	14,9	13,3	
	Hi/aux Ω	17,9	14,1	
Temp.-Regler/Thermostat		Danfoss		
Typ/Type	Ranco	077 B 6268		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“	+5	+5	
Valeurs de commutation	„aus“	-28	-10	
	(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge		R134a	g	170
Anschlußwert/Conn.load/Puiss. connectée		W		150
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			