



Gebrauchsanweisung
51 4778
(D,GB,F,I,NL)
Montageanleitung
51 4220
(D,GB,F,I,NL,DK,N,SF,E,S)

Schraubensatz
08 4136

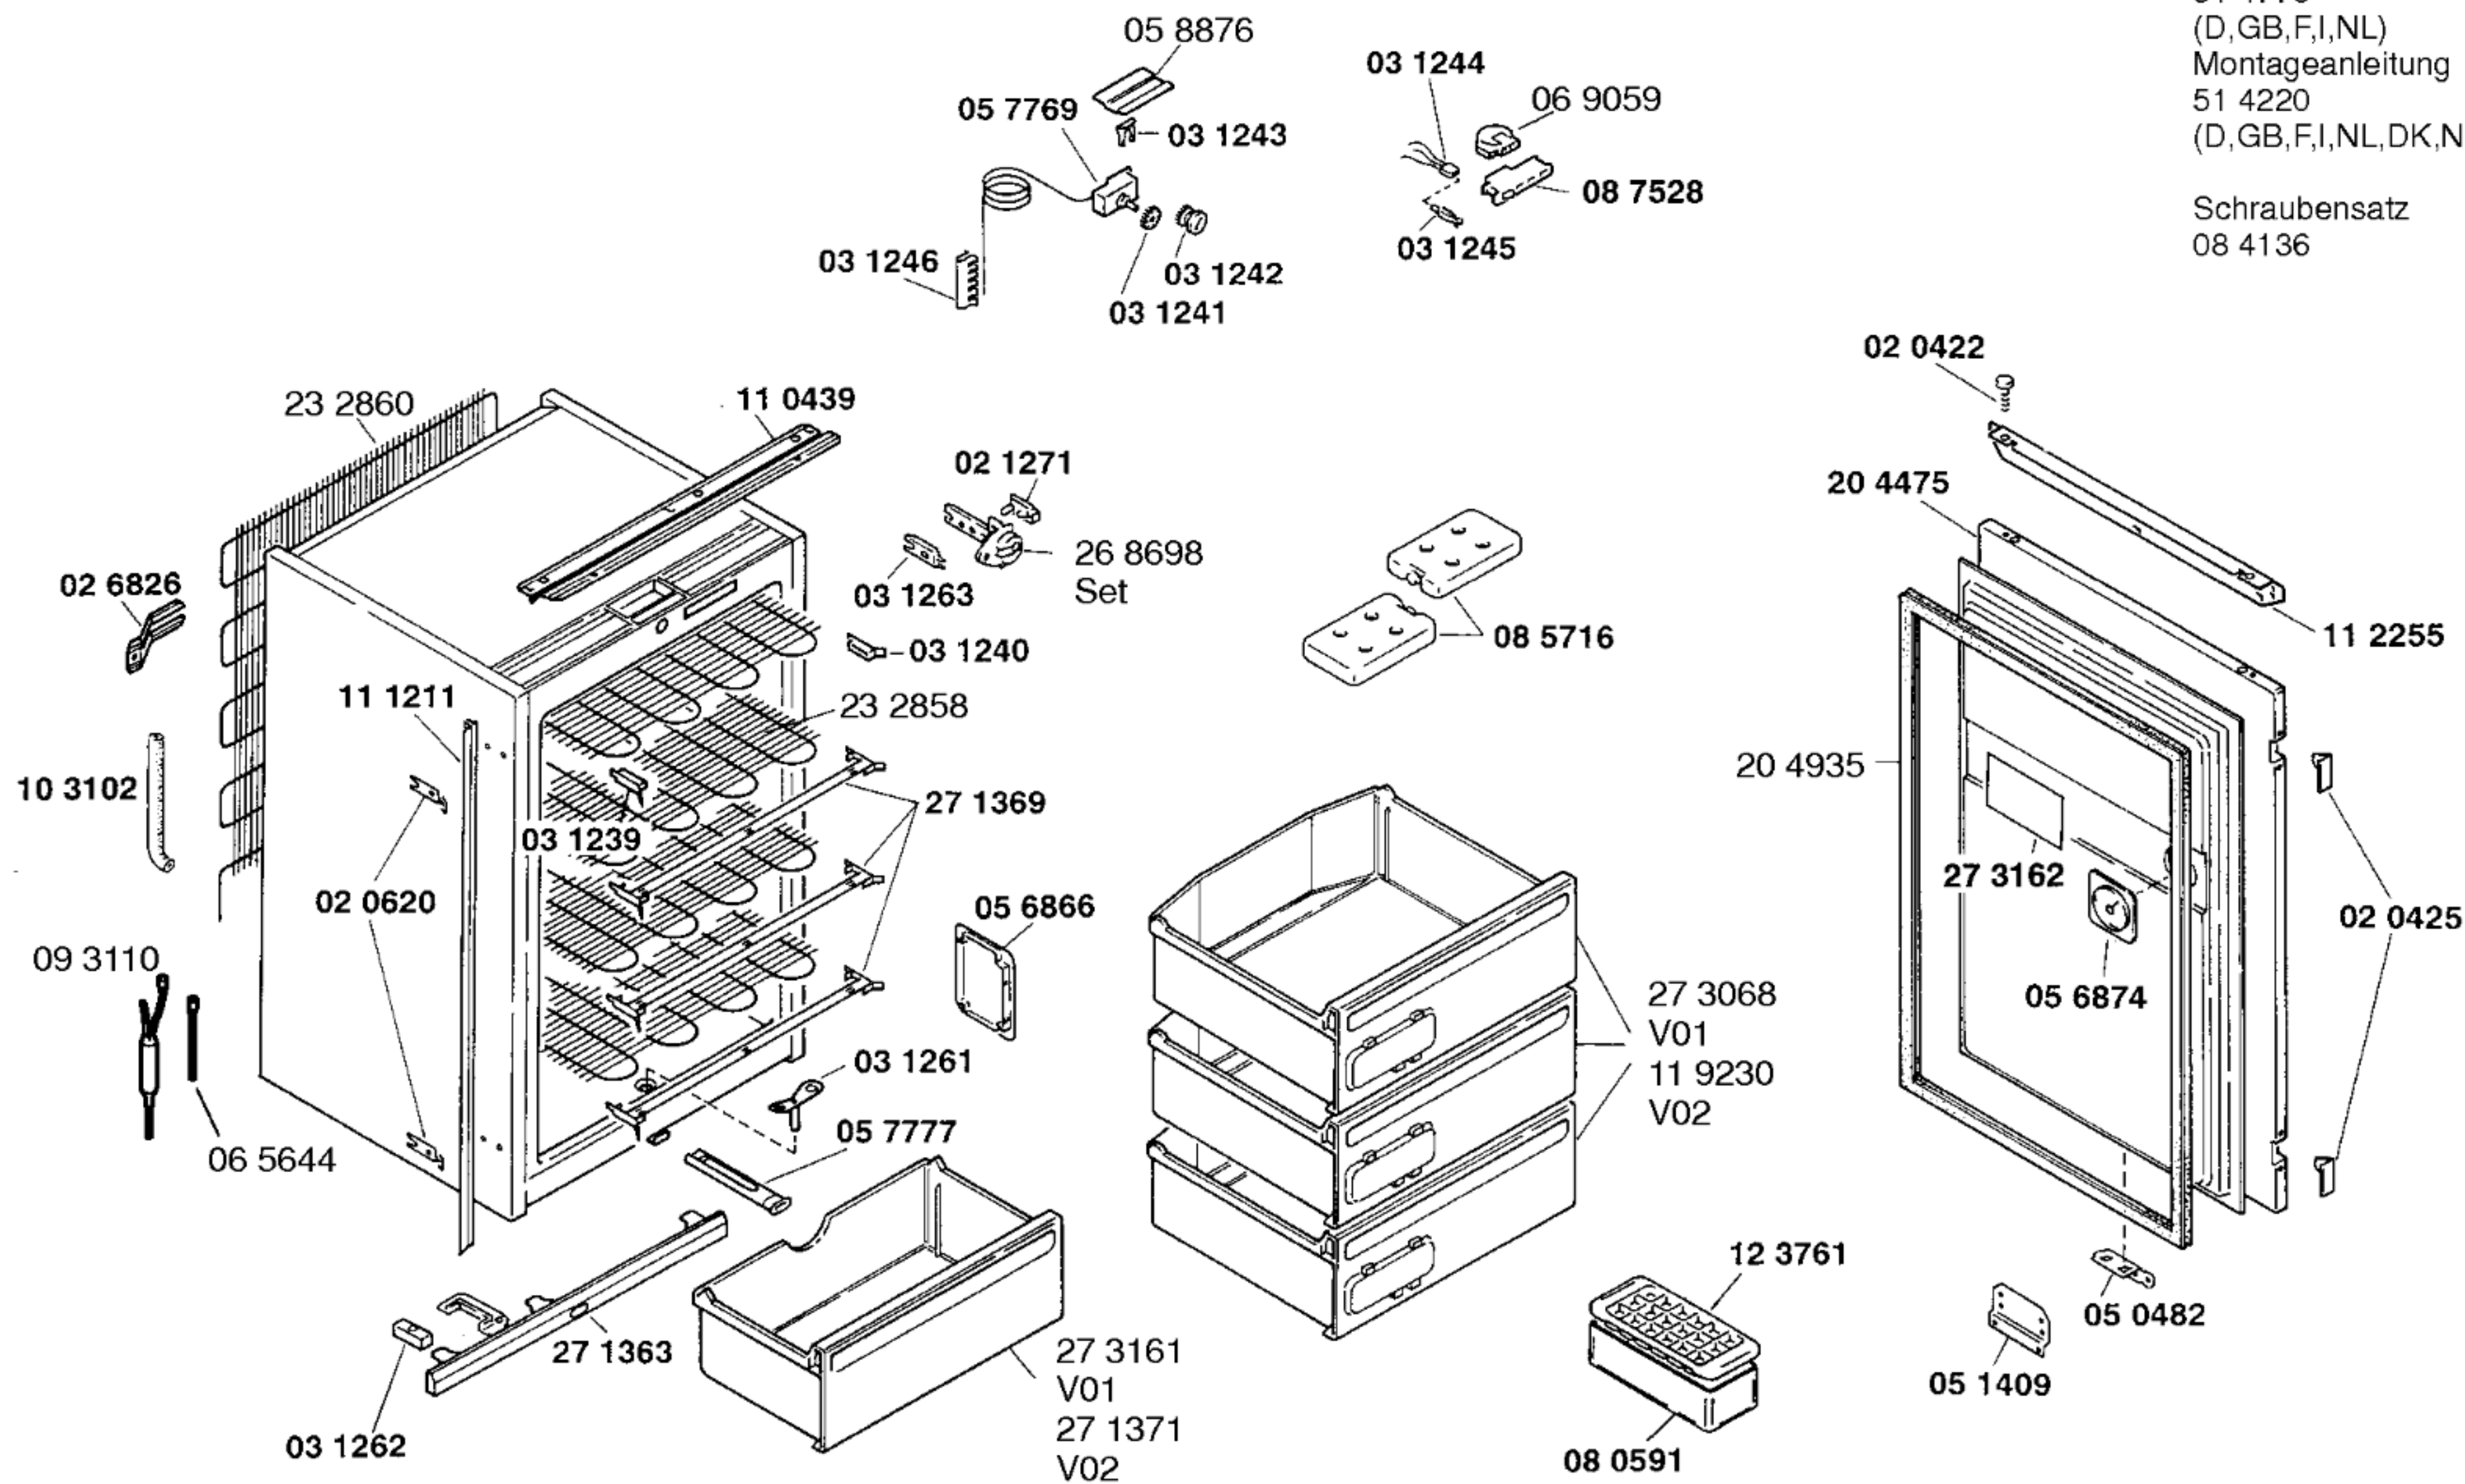

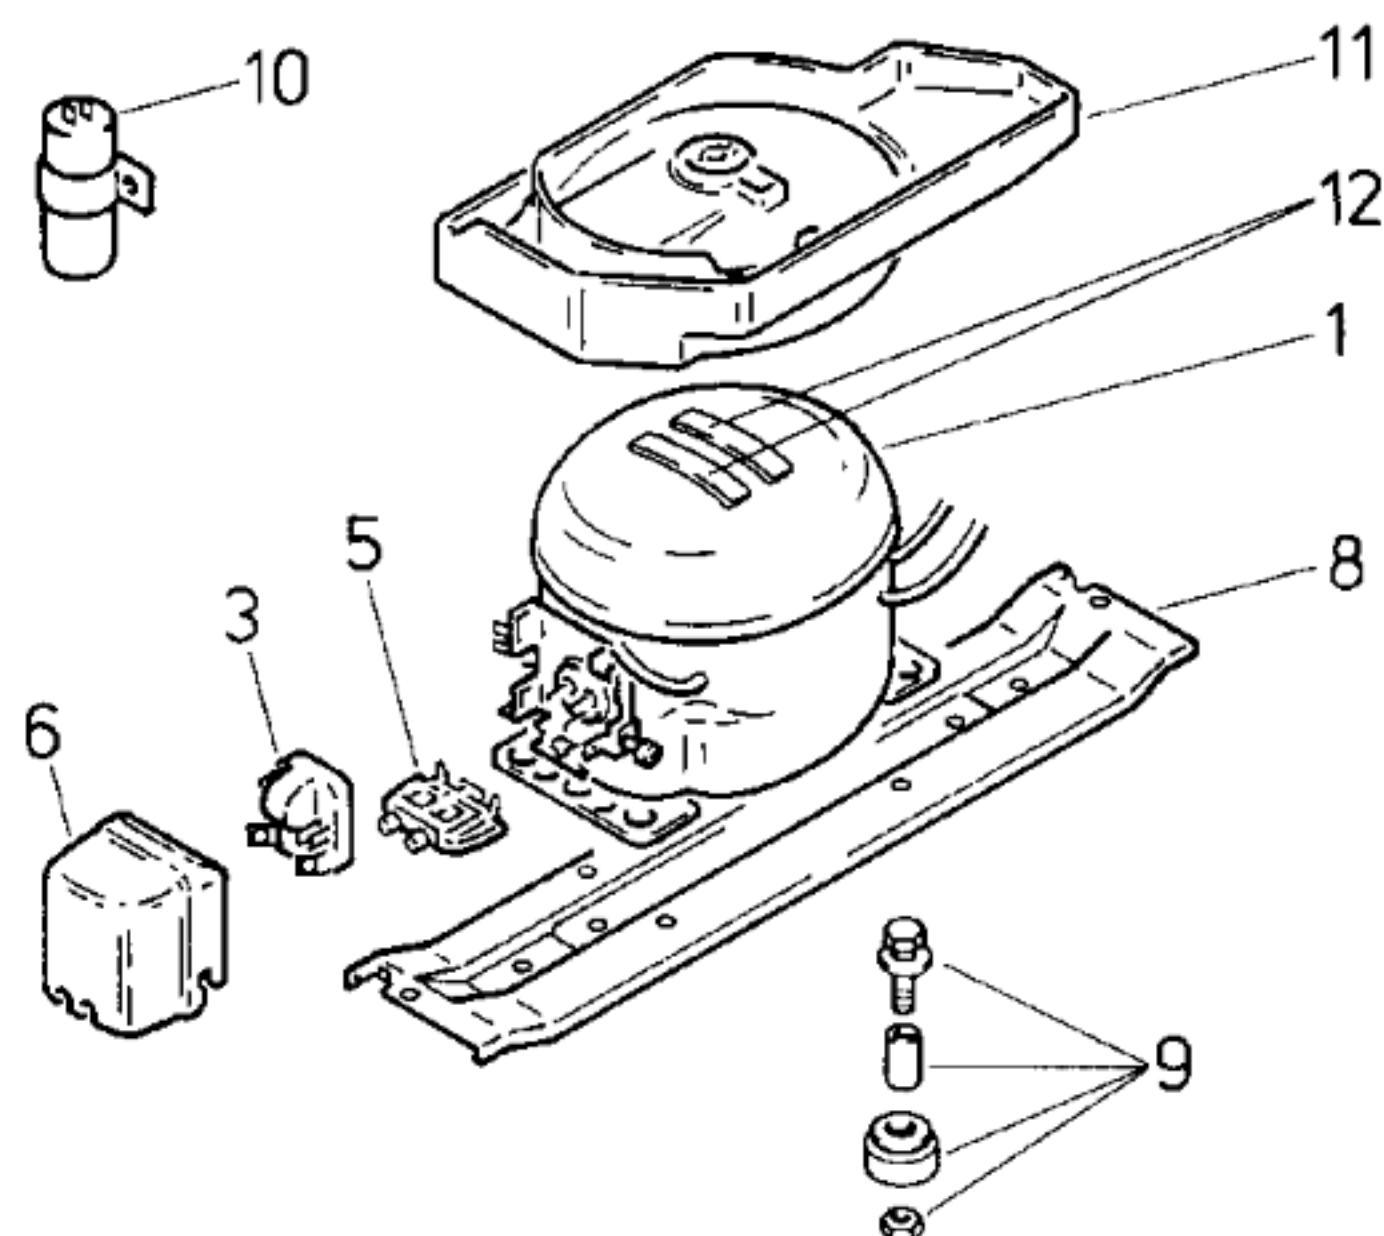

Pos.	Danfoss		
	TLES 5 F		
1	14 1242		
2			
3	05 9191		
4			
5	02 7310		
6	15 1072		
7			
8	27 1375		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 5 F	
Förderleistung/Delivery/Débit	l/h	914	
Anlaufstrom/Starting current/Cour de démarrage	A	4,0	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	18,9	
	Hi/aux Ω	15,3	
Temp.-Regler/Thermostat		WHF	
Typ/Type		TF 57 SF2	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-25	-17
Valeurs de commutation	„aus“	-33	-23
(„abtauen“ od.)	„alarm“	-19,5	-13
Füllmenge/Fill.quantity/Charge	R134a g	110	
Anschlußwert/Conn.load/Puiss. connectée	W	120	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		