



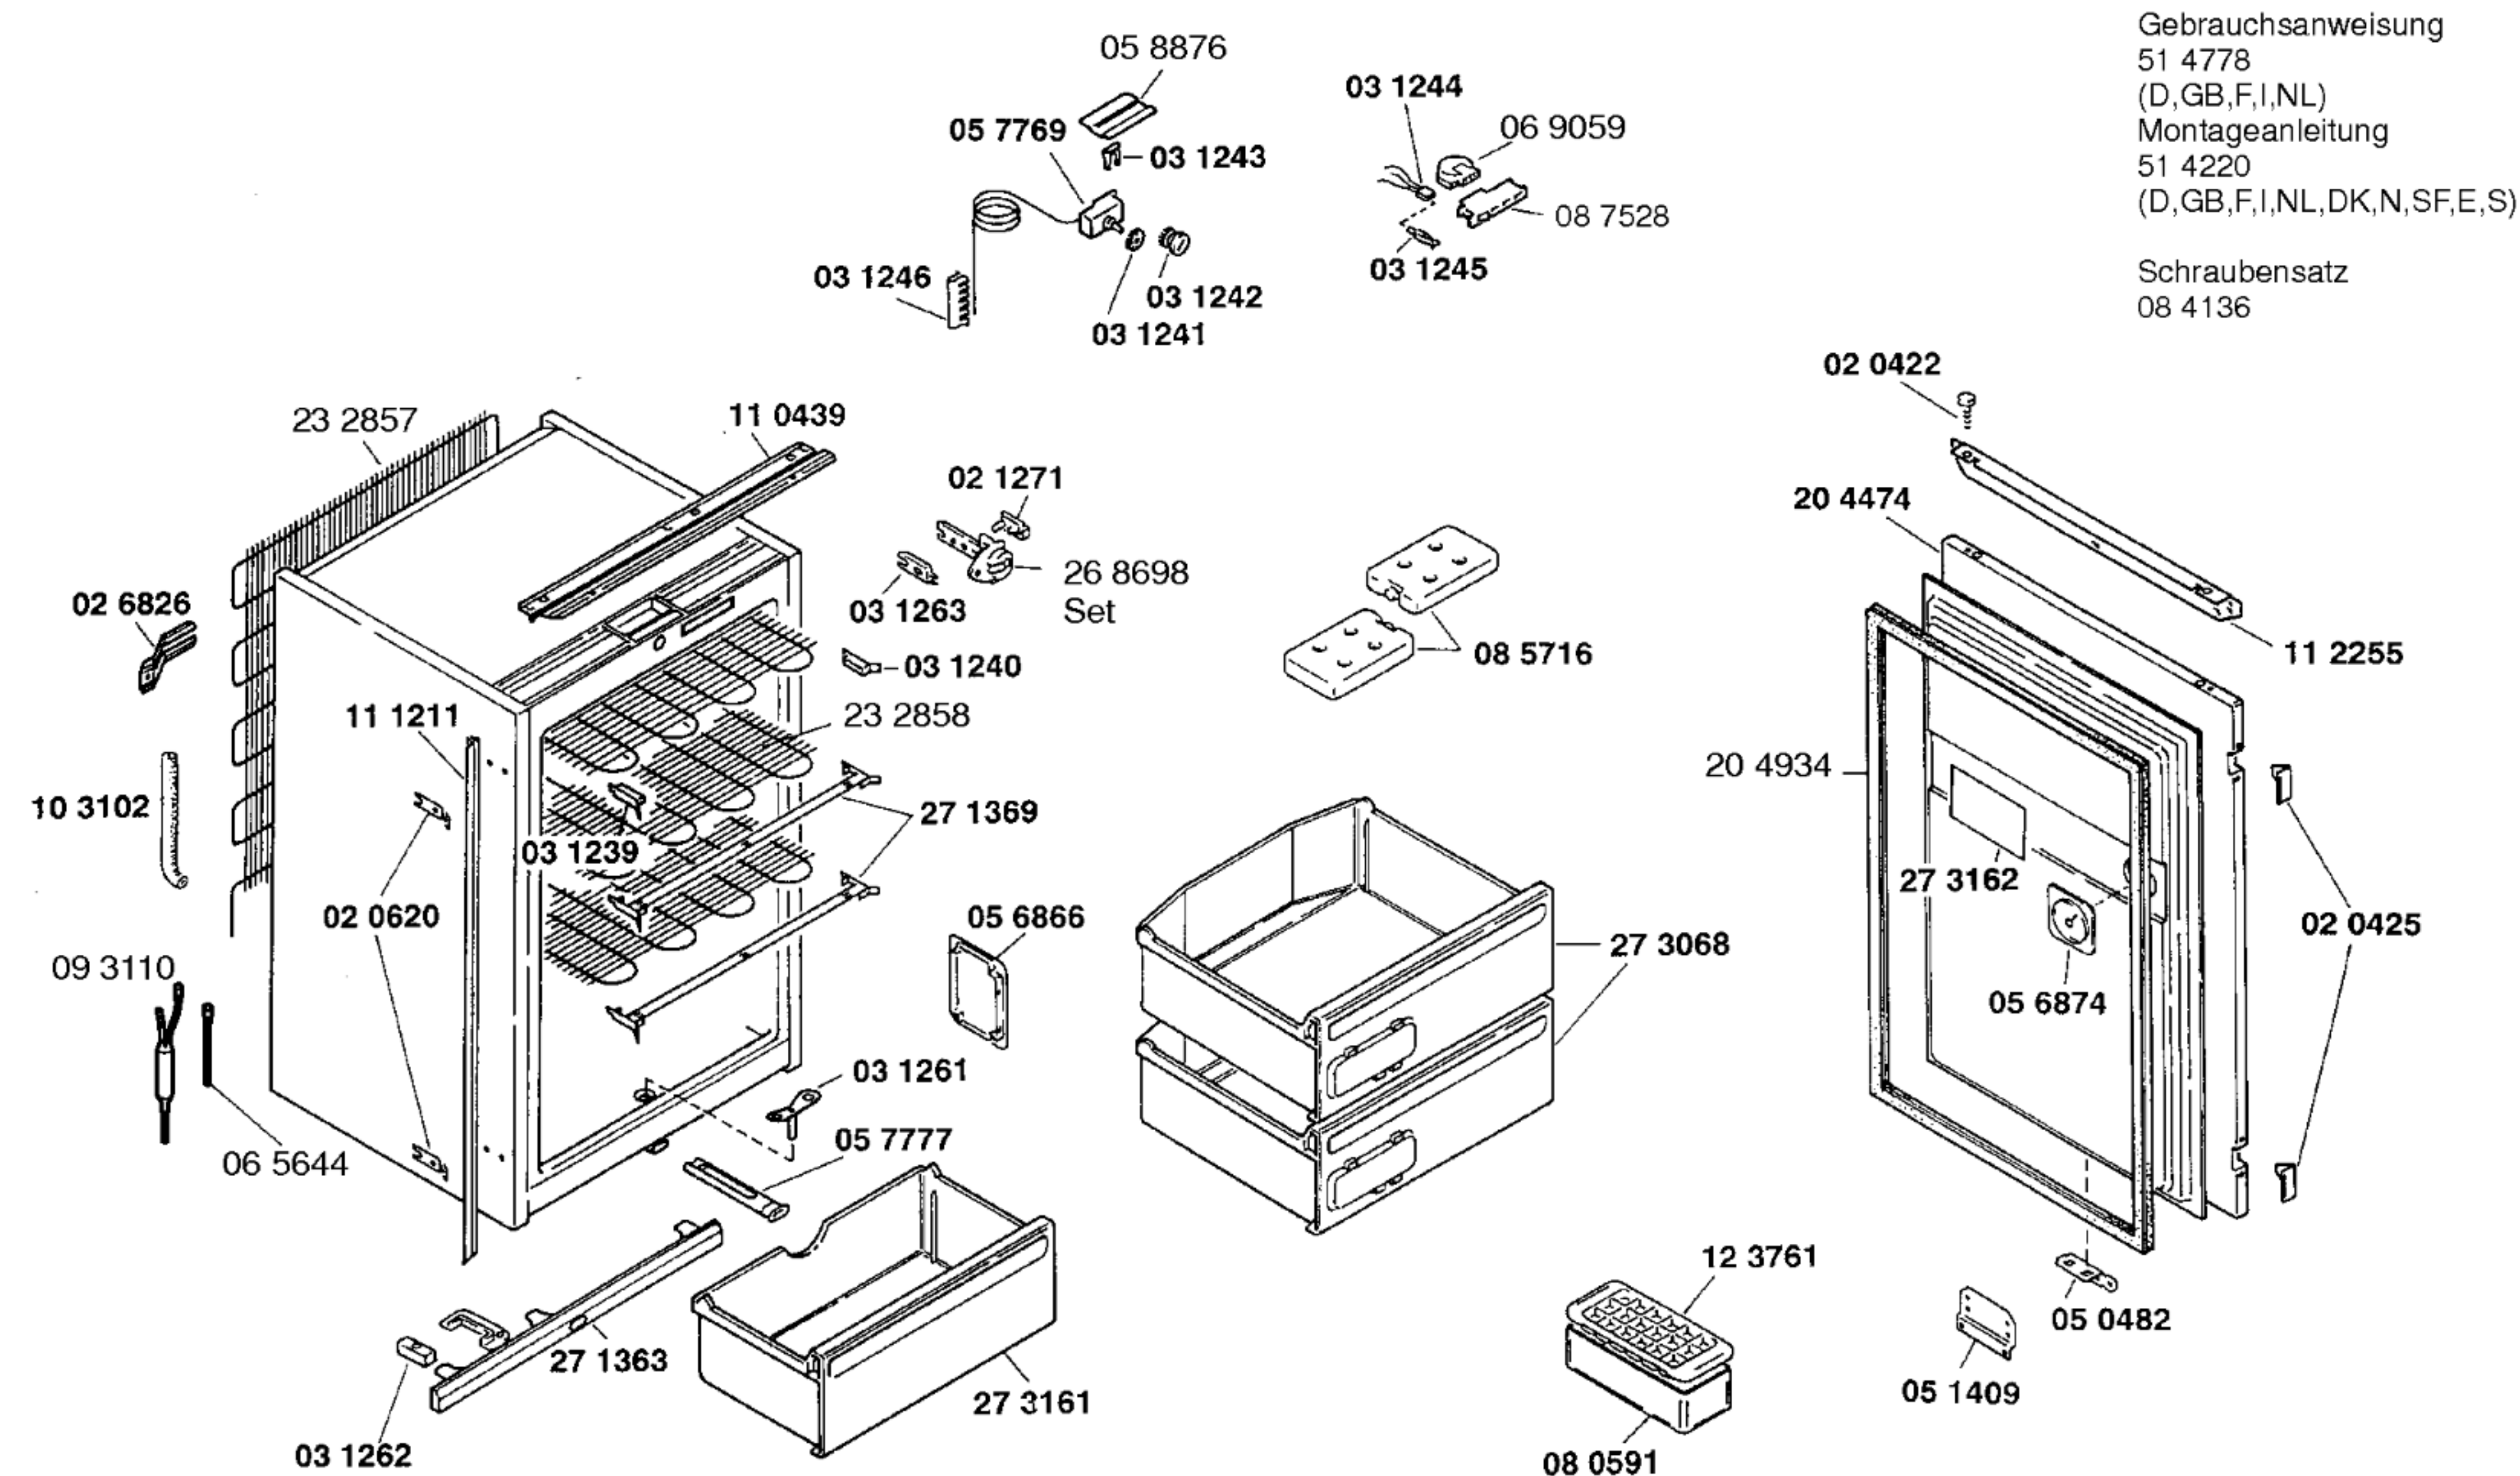

Gebrauchsanweisung  
51 4778  
(D,GB,F,I,NL)  
Montageanleitung  
51 4220  
(D,GB,F,I,NL,DK,N,SF,E,S)

Schraubensatz  
08 4136

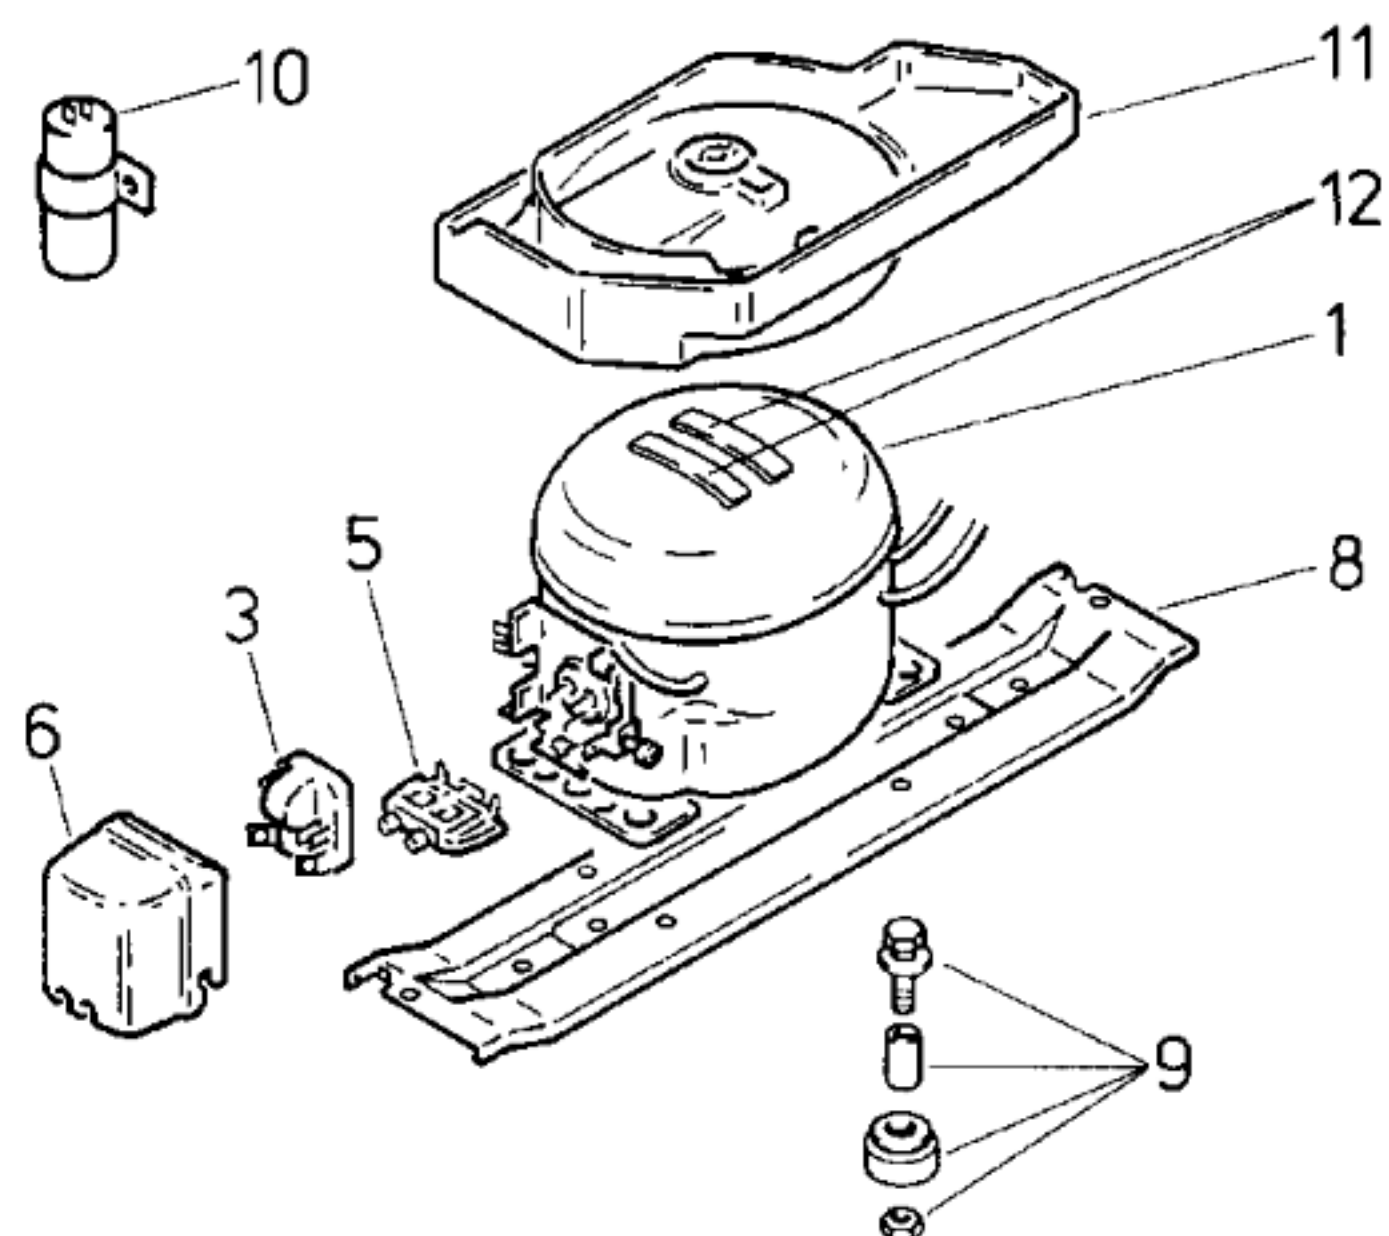

|      |          |  |  |
|------|----------|--|--|
| Pos. |          |  |  |
|      | Danfoss  |  |  |
|      | TLES 5 F |  |  |
| 1    | 14 1242  |  |  |
| 2    |          |  |  |
| 3    | 05 9191  |  |  |
| 4    |          |  |  |
| 5    | 02 7310  |  |  |
| 6    | 15 1072  |  |  |
| 7    |          |  |  |
| 8    | 27 1375  |  |  |
| 9    | 05 0166  |  |  |
| 10   |          |  |  |
| 11   |          |  |  |
| 12   |          |  |  |

| TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES |  |                        |      |       |     |
|--------------------------------------------------------|--|------------------------|------|-------|-----|
| Verdichter/Compressor/Compresseur                      |  | Danfoss                |      |       |     |
| Typ/Type                                               |  | TLES 5 F               |      |       |     |
| Förderleistung/Delivery/Débit                          |  | l/h                    | 914  |       |     |
| Anlaufstrom/Starting current/Cour de démarrage         |  | A                      | 4,0  |       |     |
| Widerstand/Resistance/Résistance                       |  | Ha/main/prin. $\Omega$ | 18,9 |       |     |
|                                                        |  | Hi/aux $\Omega$        | 15,3 |       |     |
| Temp.-Regler/Thermostat                                |  | WHF                    |      |       |     |
| Typ/Type                                               |  | TF 57 SF2              |      |       |     |
| Reglerstellung/Position                                |  | kalt                   | warm |       |     |
| Schaltwerte/Switching values/                          |  | „ein“                  | °C   | -25   | -17 |
| Valeurs de commutation                                 |  | „aus“                  |      | -33   | -23 |
| {„abtauen“ od.}                                        |  | „alarm“                |      | -19,5 | -13 |
| Füllmenge/Fill.quantity/Charge                         |  | R134a                  | g    | 110   |     |
| Anschlußwert/Conn.load/Puiss. connectée                |  | W                      |      | 110   |     |
| Heizung/Heater/Chauffage                               |  |                        |      |       |     |
| Widerstand/Resistance/Résistance                       |  | $\Omega$               |      |       |     |
| Leistung/Power/Puissance                               |  | W                      |      |       |     |
| Ventilator/Blower/Ventilateur                          |  |                        |      |       |     |
| Widerstand/Resistance/Résistance                       |  | $\Omega$               |      |       |     |
| Schaltuhr/Timer/Minuterie de contact                   |  |                        |      |       |     |
| Widerstand/Resistance/Résistance                       |  | $\Omega$               |      |       |     |
| Magnetventil/Magnetic valve/Electrovanne               |  |                        |      |       |     |
| Widerstand/Resistance/Résistance                       |  | $\Omega$               |      |       |     |
| Spannung/Voltage/Tension                               |  | V                      |      |       |     |