


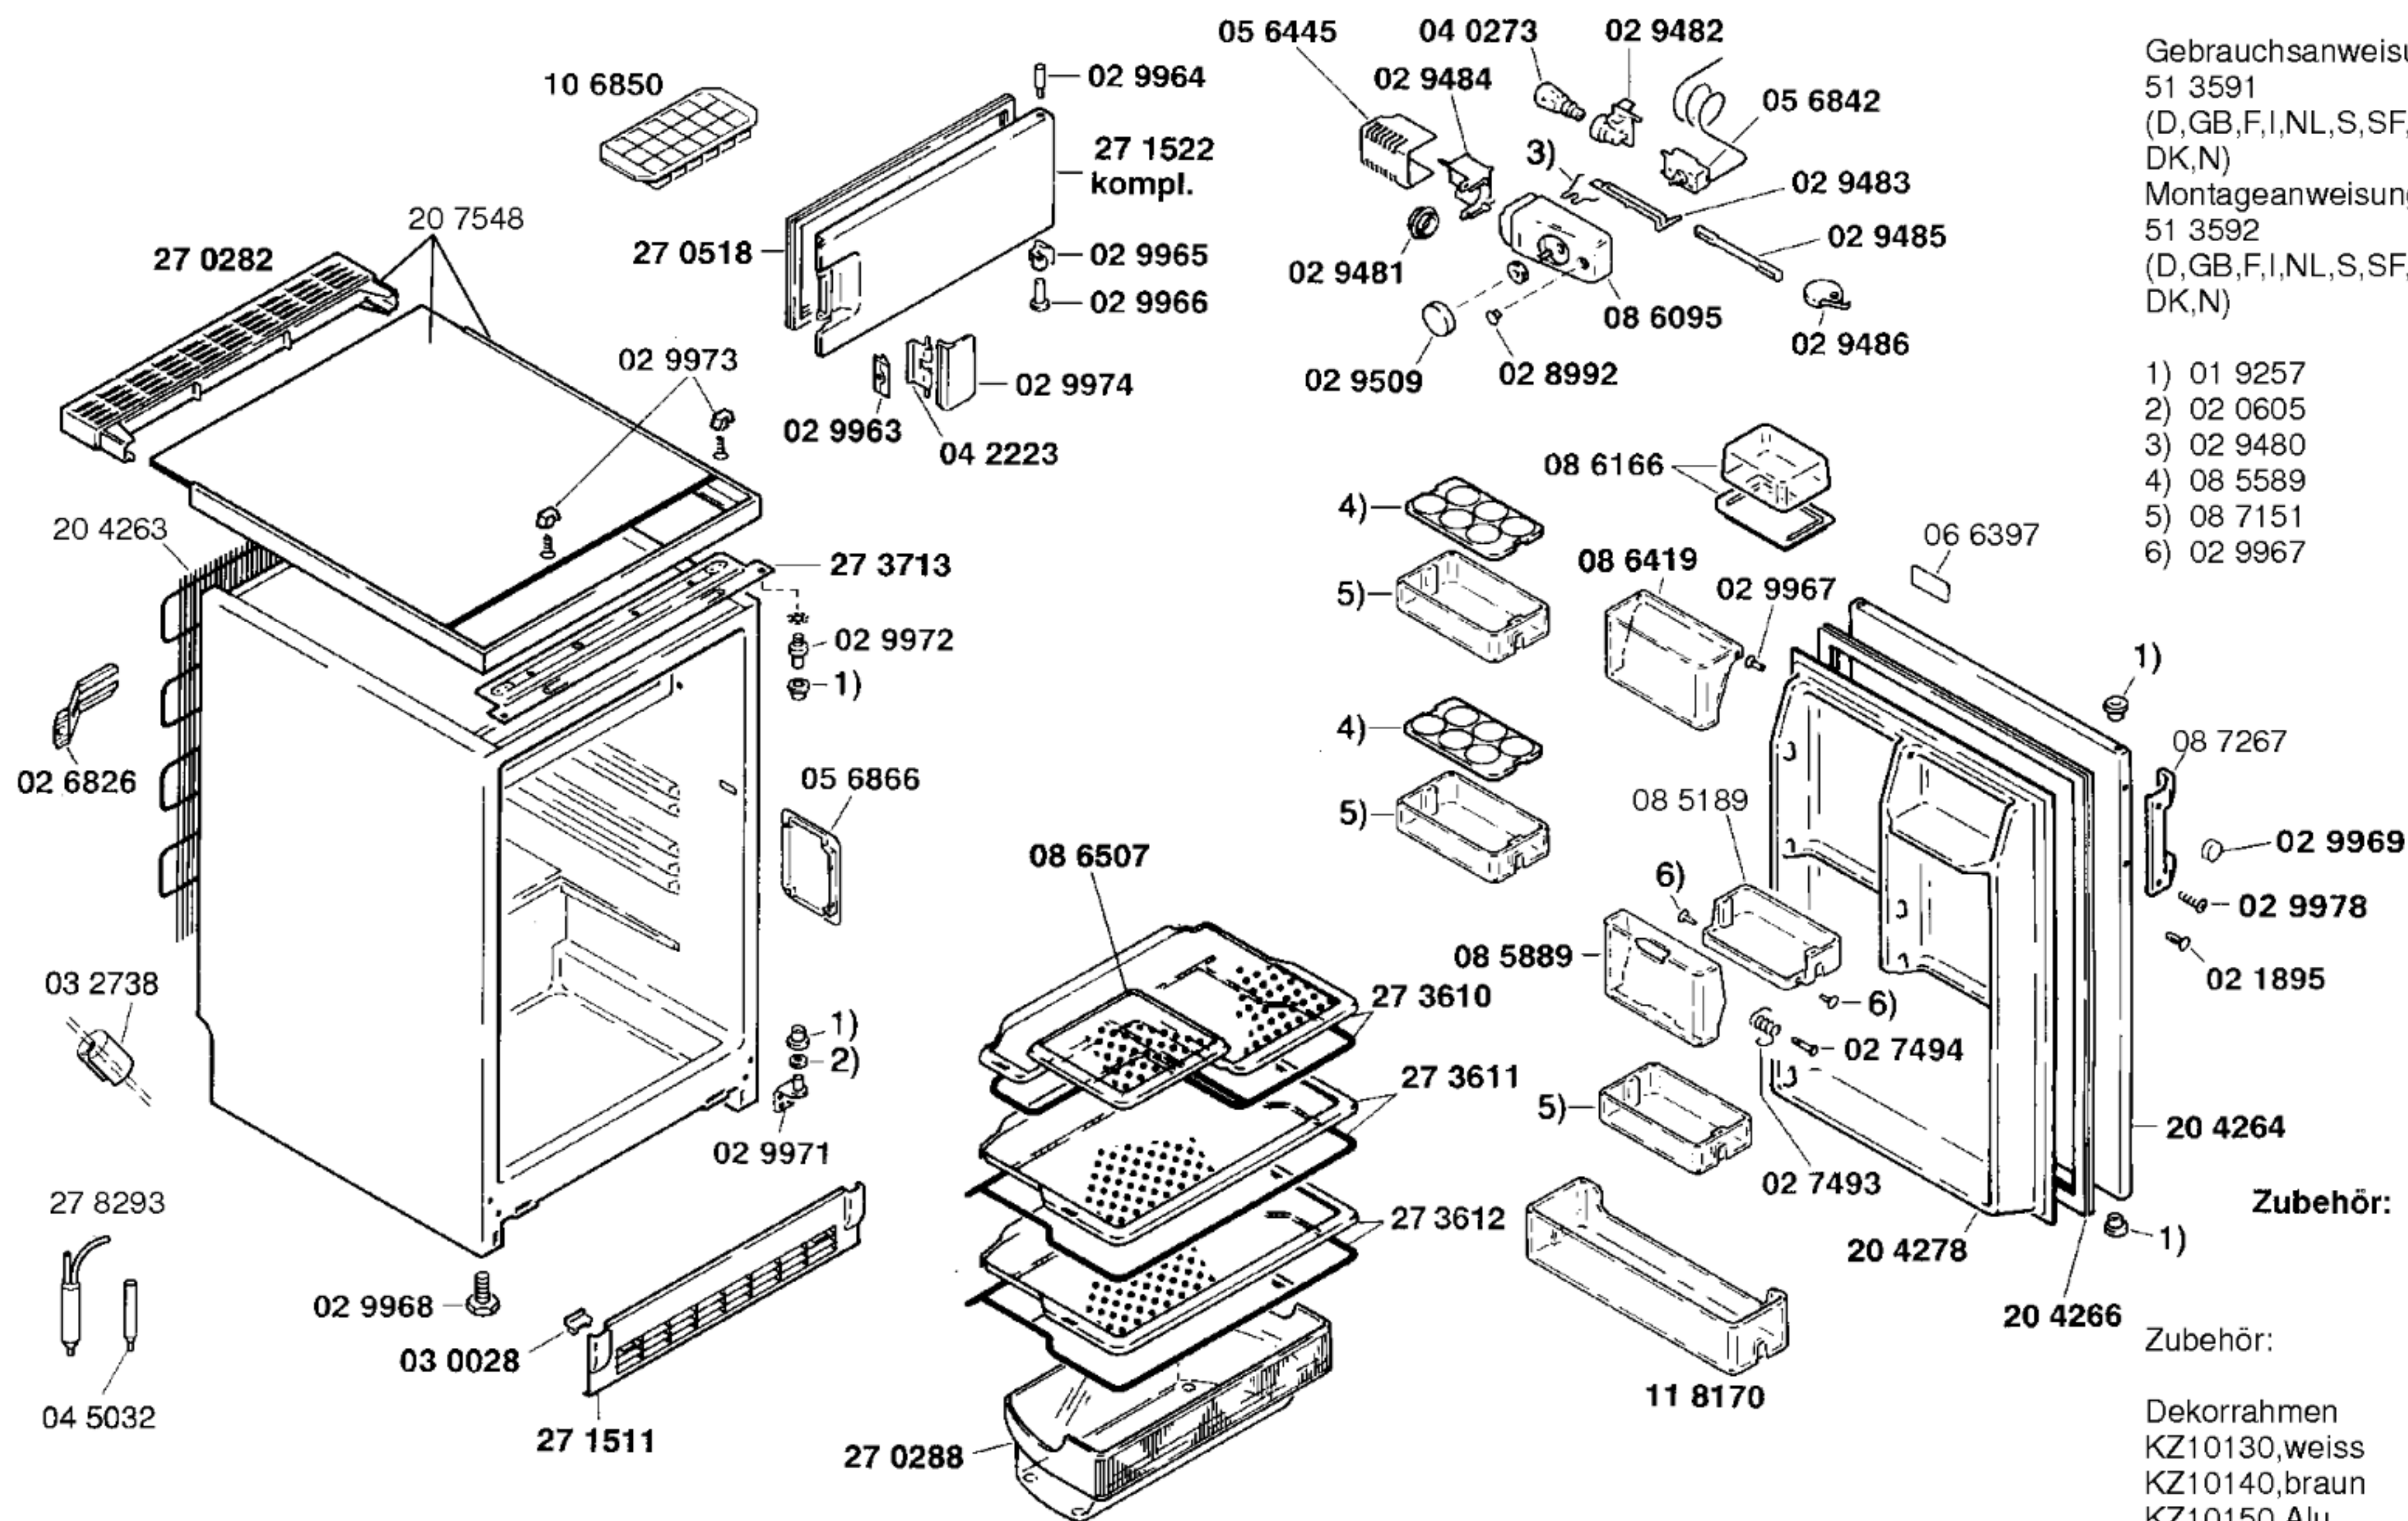


Gebrauchsanweisung
51 3591
(D,GB,F,I,NL,S,SF,E,P,
DK,N)
Montageanweisung
51 3592
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

- 1) 01 9257
- 2) 02 0605
- 3) 02 9480
- 4) 08 5589
- 5) 08 7151
- 6) 02 9967

Zubehör:

Zubehör:

Dekorrahmen
KZ10130, weiss
KZ10140, braun
KZ10150, Alu
Sockel
KZ11120

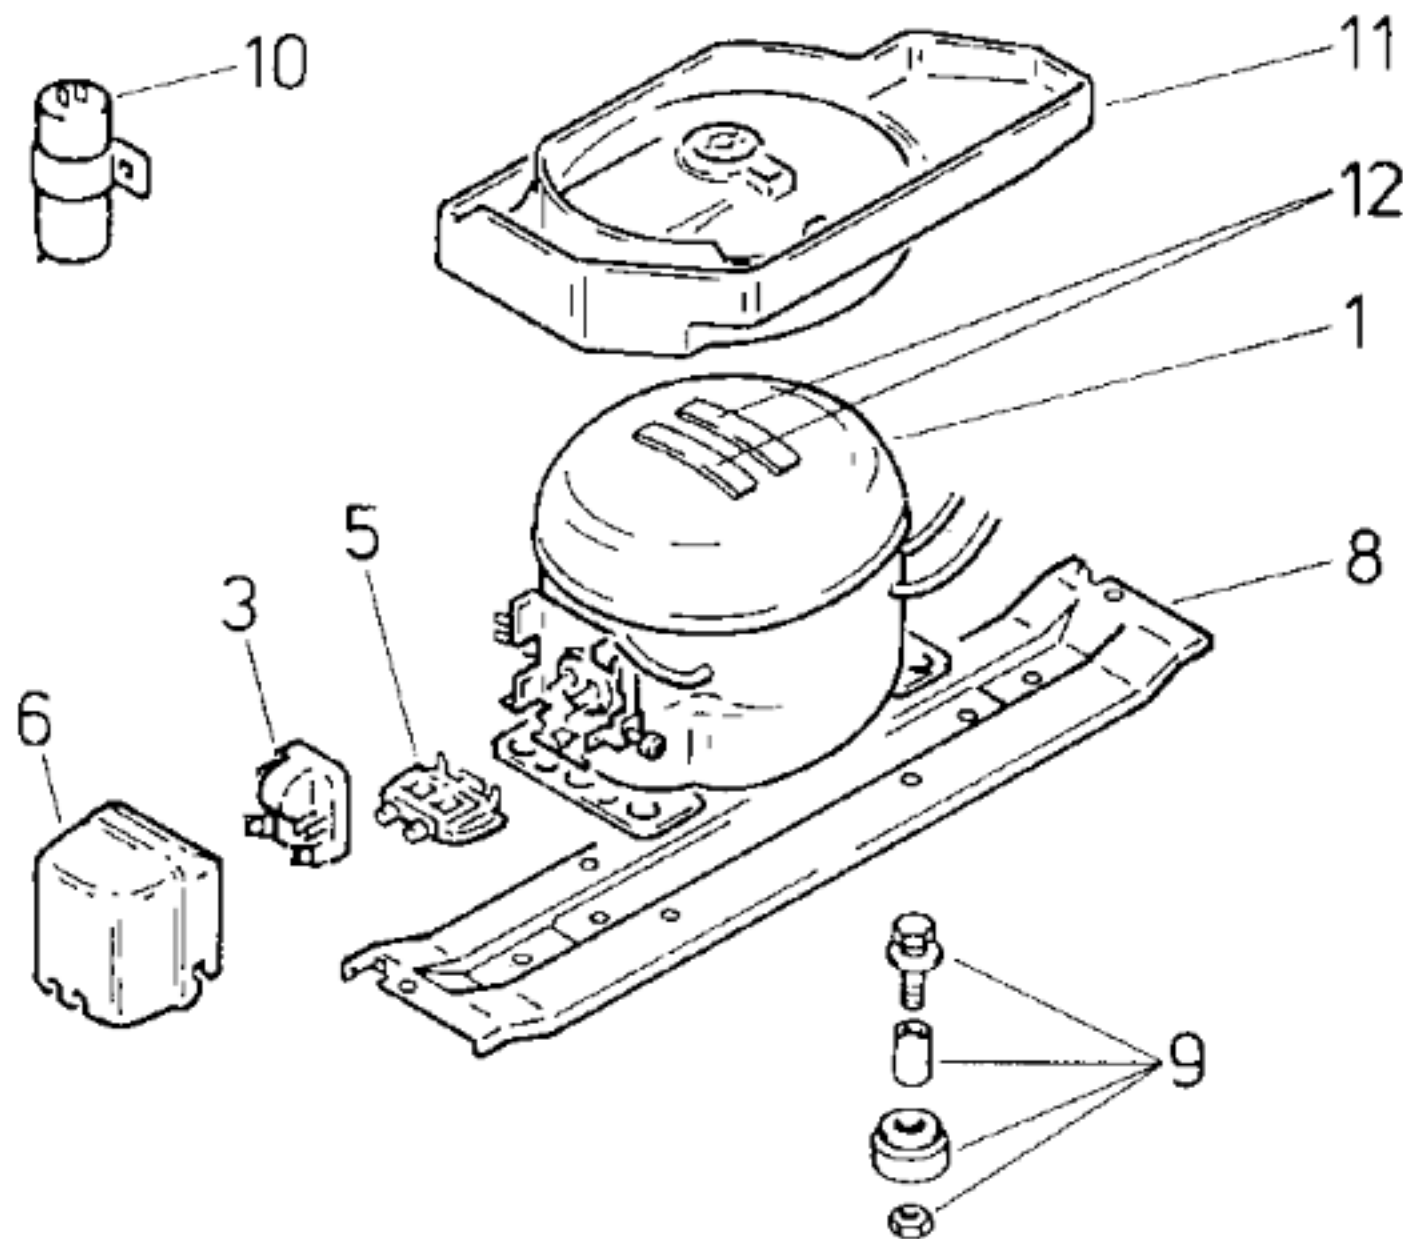

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 4 A		
Förderleistung/Delivery/Débit		l/h	695	
Anlaufstrom/Starting current/Cour de démarrage		A	8,3	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	23,4	
		Hi/aux Ω	15,5	
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K 59		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	+4,5	+4,5
Valeurs de commutation		„aus“	-31,0	-13,5
		(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R 12	g	100
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.			
	Danfoss		
	TL 4 A		
1	13 1064		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	27 0291		
9	05 0166		
10			
11	08 4744		
12	05 6008		