



07 4445
V01,V04
09 6572
V02,V05
09 6325
V03,V06

21 0238
kompl.

15 3463
V01,V02,V03
16 3106
V04,V05,V06

05 8876

15 3464

09 6270

03 1245

03 1246

1)

15 1885

15 3459

02 9973

1)

28 9649

27 1931

15 2784

03 1240

27 1334

05 6866

03 1239

23 3072

15 4364

15 4366

02 9968

28 9651

15 4365

05 6874

21 0197

21 0239

15 0719

29 0372
V01,V02,V03
29 6968
V04,V05,V06

1) 01 9829

Gebrauchsanweisung
51 7998
(D,GB,F,I,NL,SF)

Montageanweisung
51 3592
V01,V02,V03
26 1542
V04,V05,V06
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

23 2845

02 6826


10 3102

09 3110

06 5644



16 2661
Sicherung 13A
V06

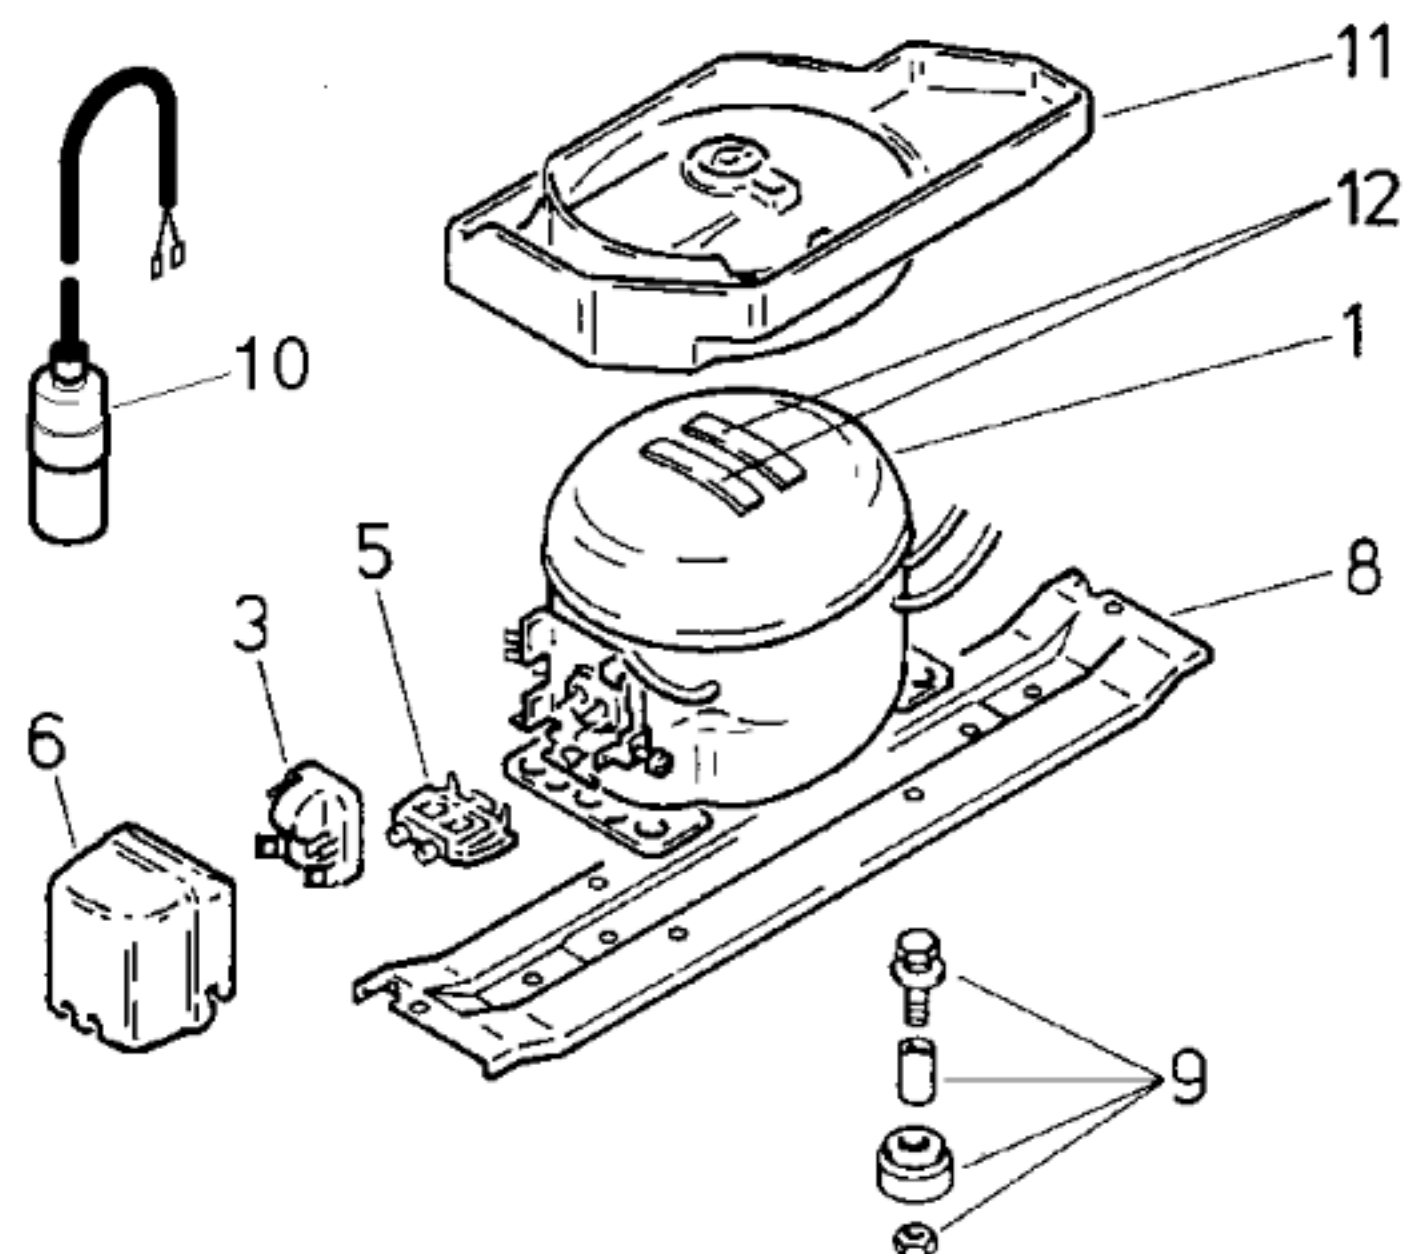

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita	Danfoss	
Typ/Type		SD 65 E	TLES 7K	
Förderleistung/Delivery/Débit	l/h	1170	1168	
Anlaufstrom/Starting current/Cour de démarrage	A		4,5	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω		16,5	
	Hi/aux Ω		16,9	
Temp.-Regler/Thermostat		Danfoss	Danfoss	
Typ/Type		BE 002	077B2210	
Reglerstellung/Position		kalt	warm	kalt
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-25	-17	-25
Valeurs de commutation	„aus“	-33	-23	-33
(„abtauen“ od.)	„alarm“	-19,5	-13	-19,5
Füllmenge/Fill.quantity/Charge	R600a	g	*	*
Anschlußwert/Conn.load/Puiss. connectée	W	78	78	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild

	V01, V02, V03	V04, V05, V06	
Pos.	Matsushita	Danfoss	
	SD 65 E		
1	14 1316	14 1585	
2			
3	15 3306	15 1055	
4			
5	15 3865	15 0760	
6	15 3303	15 1072	
7			
8	27 0833		
9	05 0166		
10			
11			
12			