


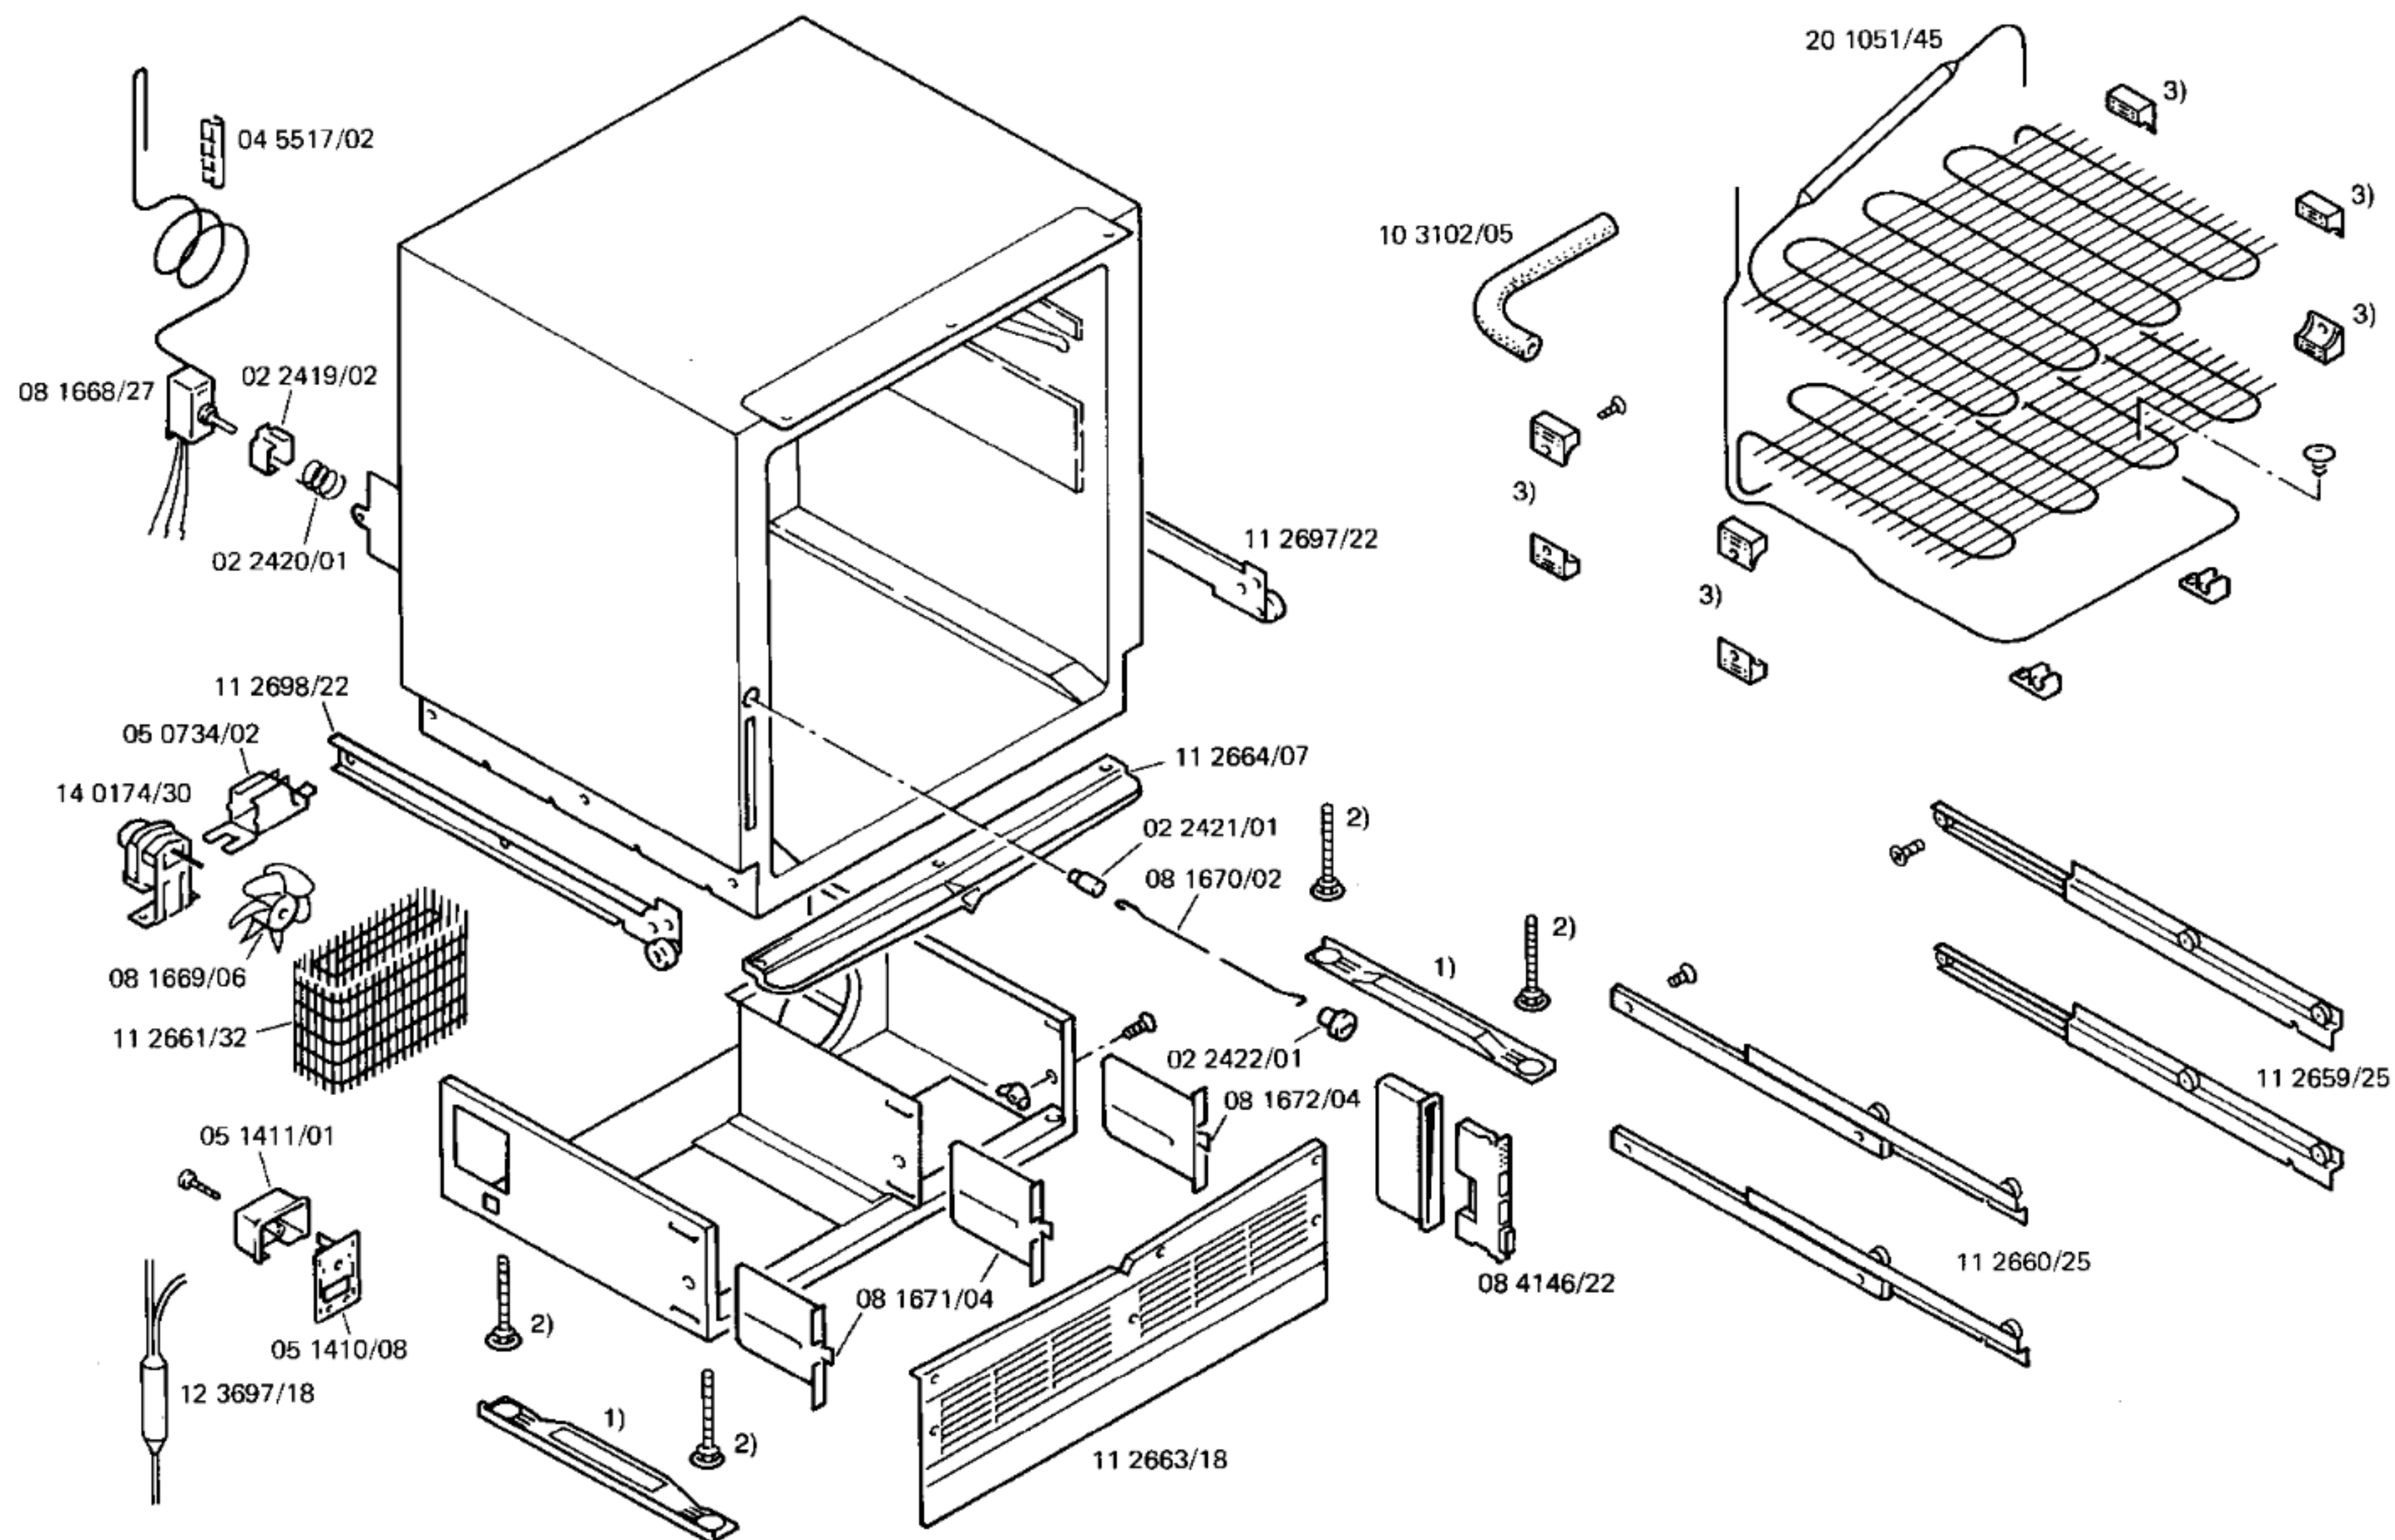


51 1329/00
Gebrauchsanweisung
51 1315/00
Montageanleitung


1) 11 2700/02

2) 08 0424/02

3) 02 2423/01

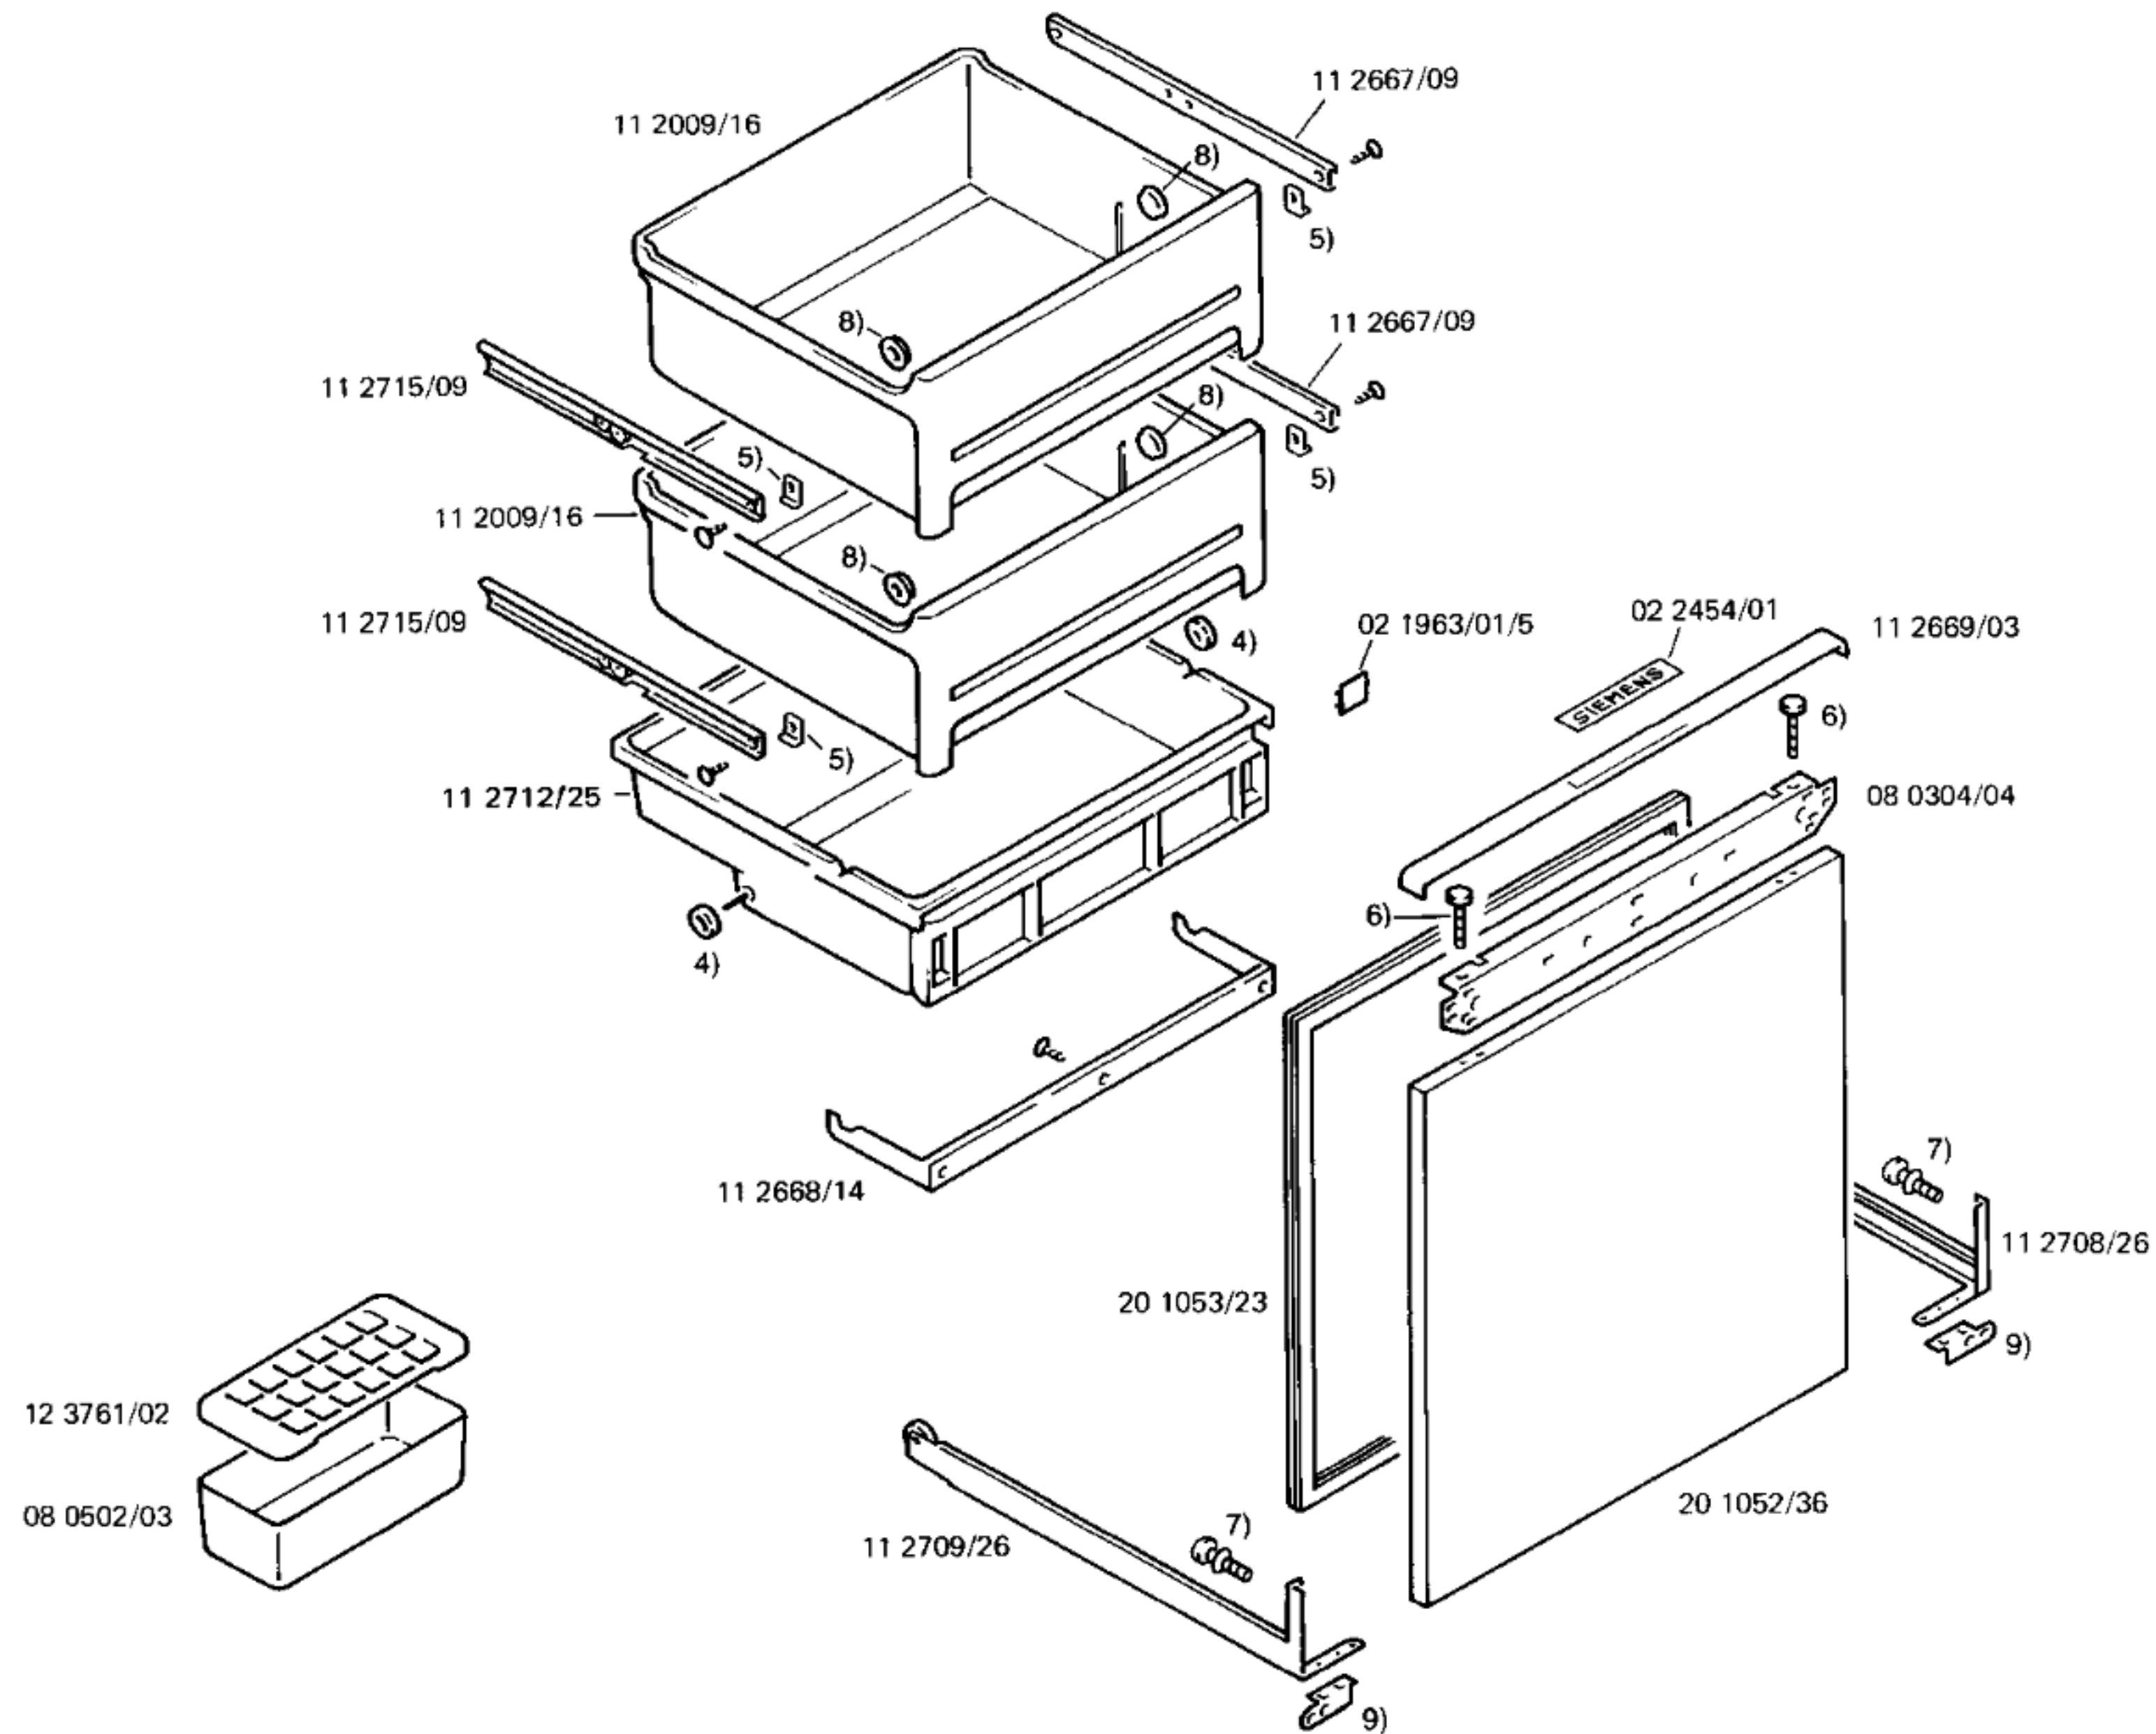

- 4) 02 2424/01
- 5) 02 2425/01
- 6) 02 0422/01/5
- 7) 02 2426/01
- 8) 02 2427/01
- 9) 05 0482/01

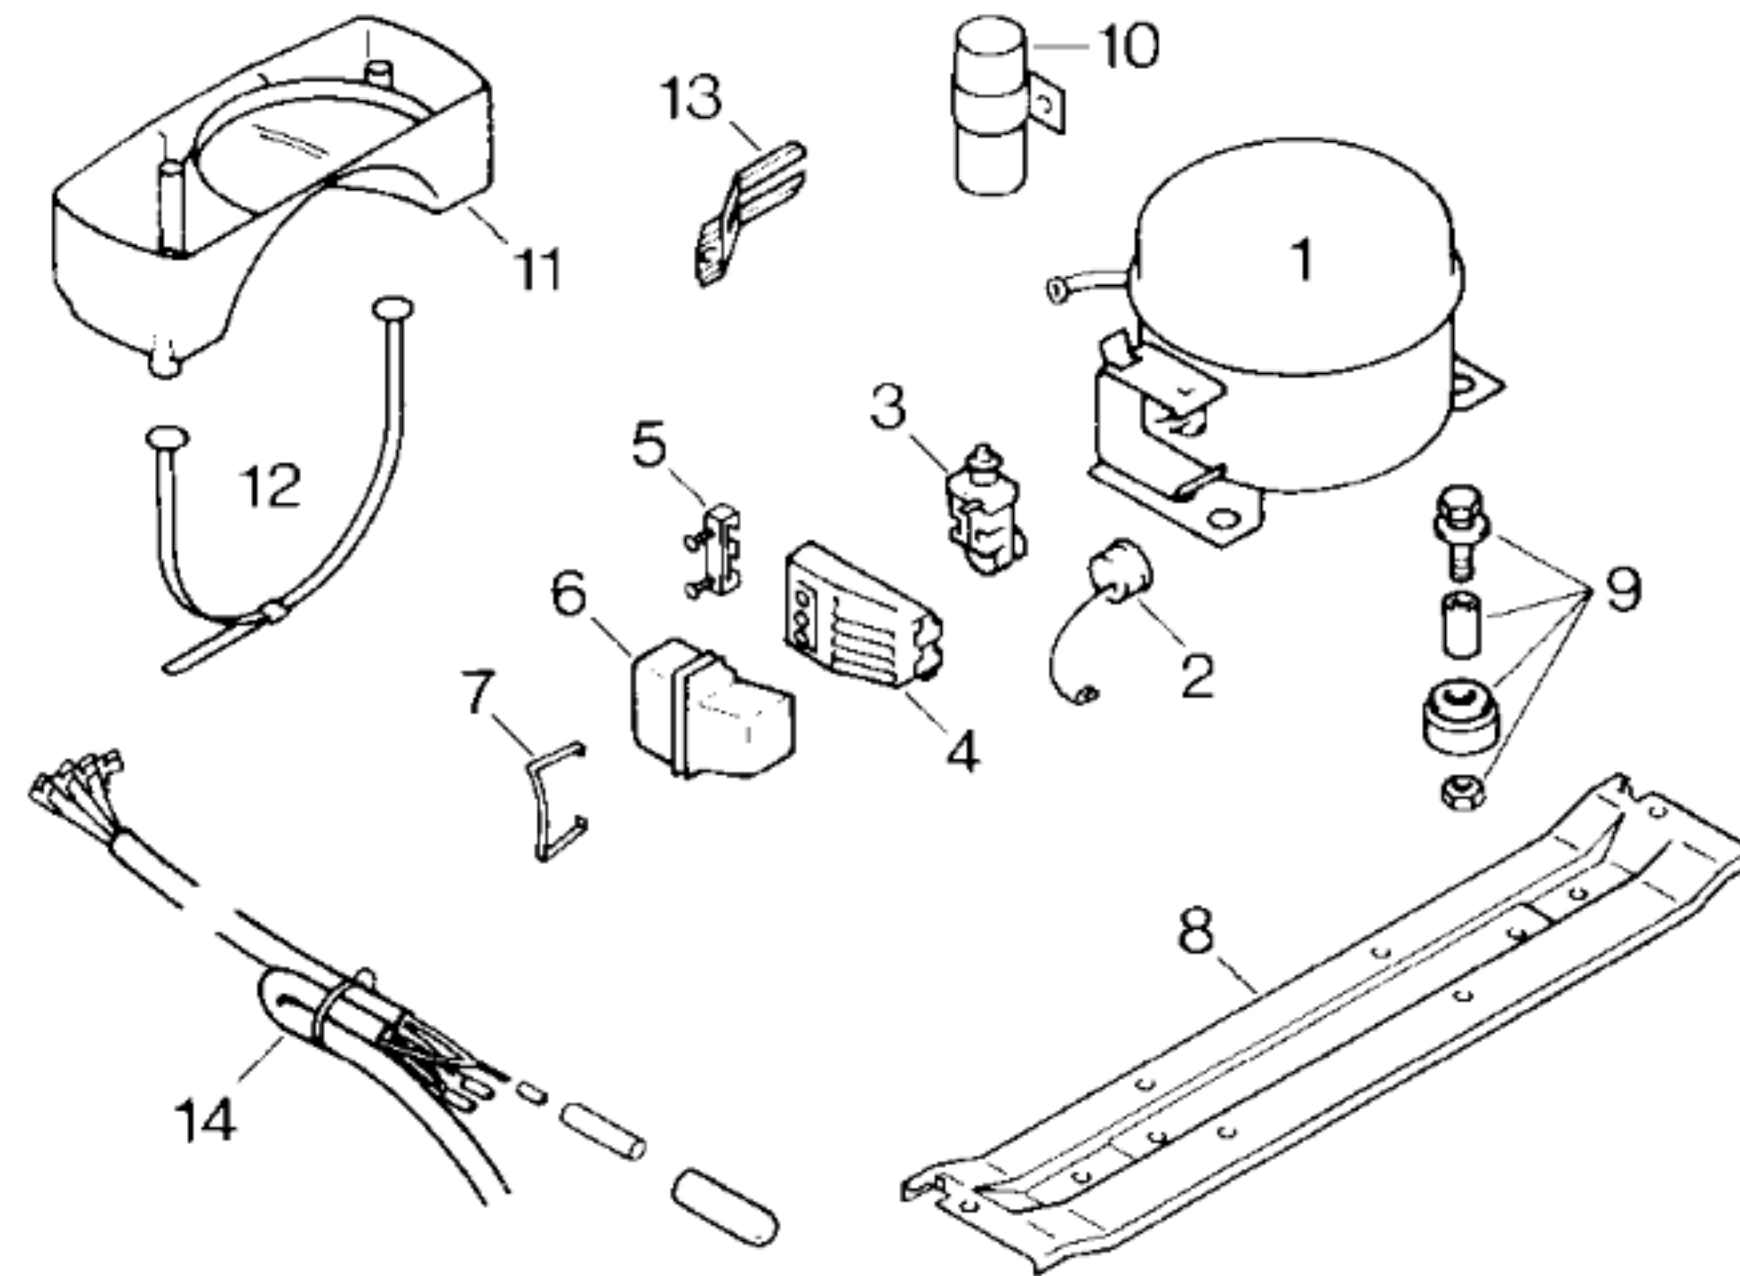

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Aspera		
Typ/Type		BY 1112 A		
Förderleistung/Delivery/Débit	l/h	1060		
Anlaufstrom/Starting current/Cour. de démarrage	A	8,5		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	17,9		
	Hi/aux Ω	43,7		
Temp.-Regler/Thermostat		M & J		
Typ/Type		TF 57 SF 2		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-25 -17		
Valeurs de commutation	„aus“	-37 -27		
(„abtauen“ od.)	„alarm“	-20 -13		
Füllmenge/Fill.quantity/Charge	R12 g	150		
Anschlußwert/Conn.load/Puiss. connectée	W	130		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.				
	Aspera			
1	14 0166/45			
2	02 2337/16			
3	02 2342/16			
4	05 1748/06			
5				
6	05 1746/01			
7	02 2339/01			
8				
9	05 0166/05			
10				
11				
12				
13				
14				