


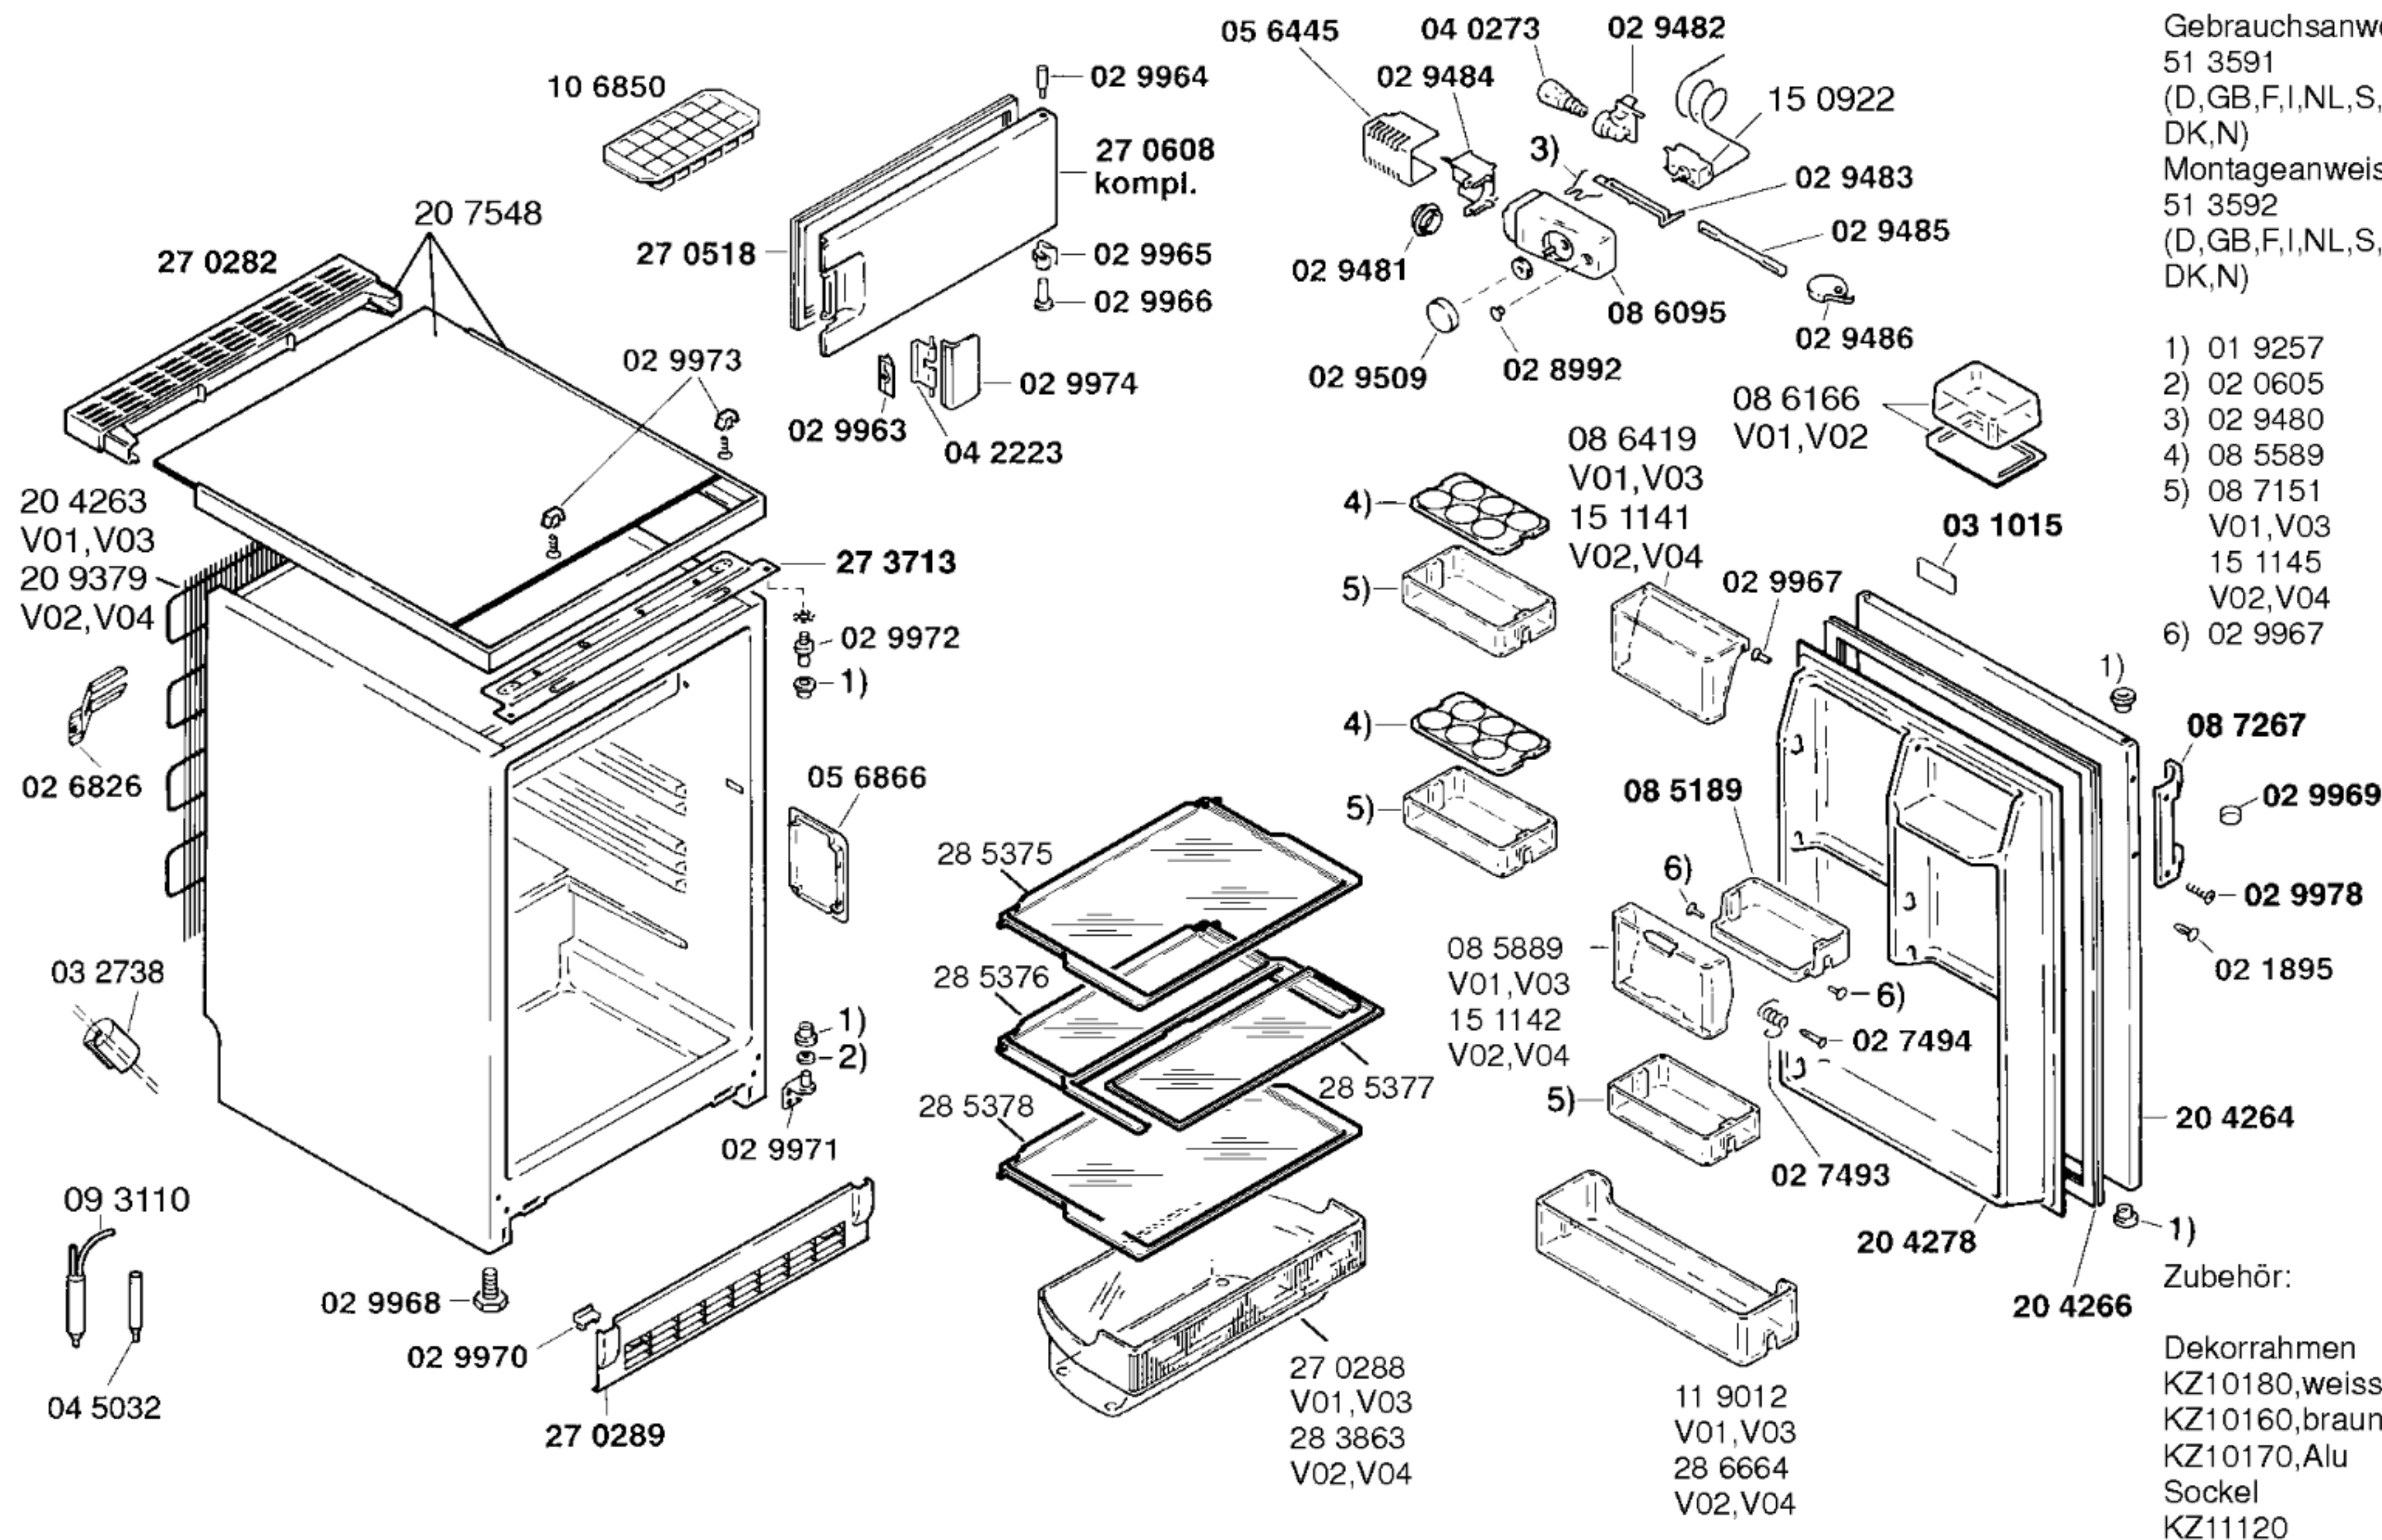


Gebrauchsanweisung
51 3591
(D,GB,F,I,NL,S,SF,E,P,
DK,N)
Montageanweisung
51 3592
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

- 1) 01 9257
- 2) 02 0605
- 3) 02 9480
- 4) 08 5589
- 5) 08 7151
V01,V03
15 1145
V02,V04
- 6) 02 9967

Zubehör:

Dekorrahmen
KZ10180, weiss
KZ10160, braun
KZ10170, Alu
Sockel
KZ11120

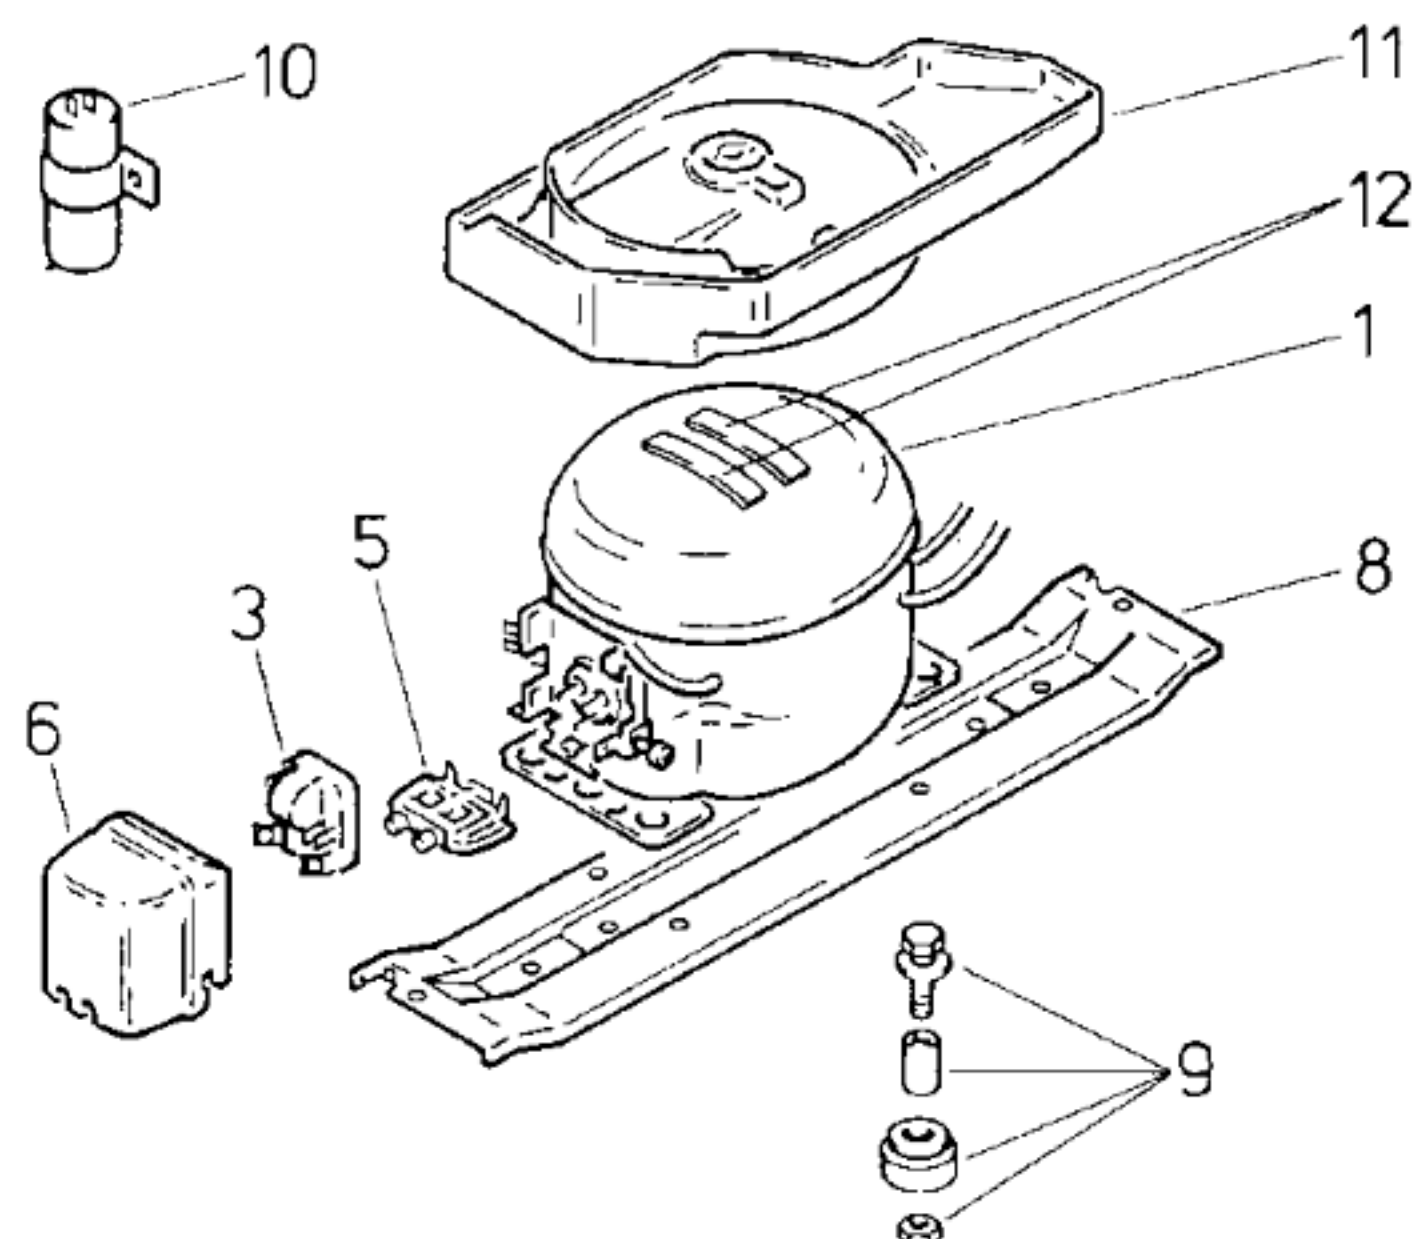

Pos.			
	Danfoss		
	TLES 5 F		
1	14 1242		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 1375		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur	Danfoss			
Typ/Type	TLES 5 F			
Förderleistung/Delivery/Débit	l/h	914		
Anlaufstrom/Starting current/Cour de démarrage	A	4,0		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	18,9	
	Hi/aux	Ω	15,3	
Temp.-Regler/Thermostat	Danfoss			
Typ/Type	TLES 5 F			
Reglerstellung/Position	kalt	warm		
Schaltwerte/Switching values/	+4,5	+4,5		
Valeurs de commutation	„ein“	„aus“		
(„abtauen“ od.)	„alarm“			
Fullmenge/Fill.quantity/Charge	R134a	g	1)	
Anschlußwert/Conn.load/Puiss. connectée	W	110		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

1) 90
V01,V03
70
V02,V04