



50 8788
Gebrauchsanweisung

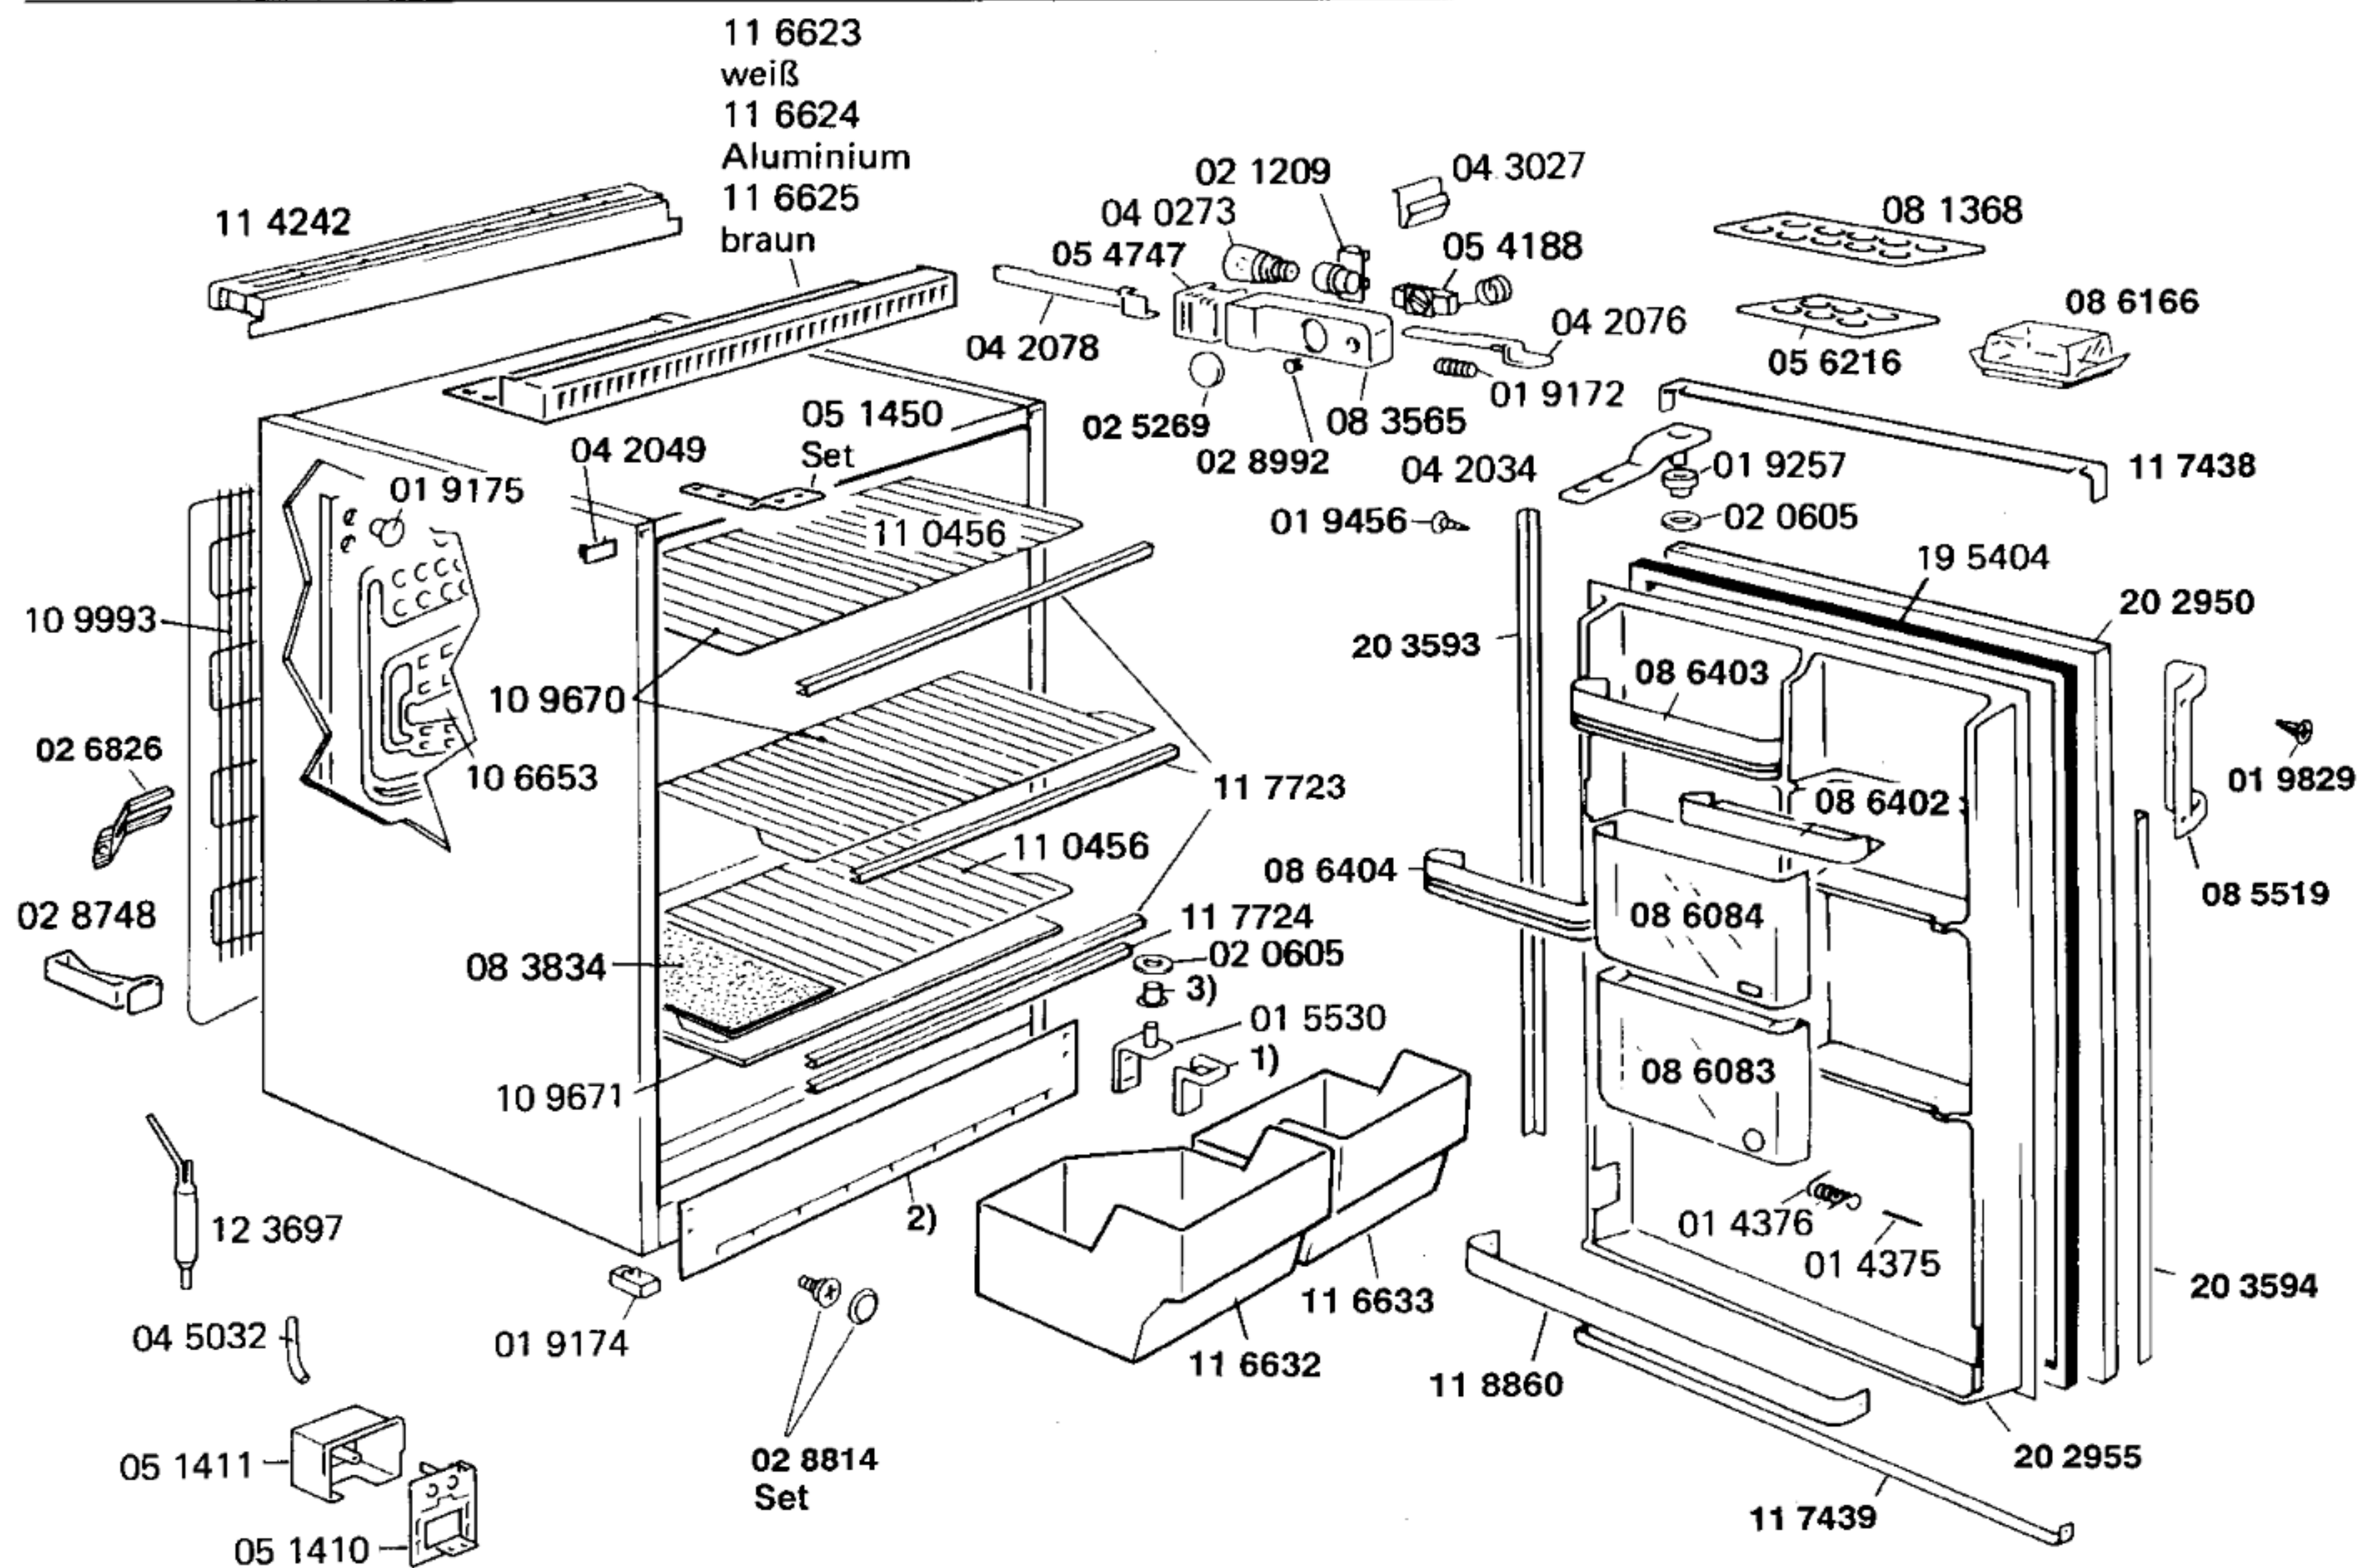

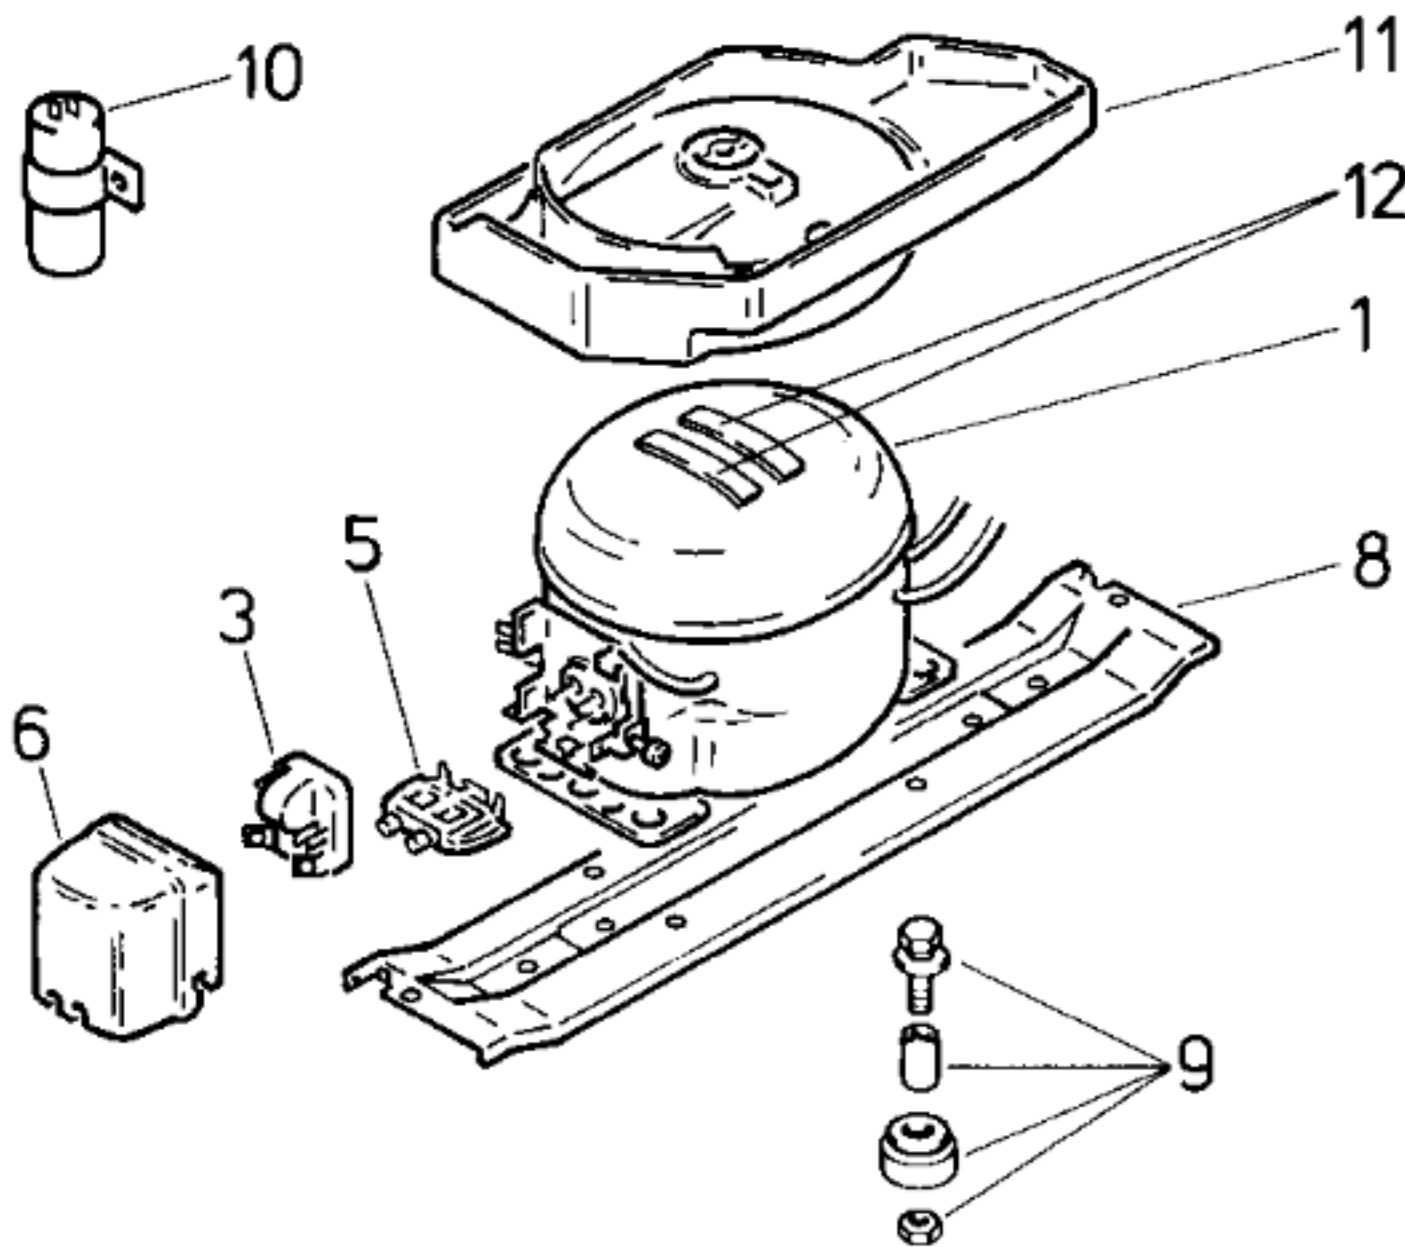

Pos.	NL1		
	Danfoss		
	TL 3 A		
1	14 0080		
2			
3	02 0108		
4			
5	02 1361		
6	05 1413		
7			
8	11 1567		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 3 A		
Förderleistung/Delivery/Débit		l/h	576	
Anlaufstrom/Starting current/Cour. de démarrage		A	7,2	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	33,2	
		Hi/aux Ω	16,7	
Temp.-Regler/Thermostat		M + 3		
Typ/Type		TF 57 FO		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	+ 4	+ 4
Valeurs de commutation		„aus“	-25	-12
(„abtauen“ od.)		„alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	95
Anschlußwert/Conn.load/Puiss. connectée		W	90	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		