



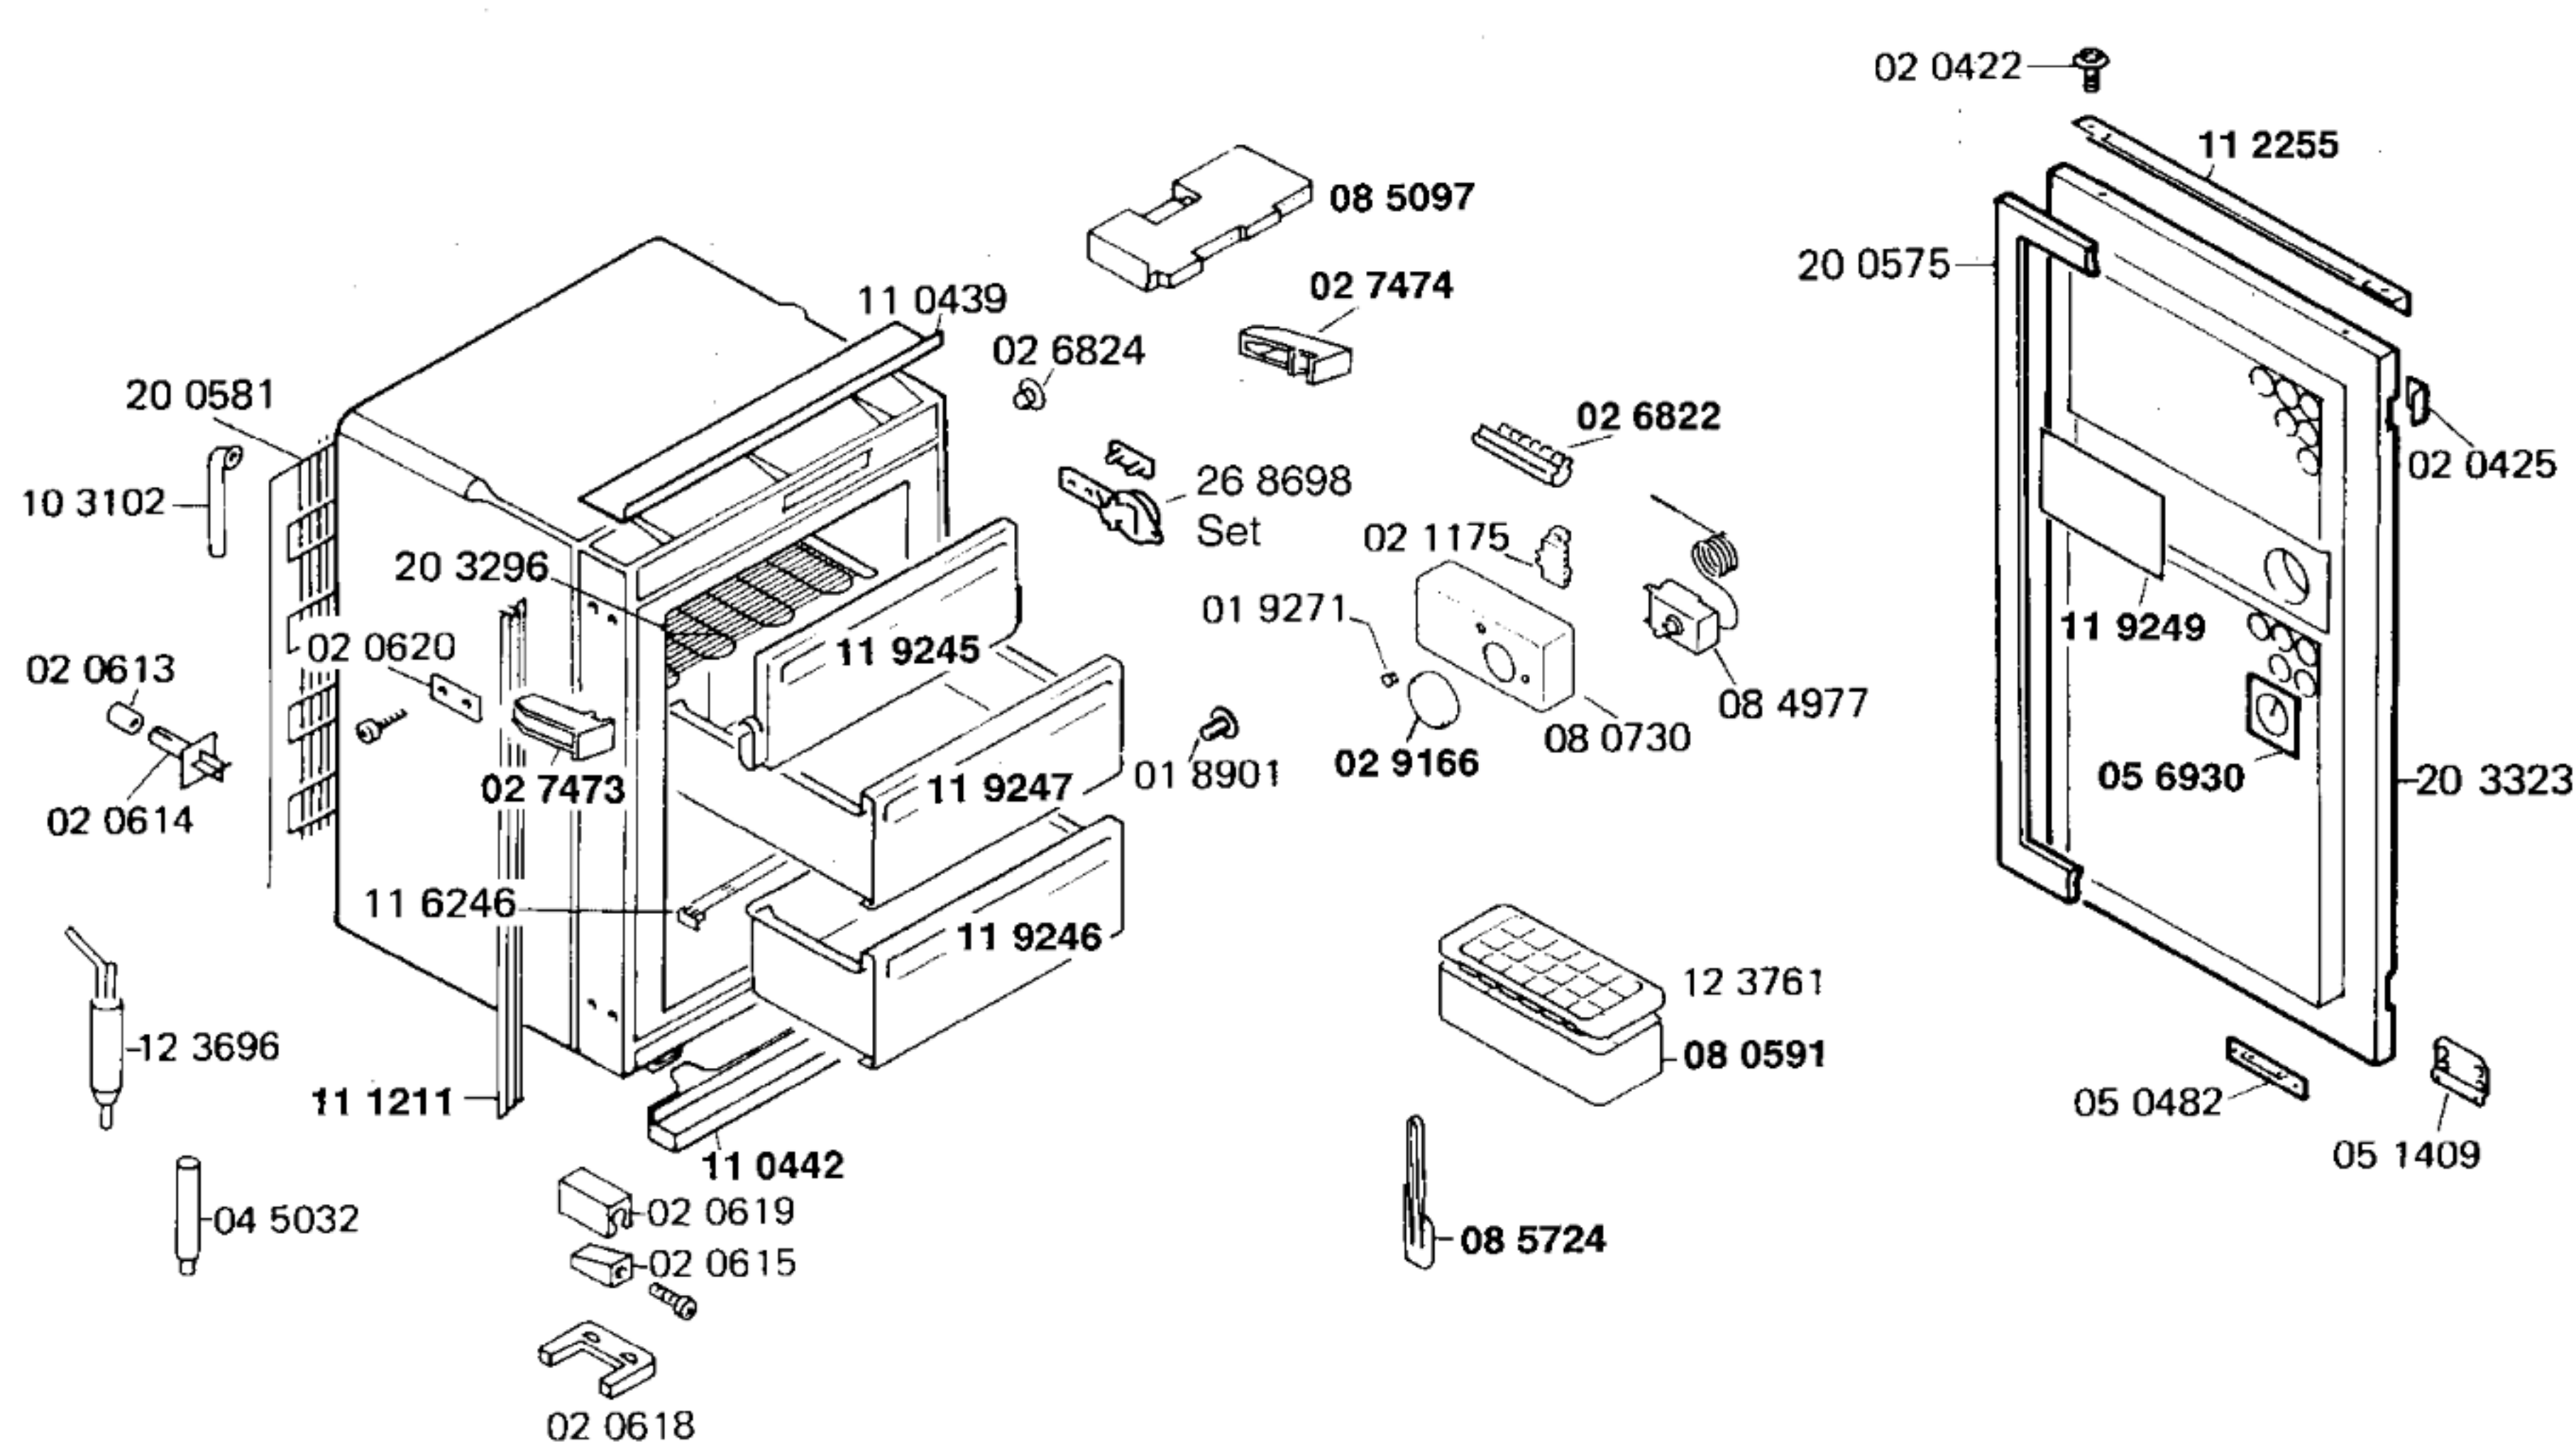

51 3634
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)

51 2737
Aufstellanweisung
(D,GB,F,I,NL,S,E,SF,N)

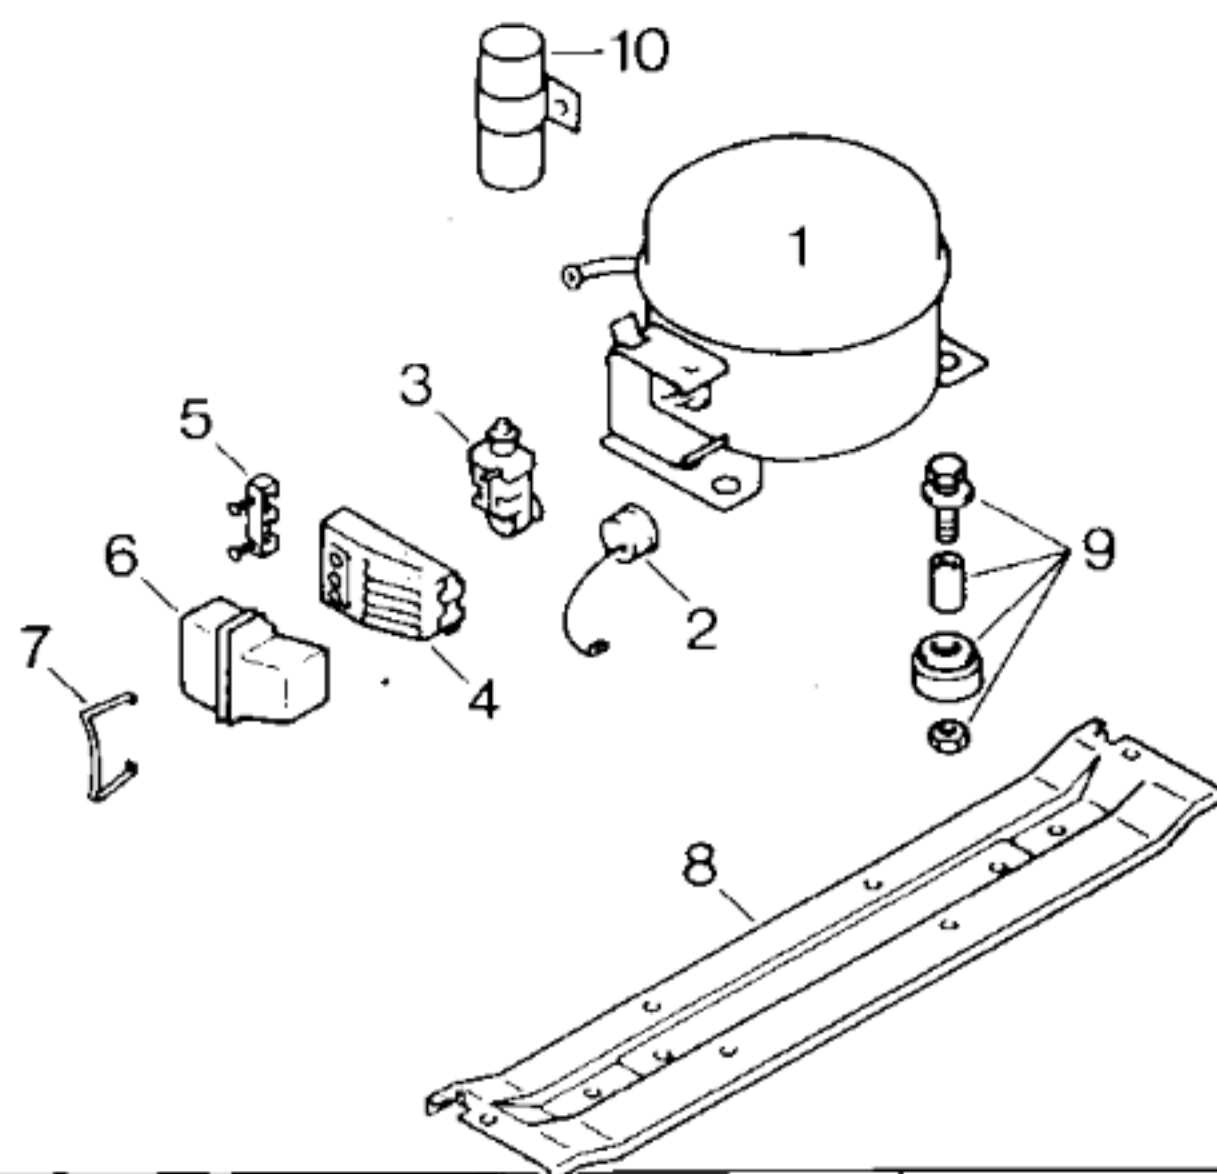

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Danfoss			
Typ/Type	TL 4 A			
Förderleistung/Delivery/Débit	V 695			
Anlaufstrom/Starting current/Cour. de démarrage	A 8,3			
Widerstand/Resistance/Résistance	Ha/main/prin. Ω 23,4			
	Hi/aux Ω 15,5			

Temp.-Regler/Thermostat	M & J			
Typ/Type	TF 57 SF 2			
Reglerstellung/Position	kalt warm			
Schaltwerte/Switching values/	- 24 - 16			
Valeurs de commutation	- 34 - 24			
(„abtauen“ od.)	- 19 - 12			

Füllmenge/Fill.quantity/Charge	R12	g	150	
--------------------------------	-----	---	-----	--

Anschlußwert/Conn.load/Puiss. connectée	W	110		
---	---	-----	--	--

Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			

Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			

Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

	F1			
Pos.	Danfoss			
	TL 4 A			
1	13 1064			
2				
3	02 0108			
4				
5	02 7310			
6	05 1413			
7				
8	11 0437			
9	05 0166			
10				
11				
12				
13				
14				