


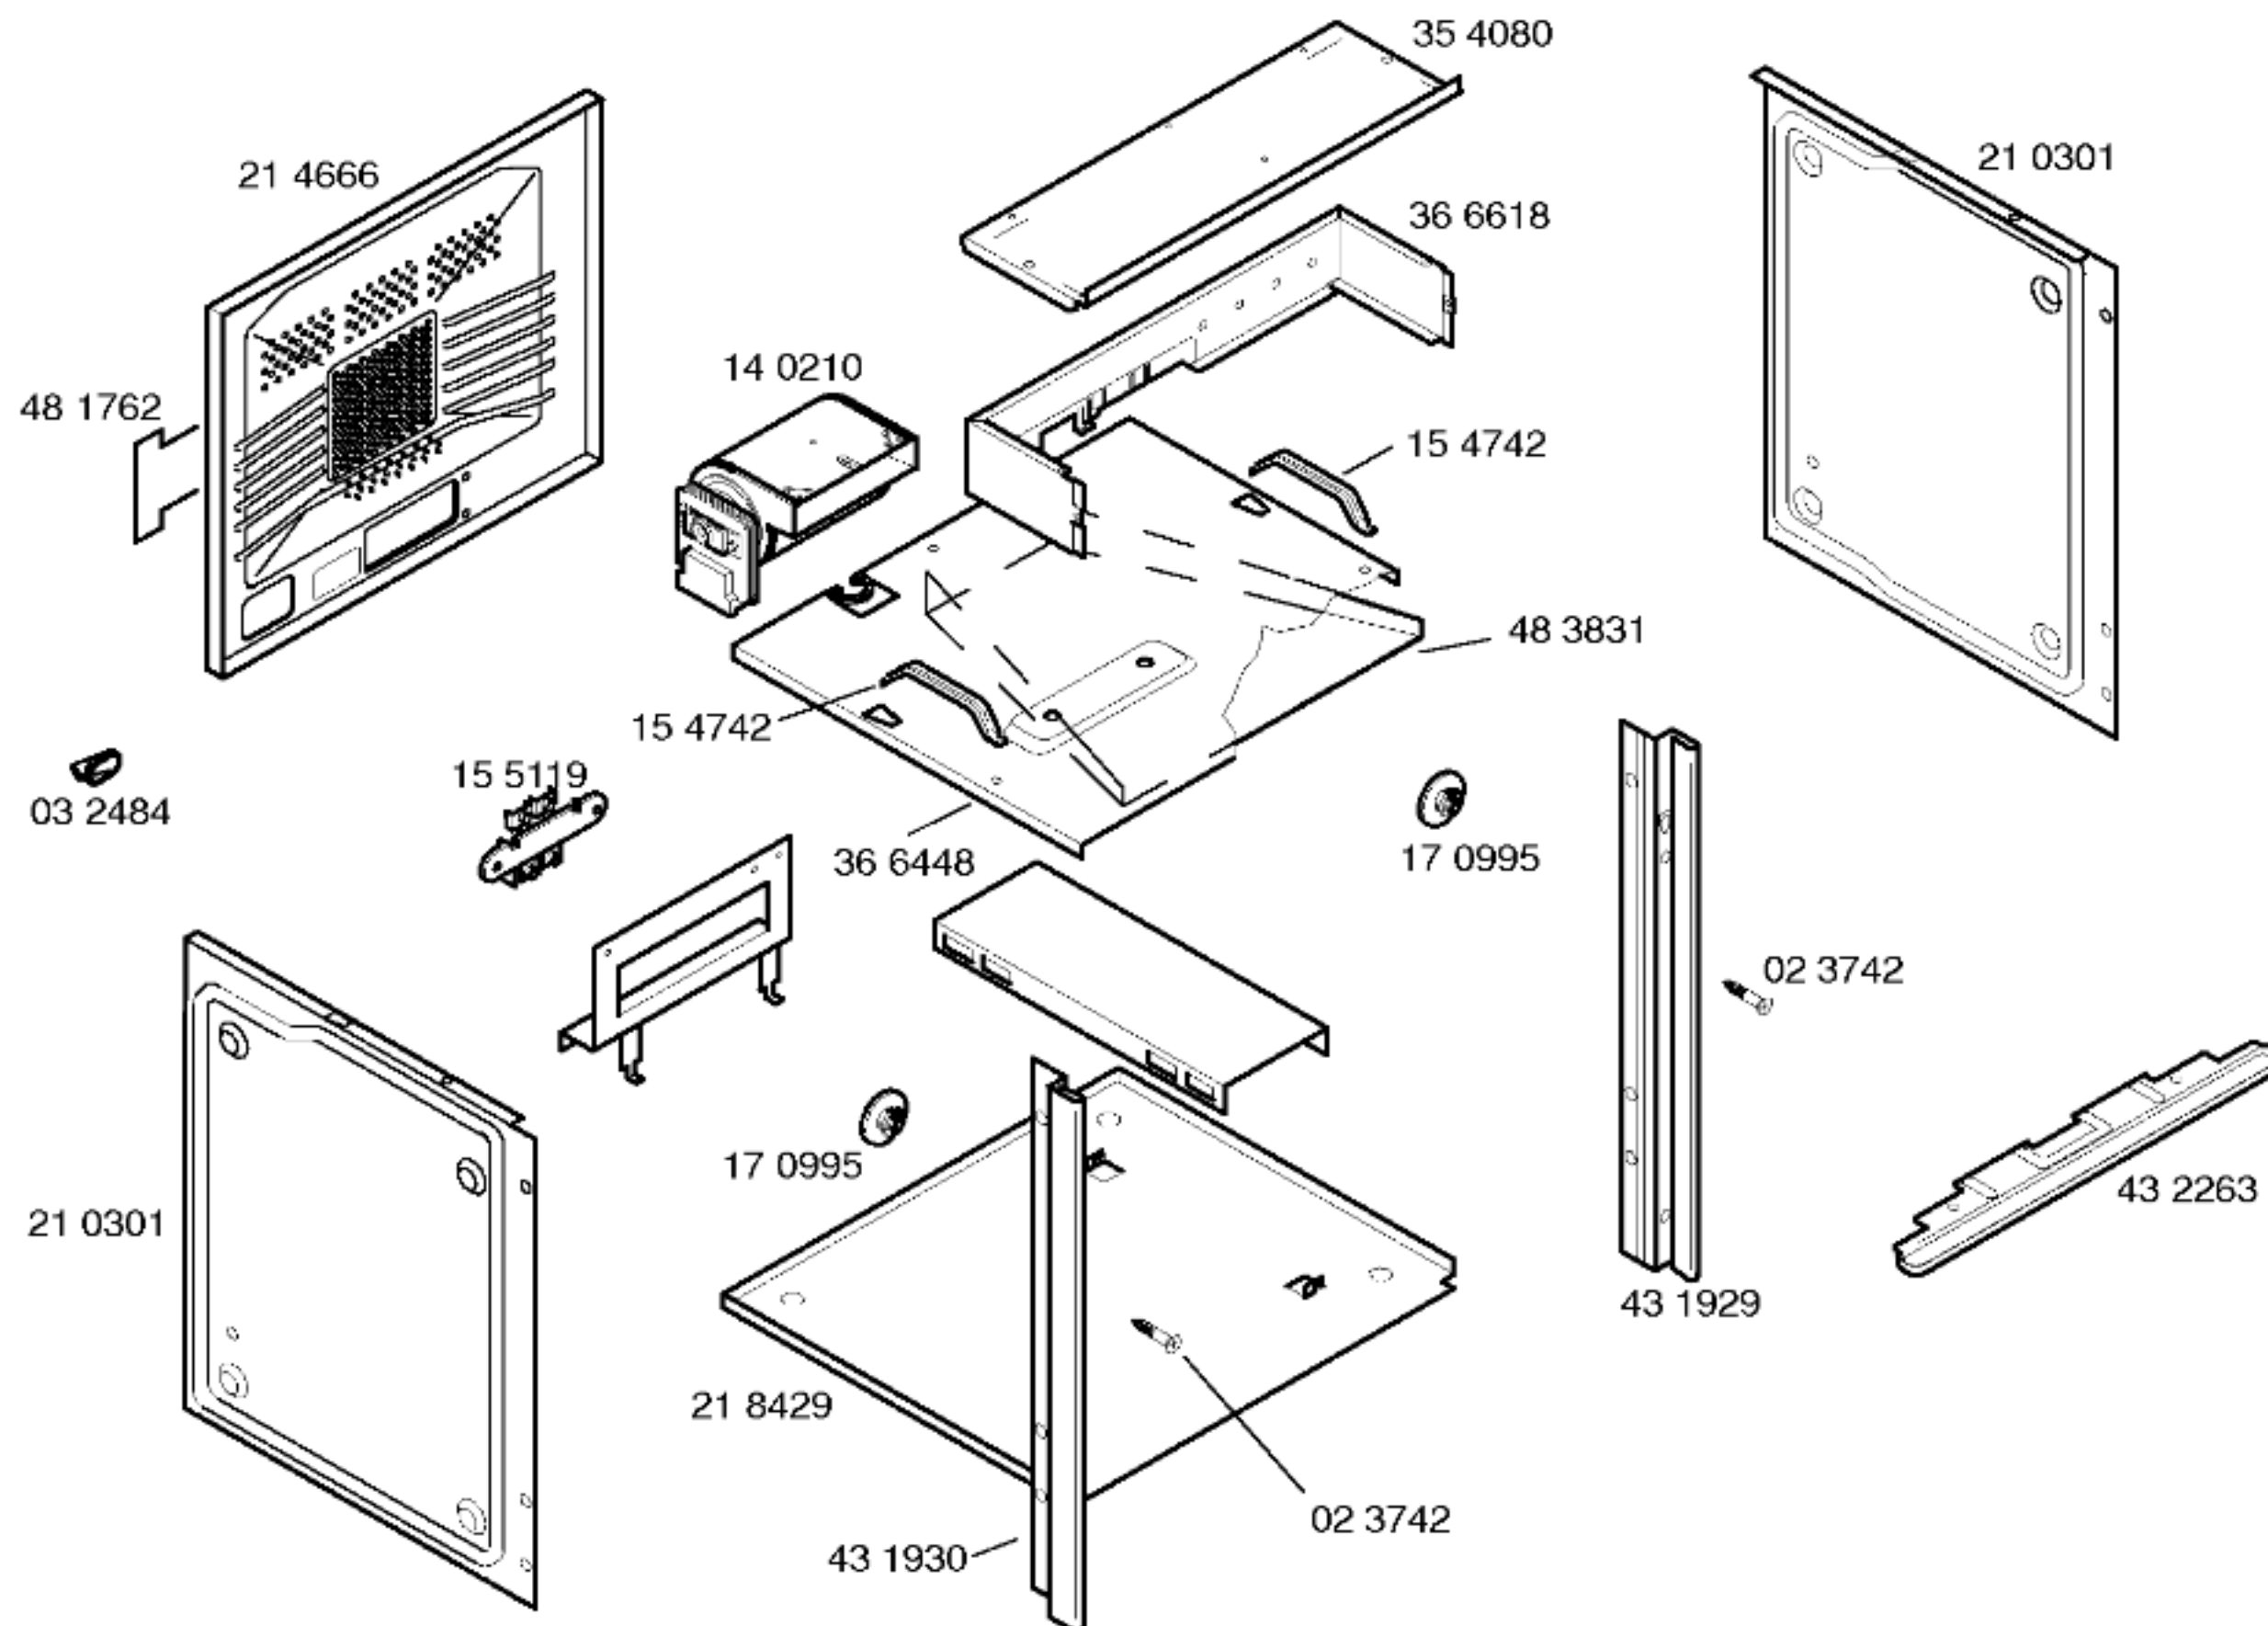


Gebrauchsanweisung
58 6061
V01
(de,en,fr,nl,it,es,el)
58 6062
V02, V03, V04
(de,en,fr,nl,it,es,el)
Montageanleitung
51 7991
(de,en,fr,nl,it,es,el)
Kochbuch
58 5533


Zubehör:

Dampfgarer
N8640X2


Bratrost engmaschig
Z1440X0
Bratrost gekröpft
Z1430X0
Backblech, Alu
Z1330X0
Backblech Email
Z1340X2
Bratenblech
Z1510X2
Brotbackstein
Z1910X0
Grillpfanne u. Bratrost
Z1230X2
Auflaufform
Z1270X2

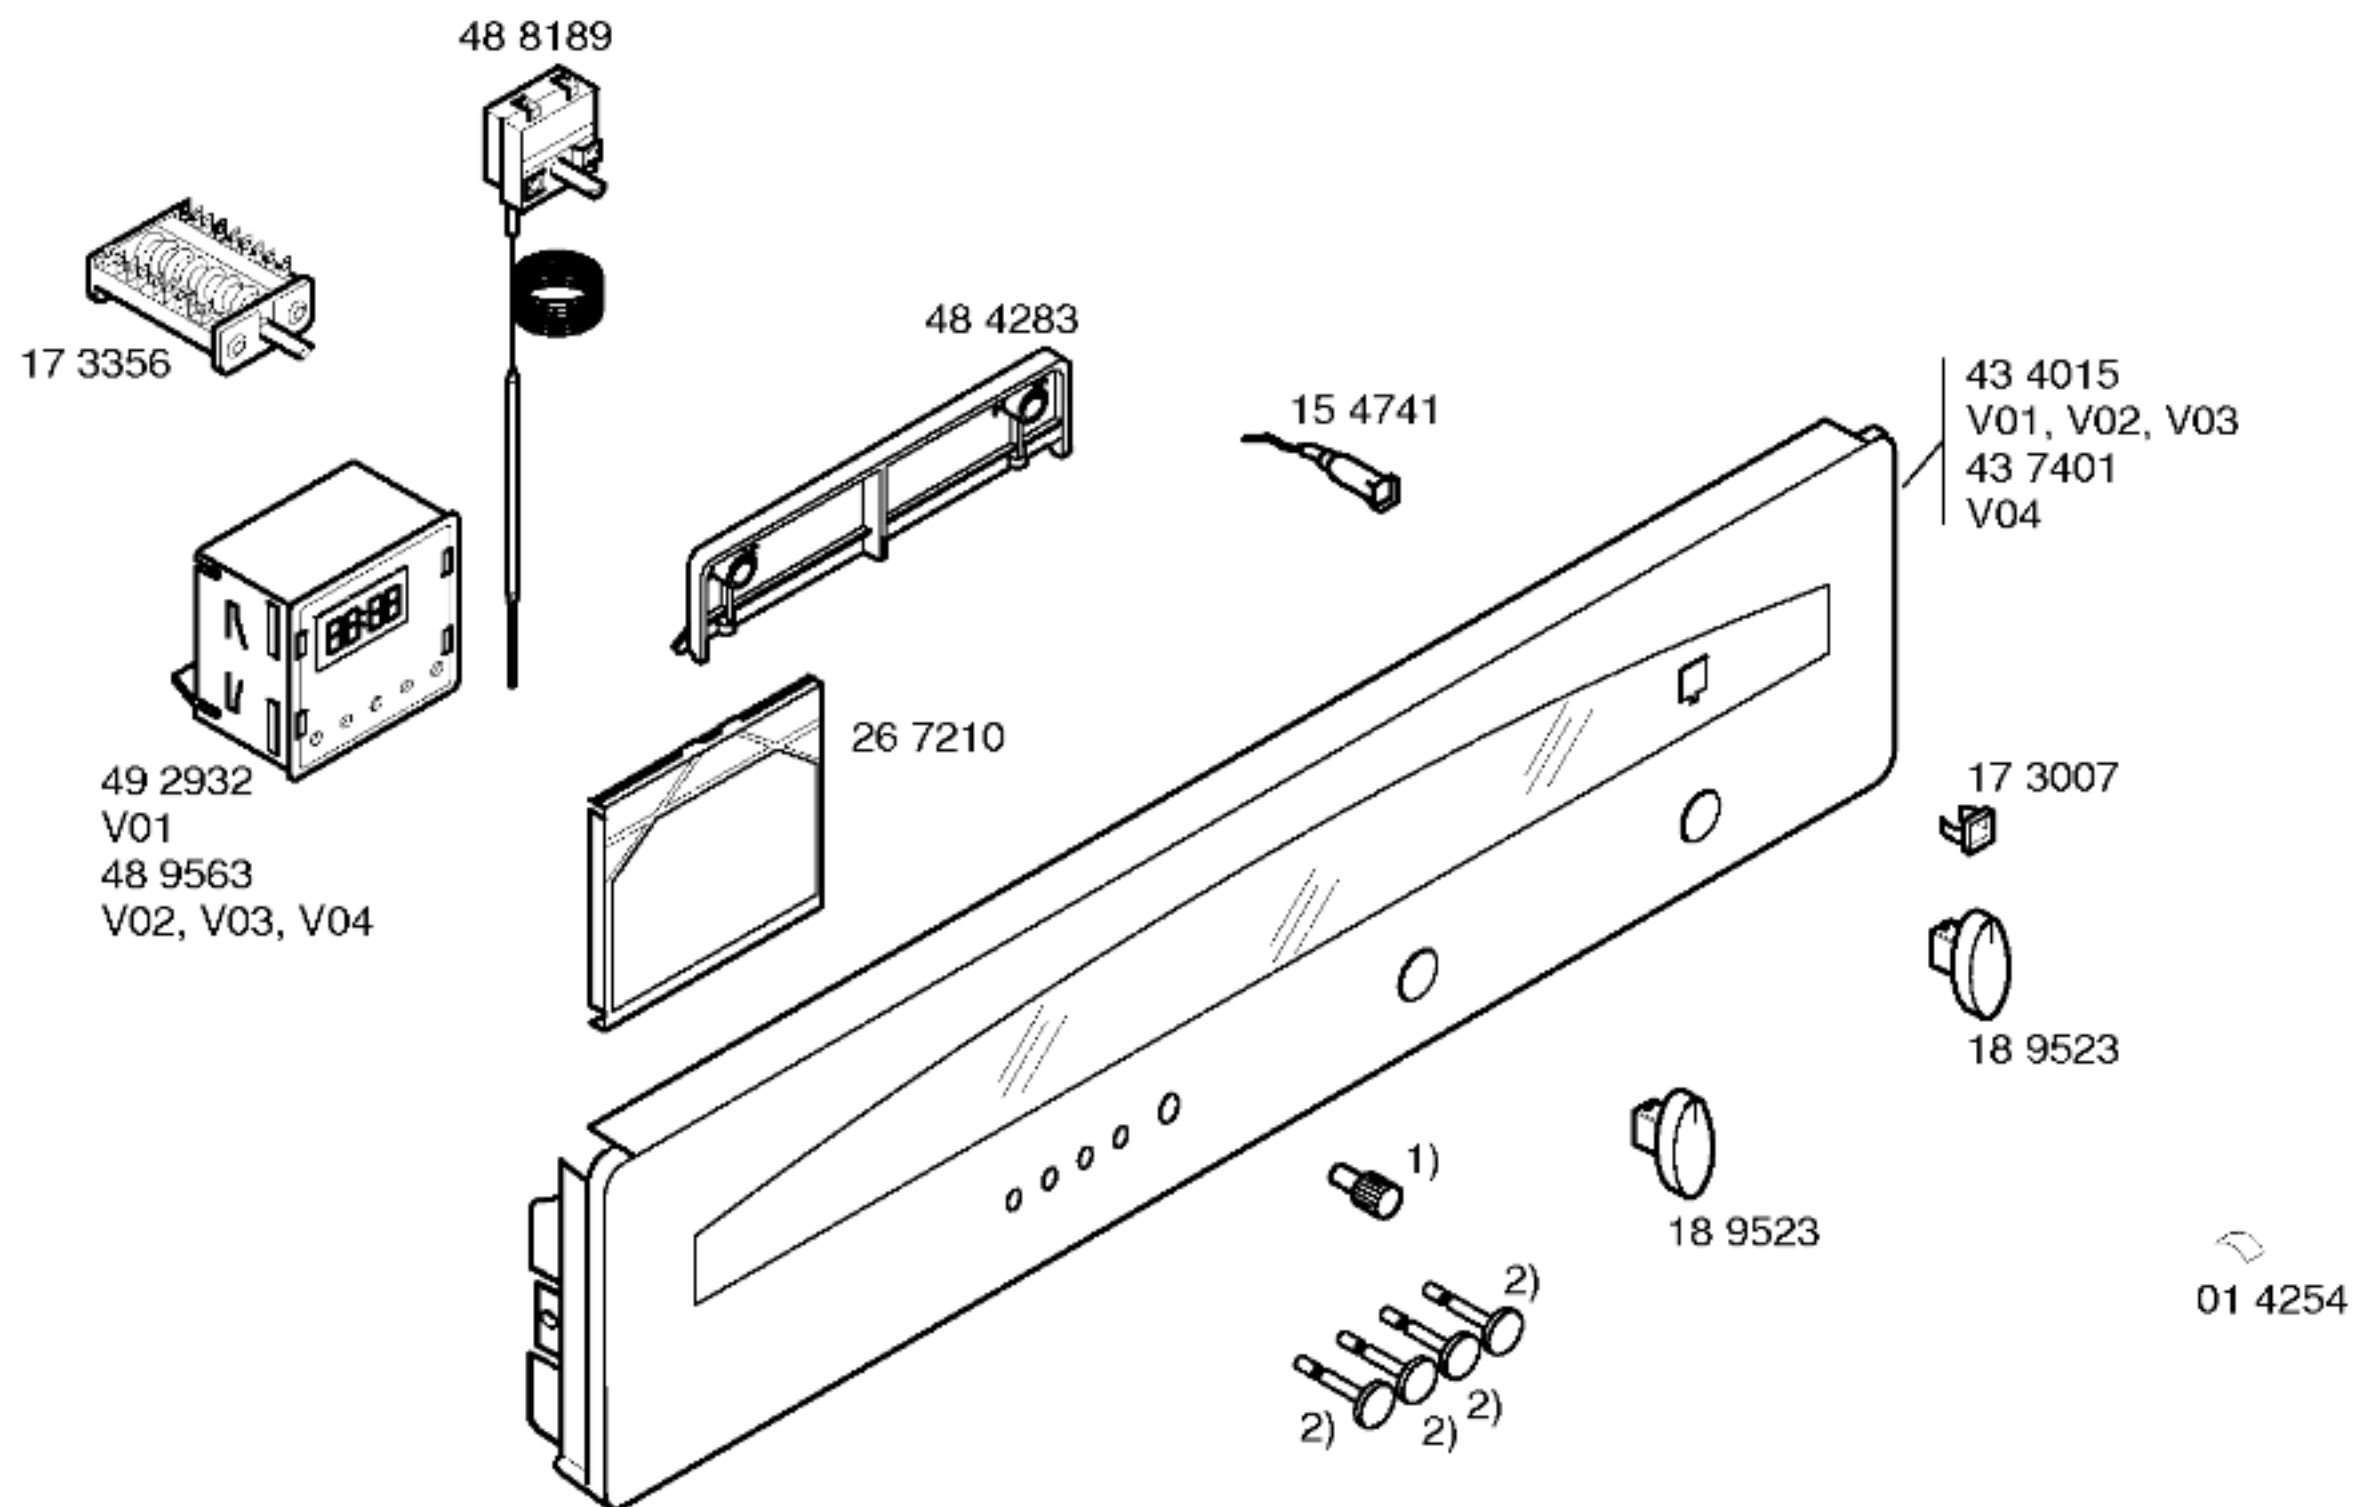

- 1) 18 3662
 V01
 41 8855
 V02, V03, V04
- 2) 18 3661
 V01
 18 2294
 V02, V03, V04

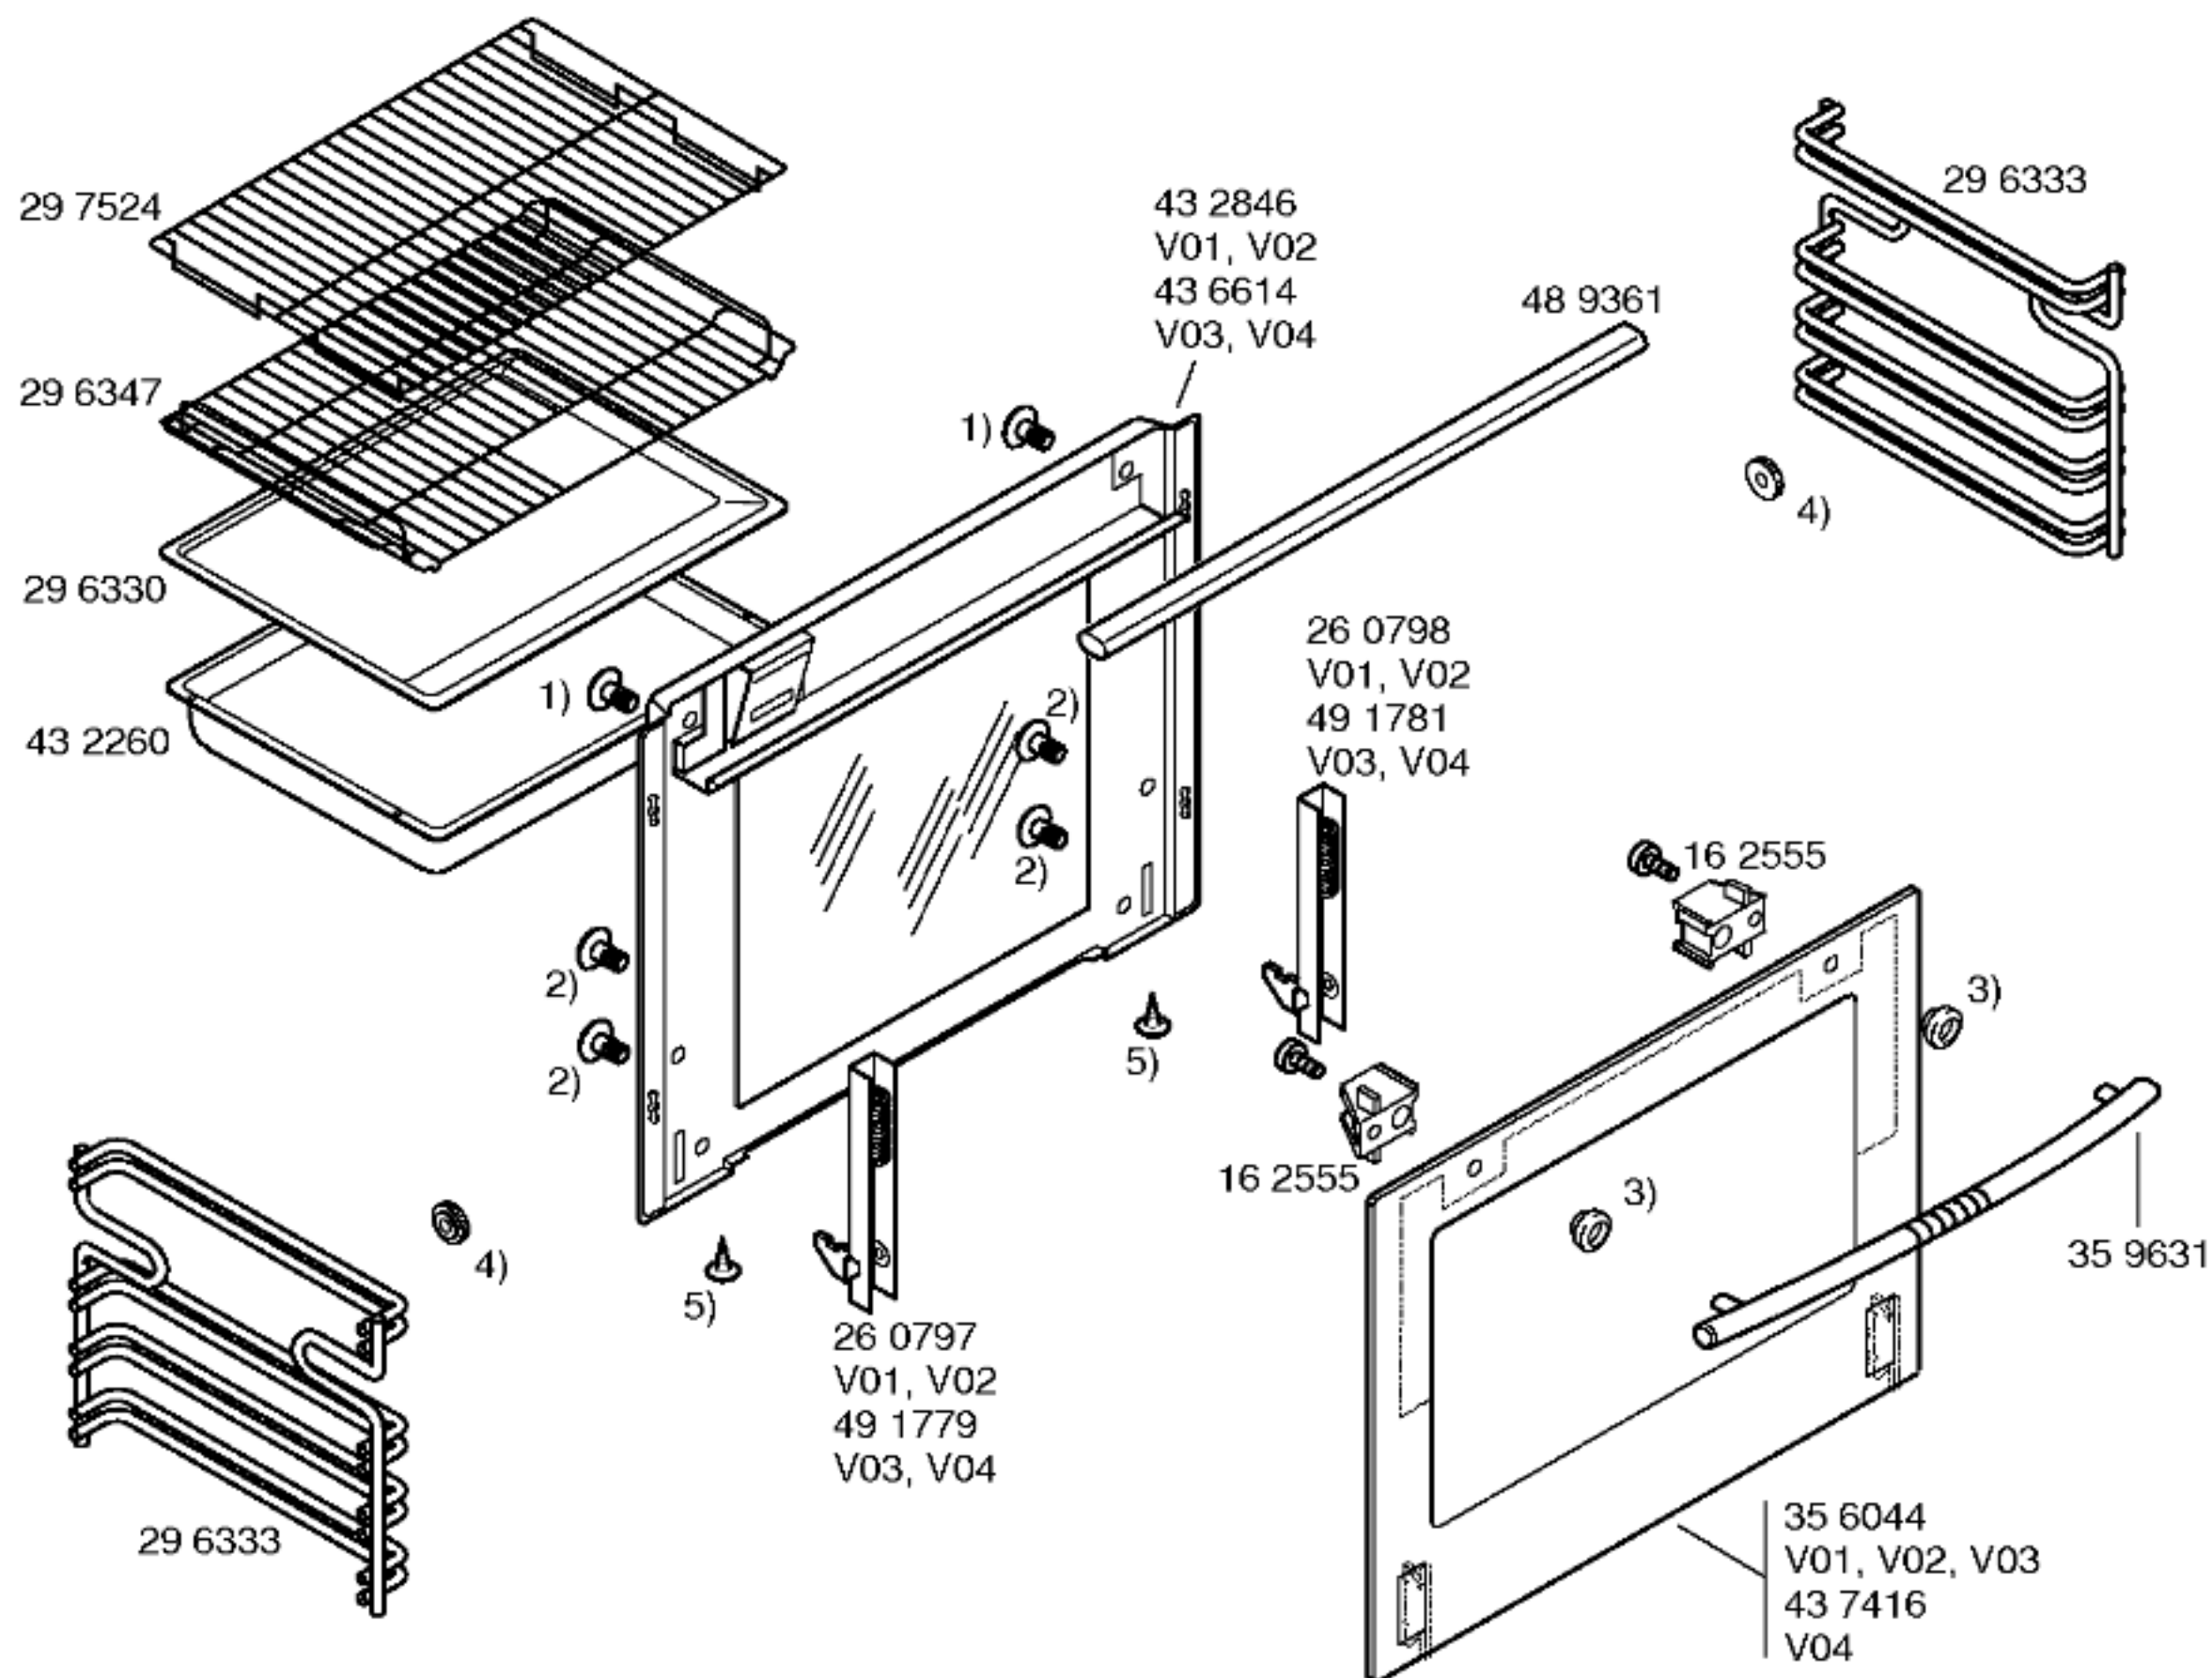

- 1) 15 4762
- 2) 15 4763
- V01, V02
- 17 2646
- V03, V04
- 3) 17 2645
- 4) 02 6593
- 5) 16 5917

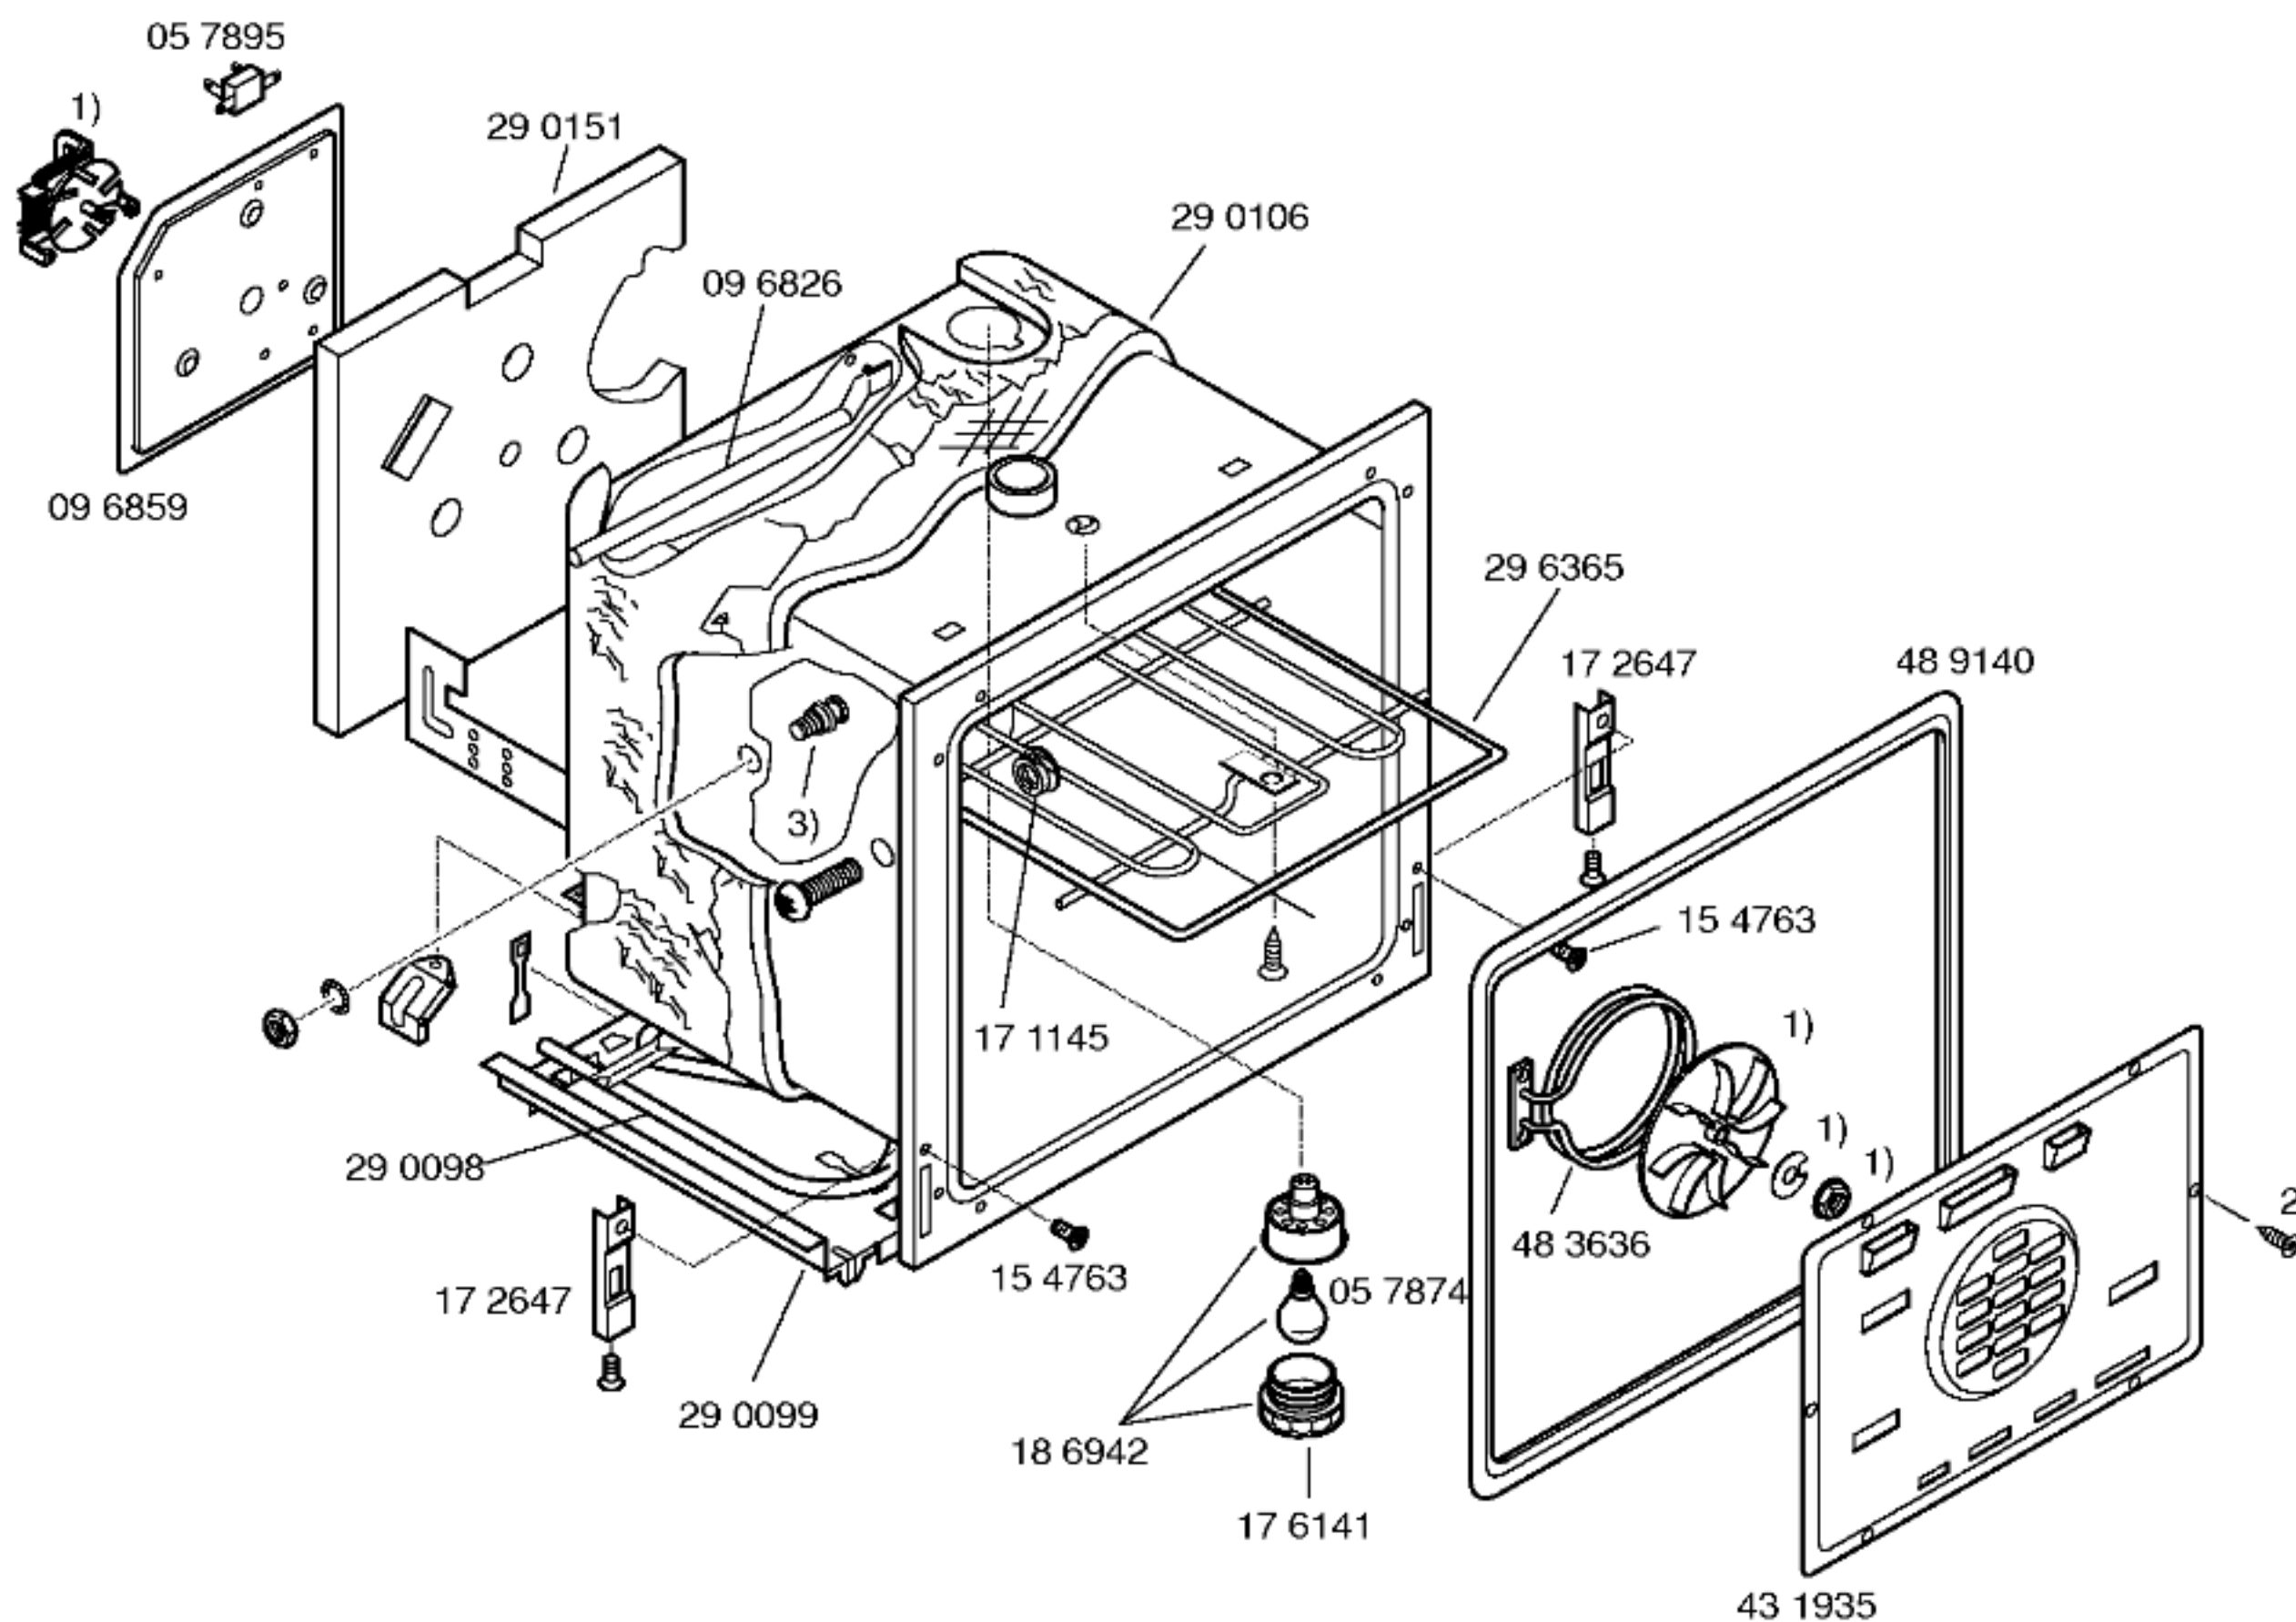

- 1) 26 1674
kompl.
- 2) 41 8562
- 3) 17 1146