




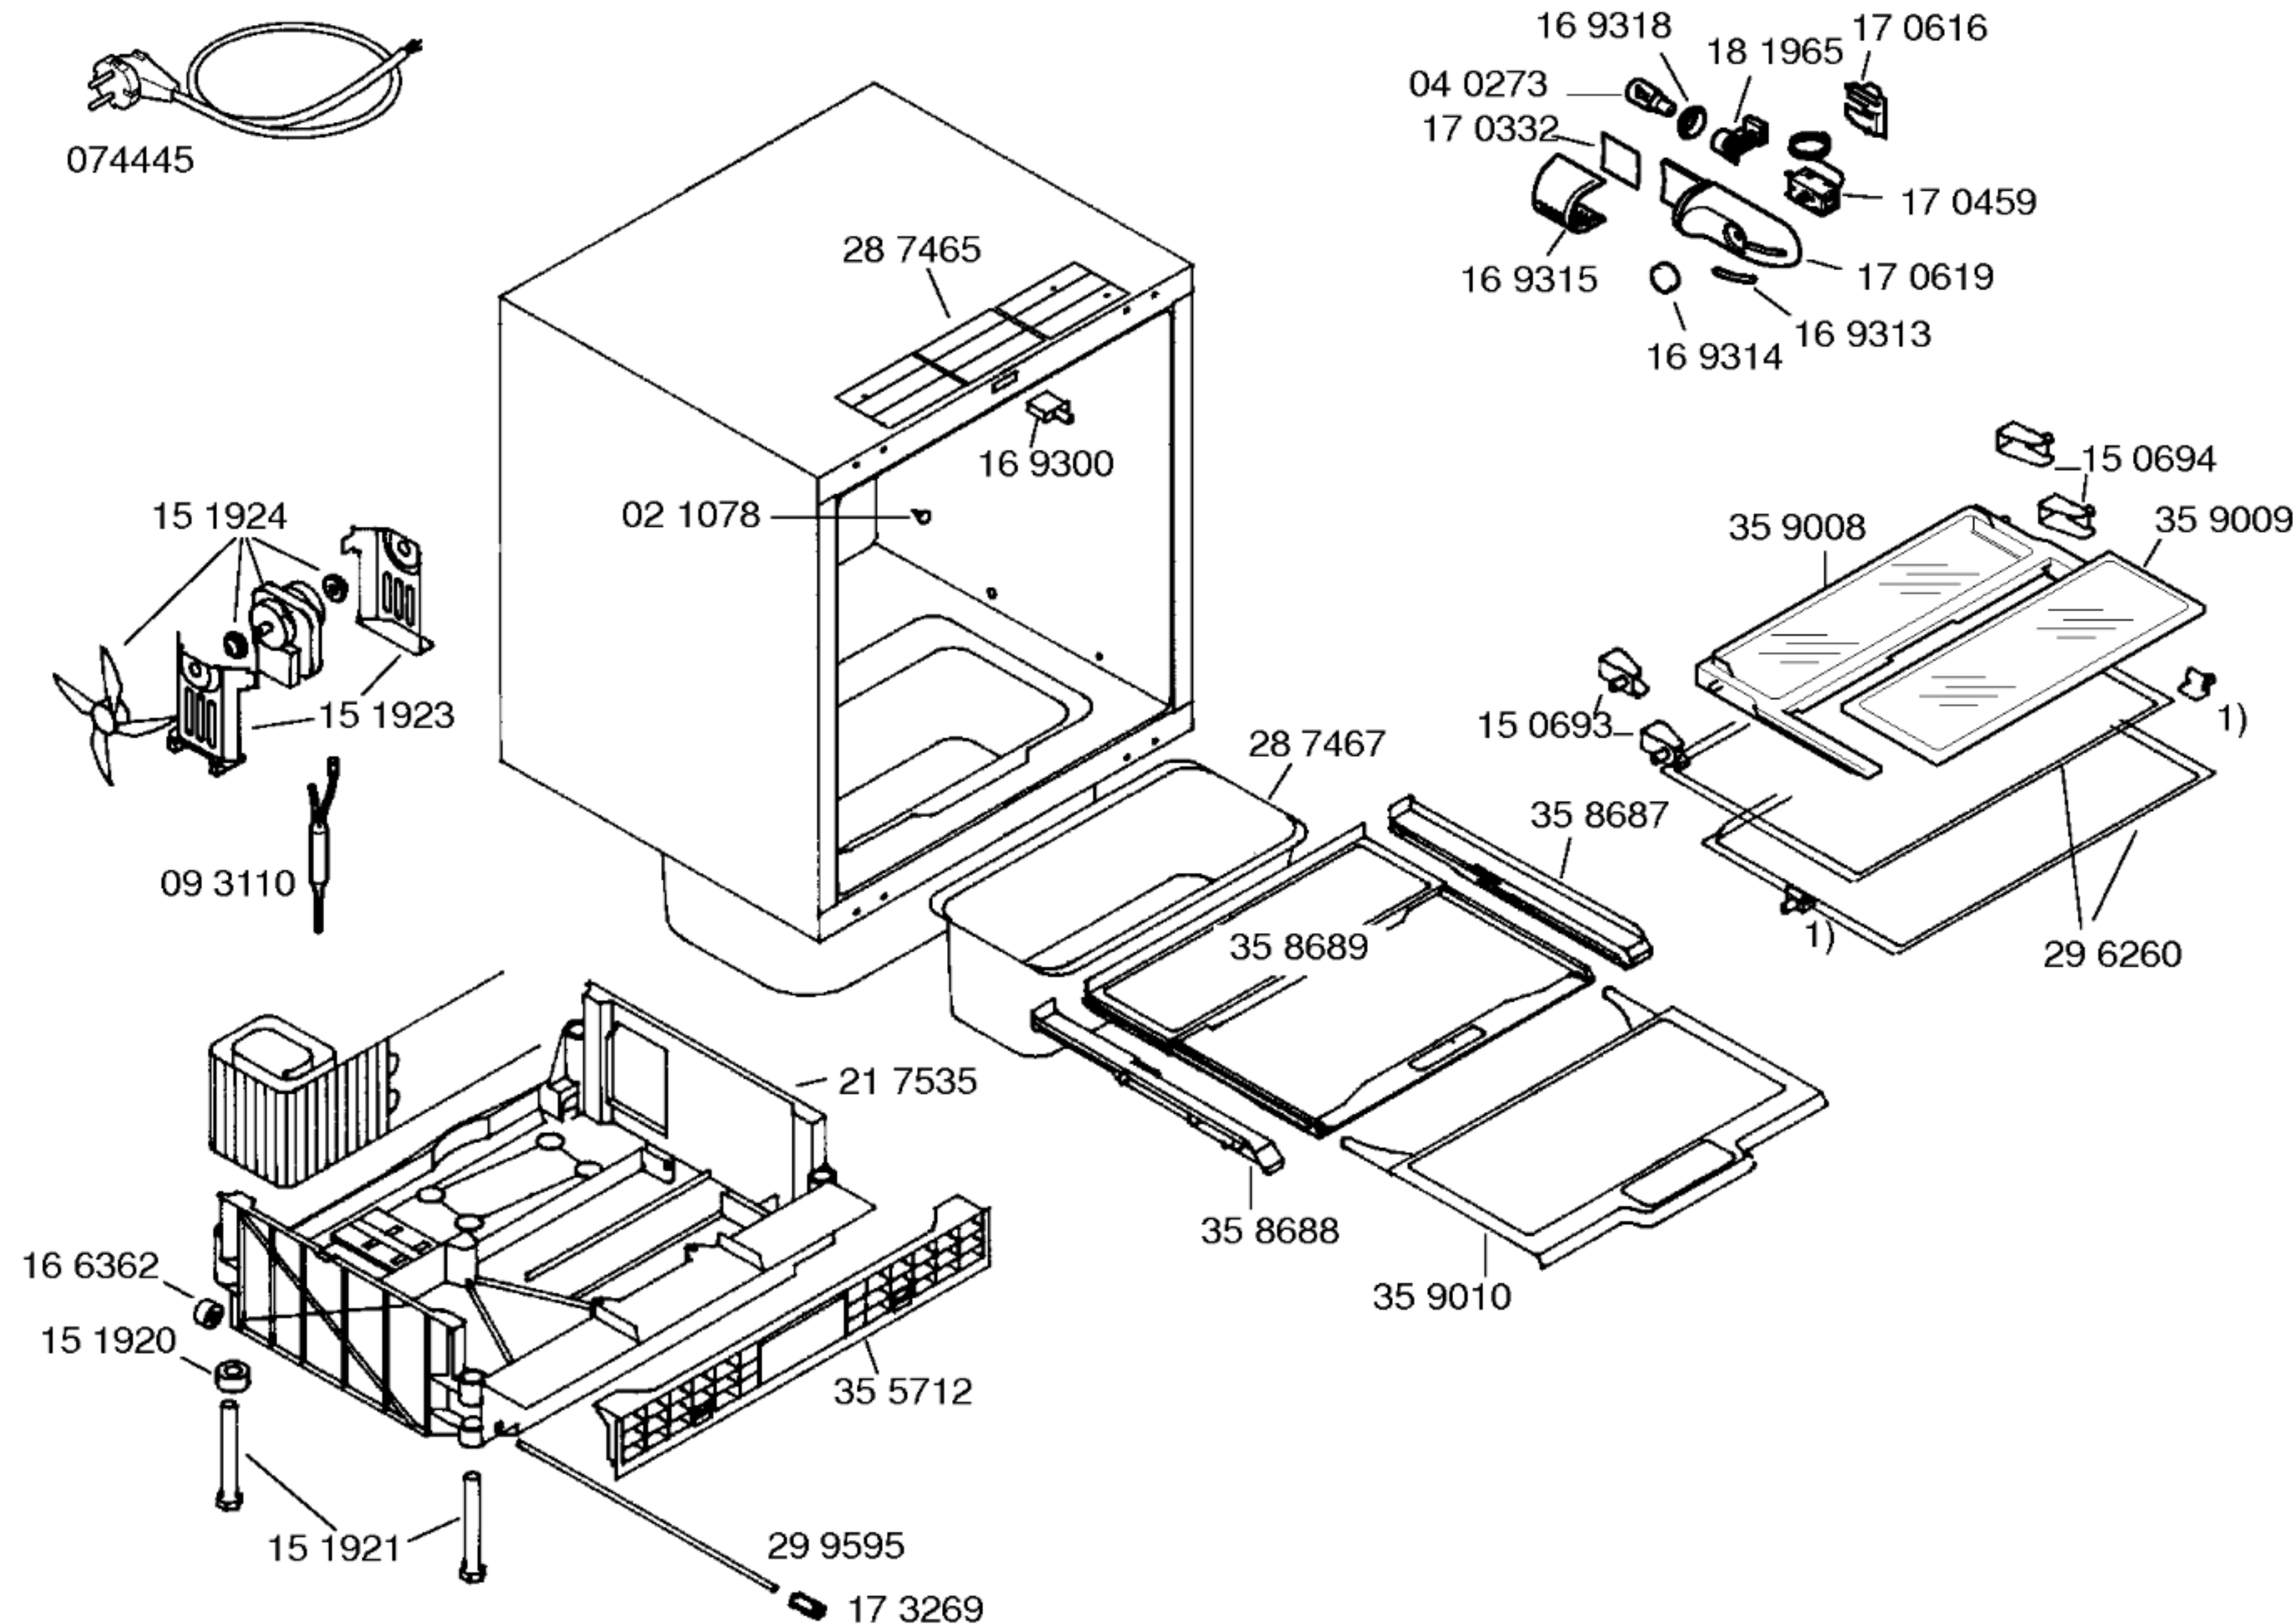

Gebrauchsanweisung
52 6323
Montageanleitung
52 6094
Beistellsatz
26 7188

1) 16 5789

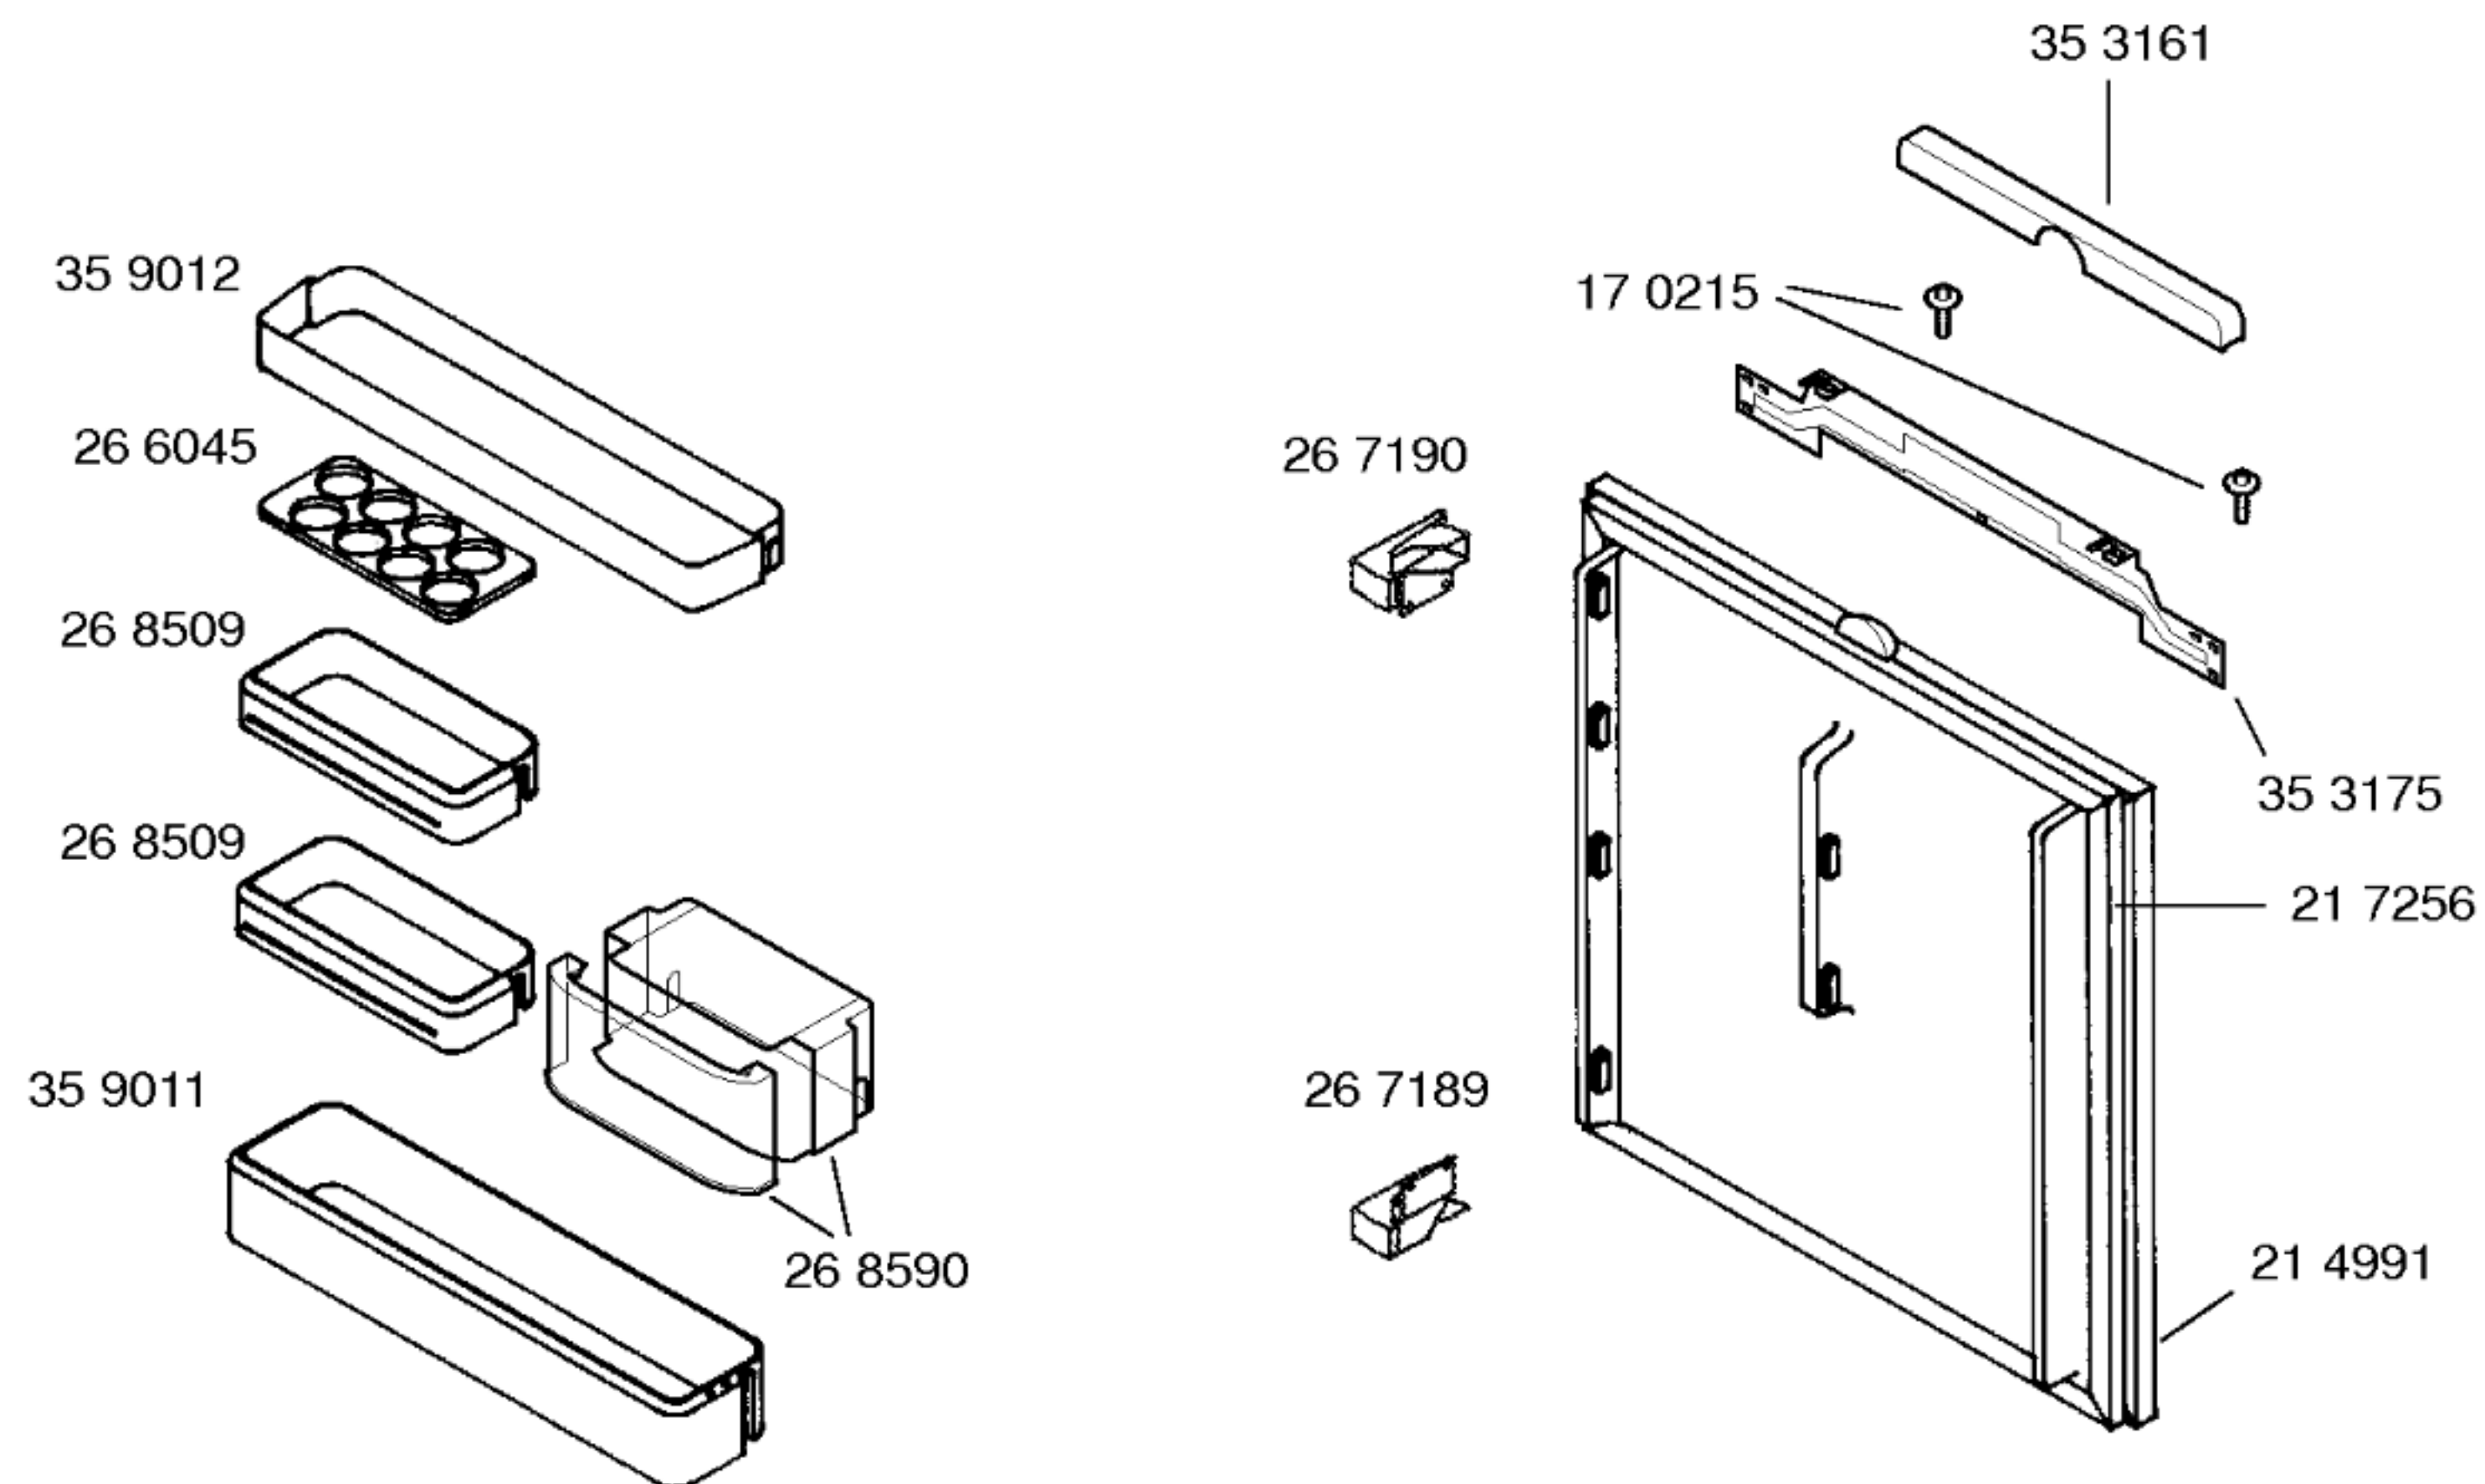

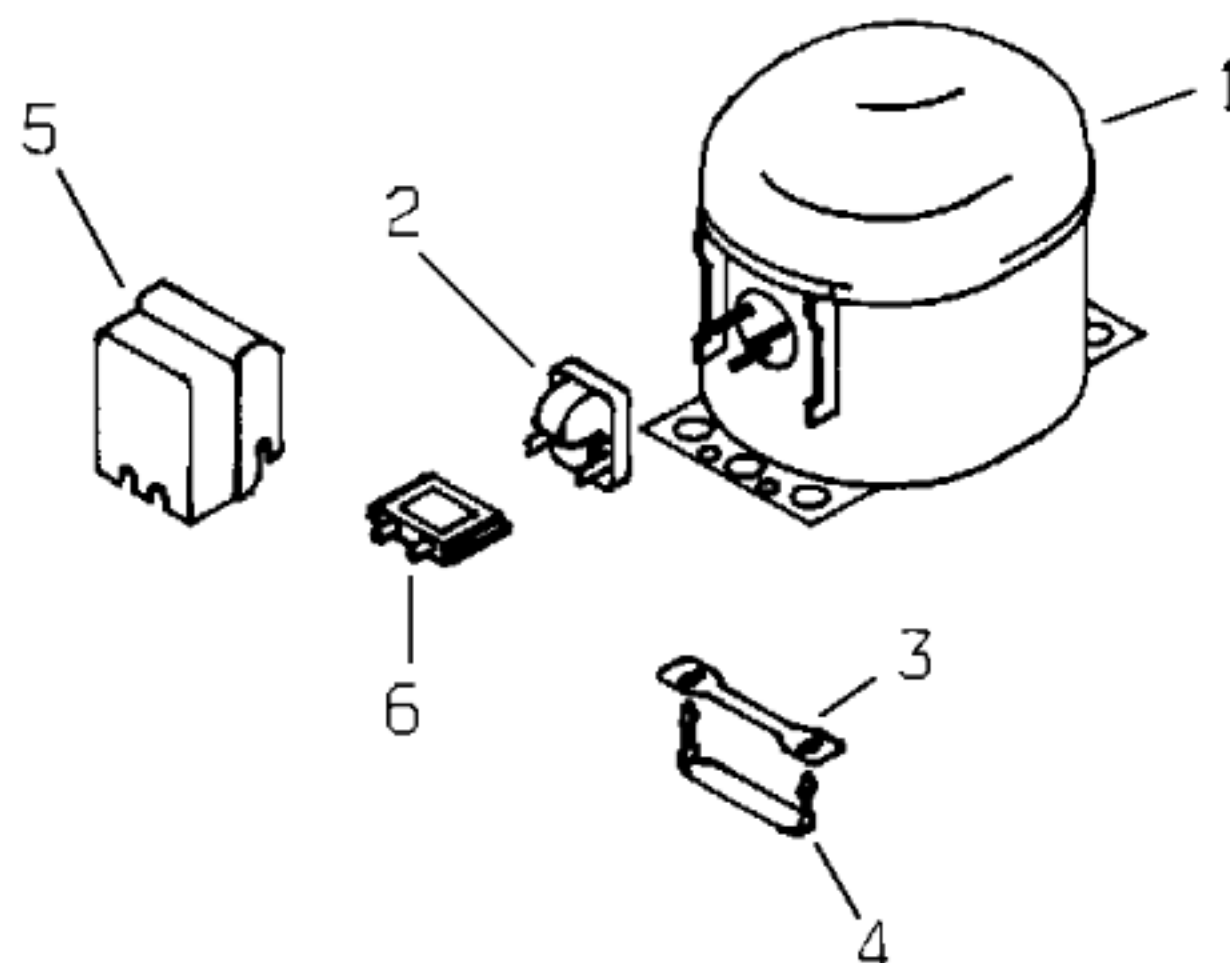

Pos.	V01, V02	V03, V04	
	Danfoss	Goldstar	
	TLES 6 KK2	NDA62NAEM	
1	14 1905	14 2037	
2	15 1055	17 0743	
3	15 1919	15 1919	
4	15 1918	15 1918	
5	15 1072	17 0744	
6	15 0760	17 0745	
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Danfoss	Goldstar	
Typ/Type	TLES 6 KK2	NDA62NAEM	
Förderleistung/Delivery/Débit	l/h	1026	
Anlaufstrom/Starting current/Cour de démarrage	A	7,5	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	25,7
	Hi/aux	Ω	15,7
Temp.-Regler/Thermostat	Ranco		
Typ/Type	K 59		
Reglerstellung/Position	kalt	warm	
Schaltwerte/Switching values/	„ein“	+5	+5
Valeurs de commutation	„aus“	-28	-17
	(„abtauen“ od.)	„alarm“	
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W	68	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω	MES F61-10	
		680	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild