


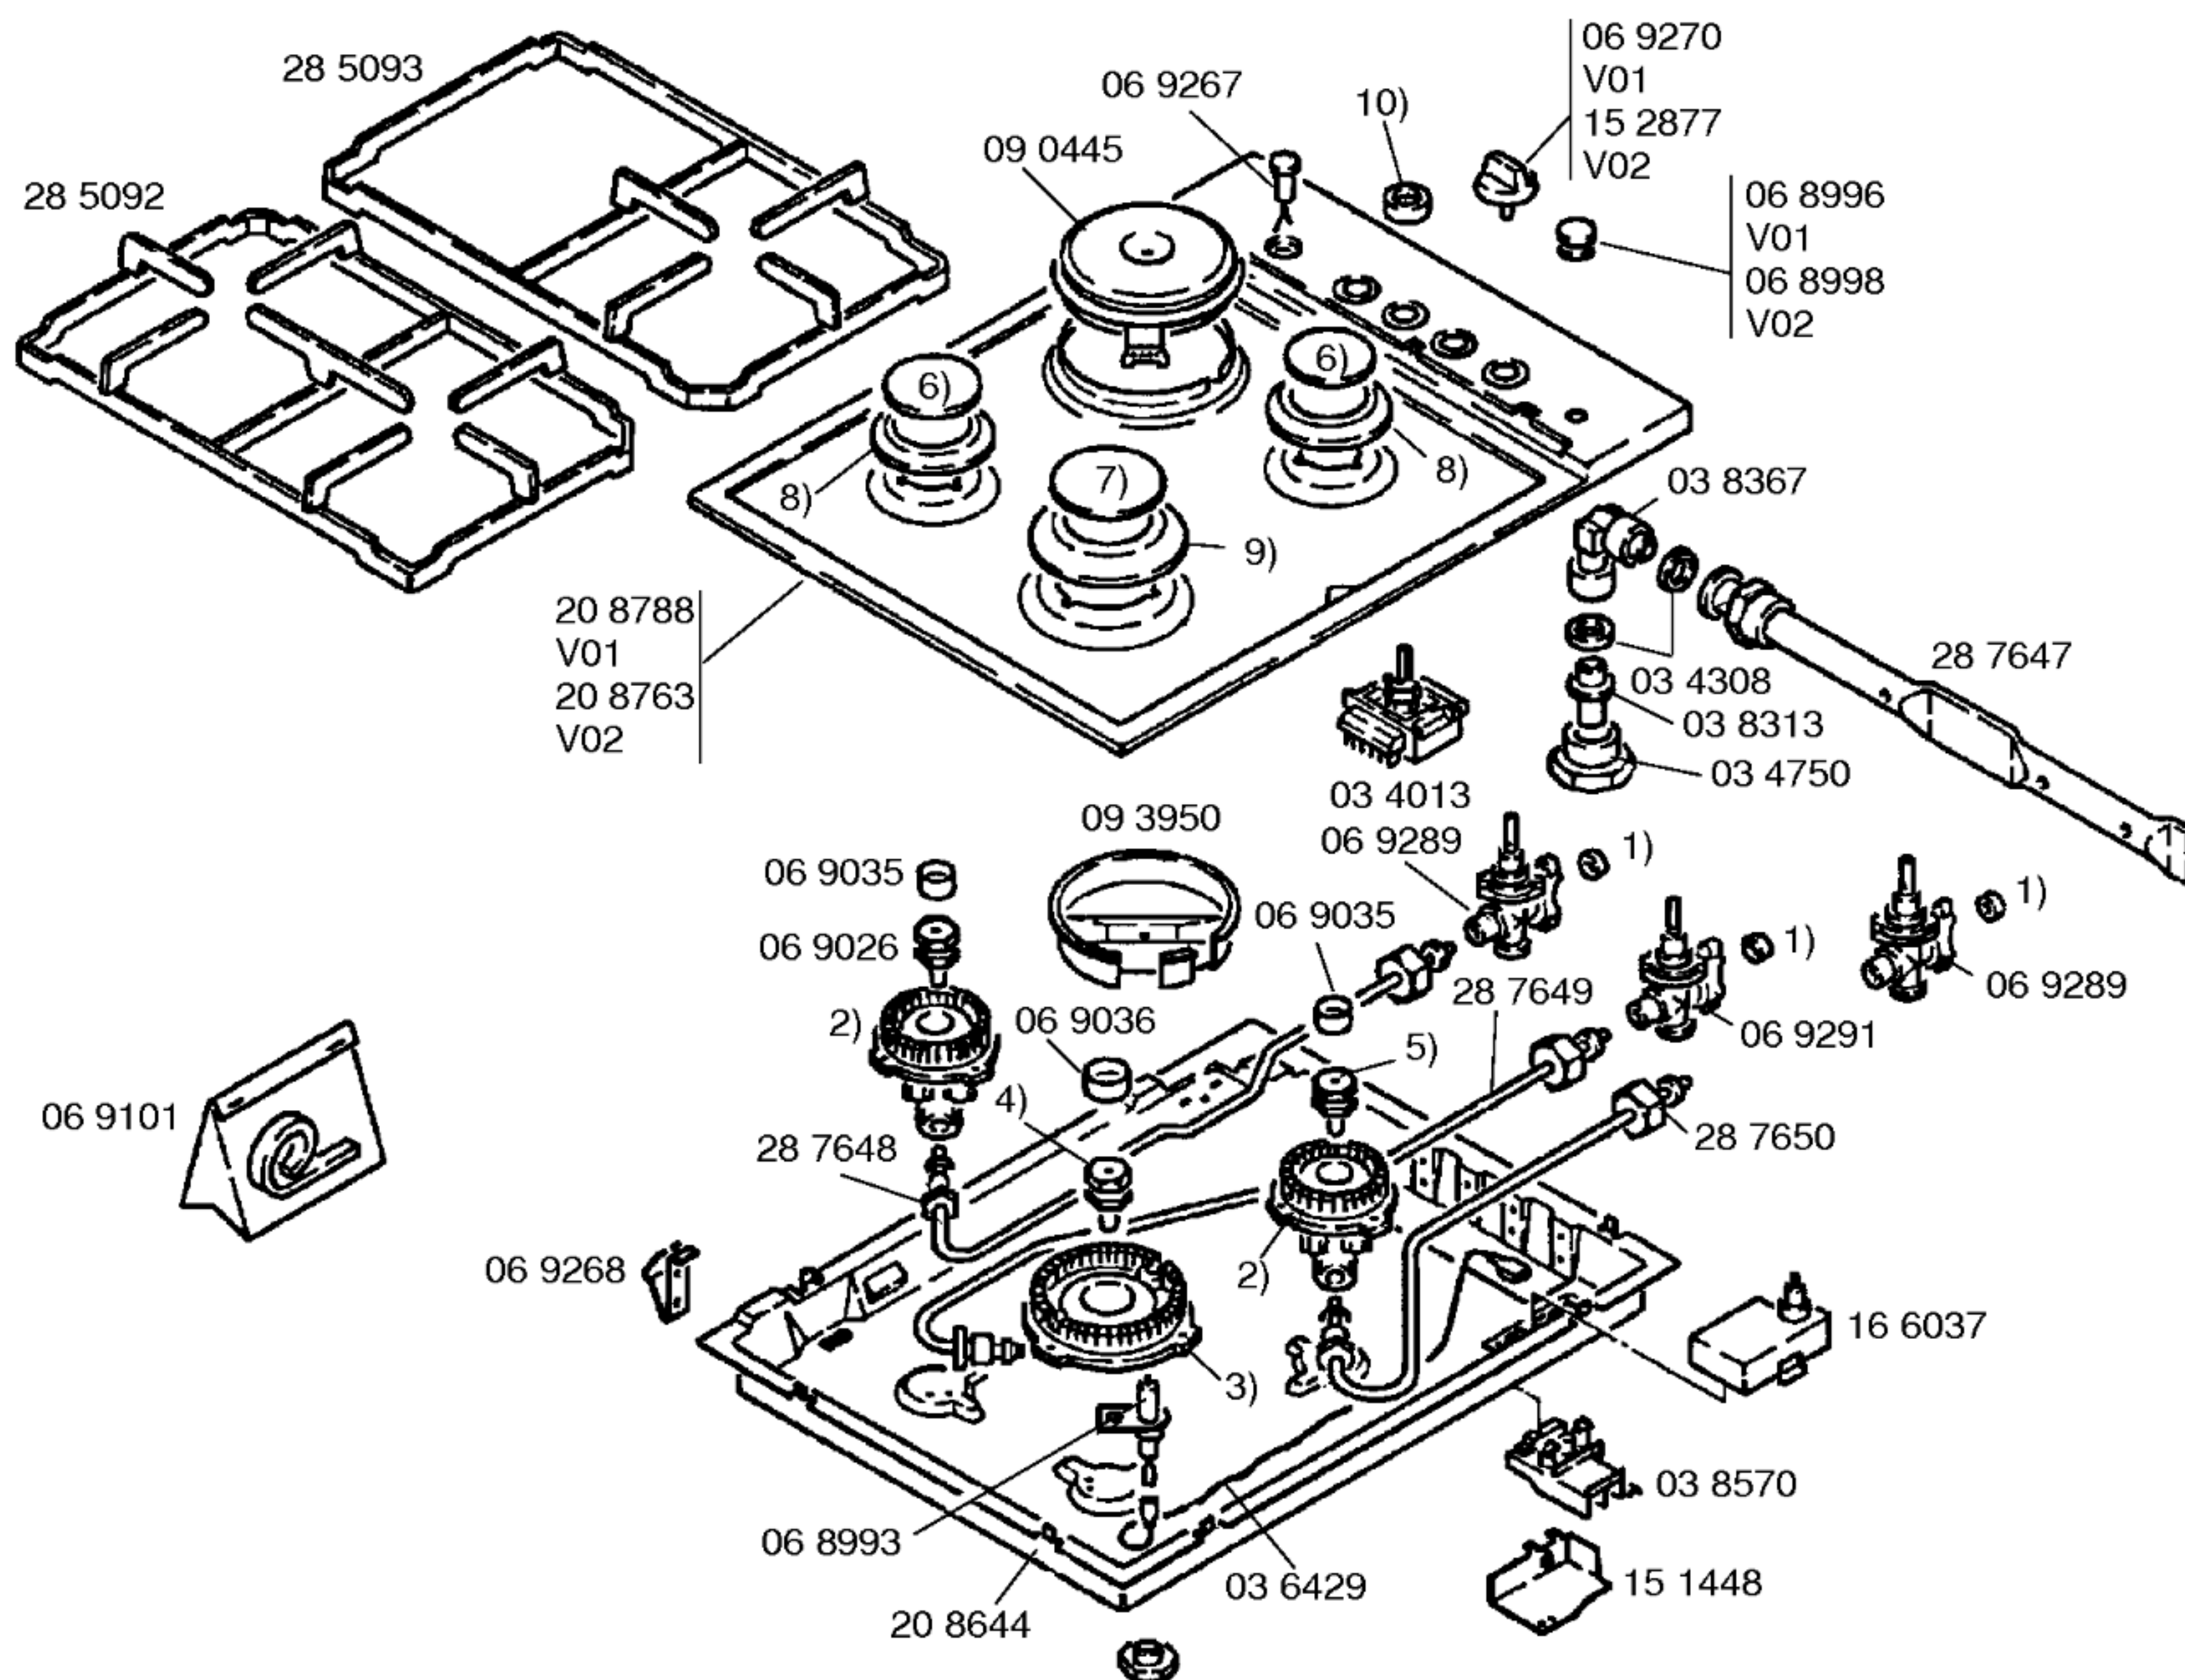

Libro de instrucciones
51 6572
(E, GB, P)

Injectores gas natural
06 9027
(3 kw)
06 9031
(1,7 kw)

- | | |
|-----|---------|
| 1) | 03 6011 |
| 2) | 09 4166 |
| 3) | 09 4165 |
| 4) | 03 4003 |
| 5) | 03 4002 |
| 6) | 06 9037 |
| 7) | 06 9033 |
| 8) | 06 4073 |
| 9) | 06 4072 |
| 10) | 06 9428 |
| | V01 |
| | 06 8989 |
| | V02 |