


KÜHLAUTOMAT KE 2562 -D1, KE 256316-CH2
KE 256216-CH1, KE 256358-F2
KE 256258-F1,
KE 2563 -D2

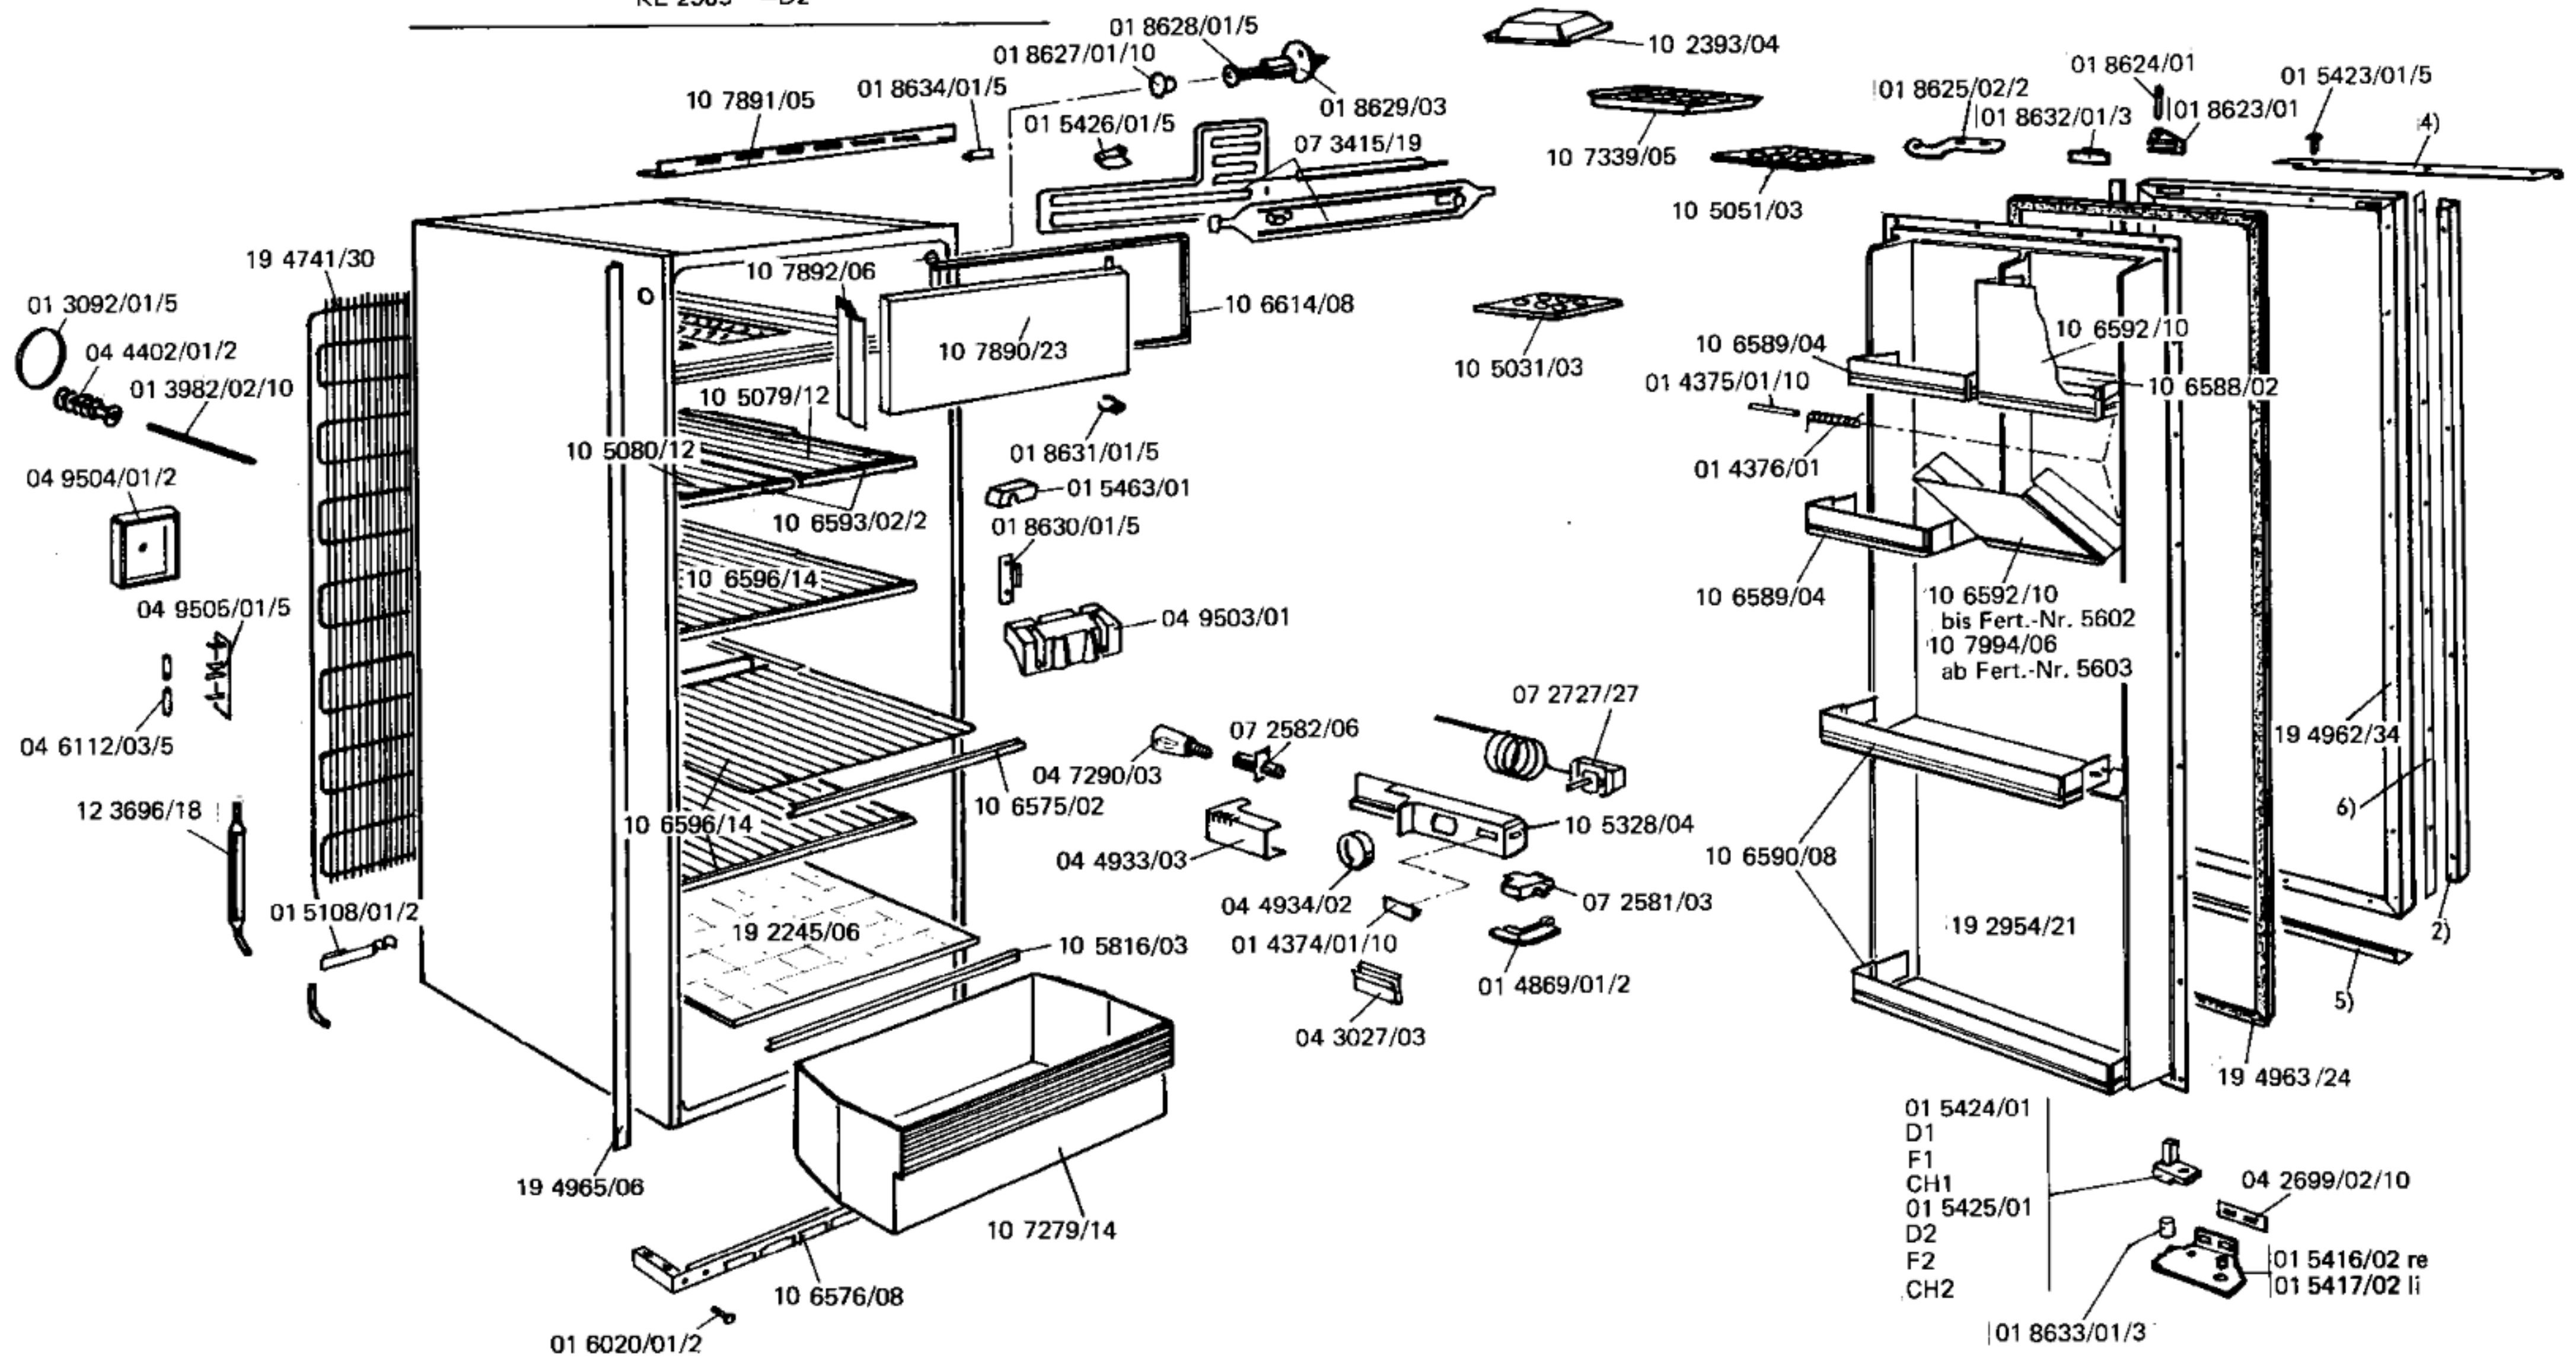


5) 19 2944/07
bis Fert.-Nr. 5602
19 5086/10
ab Fert.-Nr. 5603

2) 19 4964/18
bis Fert.-Nr. 5602
19 5146/18
ab Fert.-Nr. 5603

4) 19 4783/07
bis Fert.-Nr. 5602
19 5085/05
ab Fert.-Nr. 5603

6) 19 4775/08
bis Fert.-Nr. 5602
19 5140/08
ab Fert.-Nr. 5603

50 8788/00
Bed.-Anleitung
50 8876/00
Mont.-Anleitung

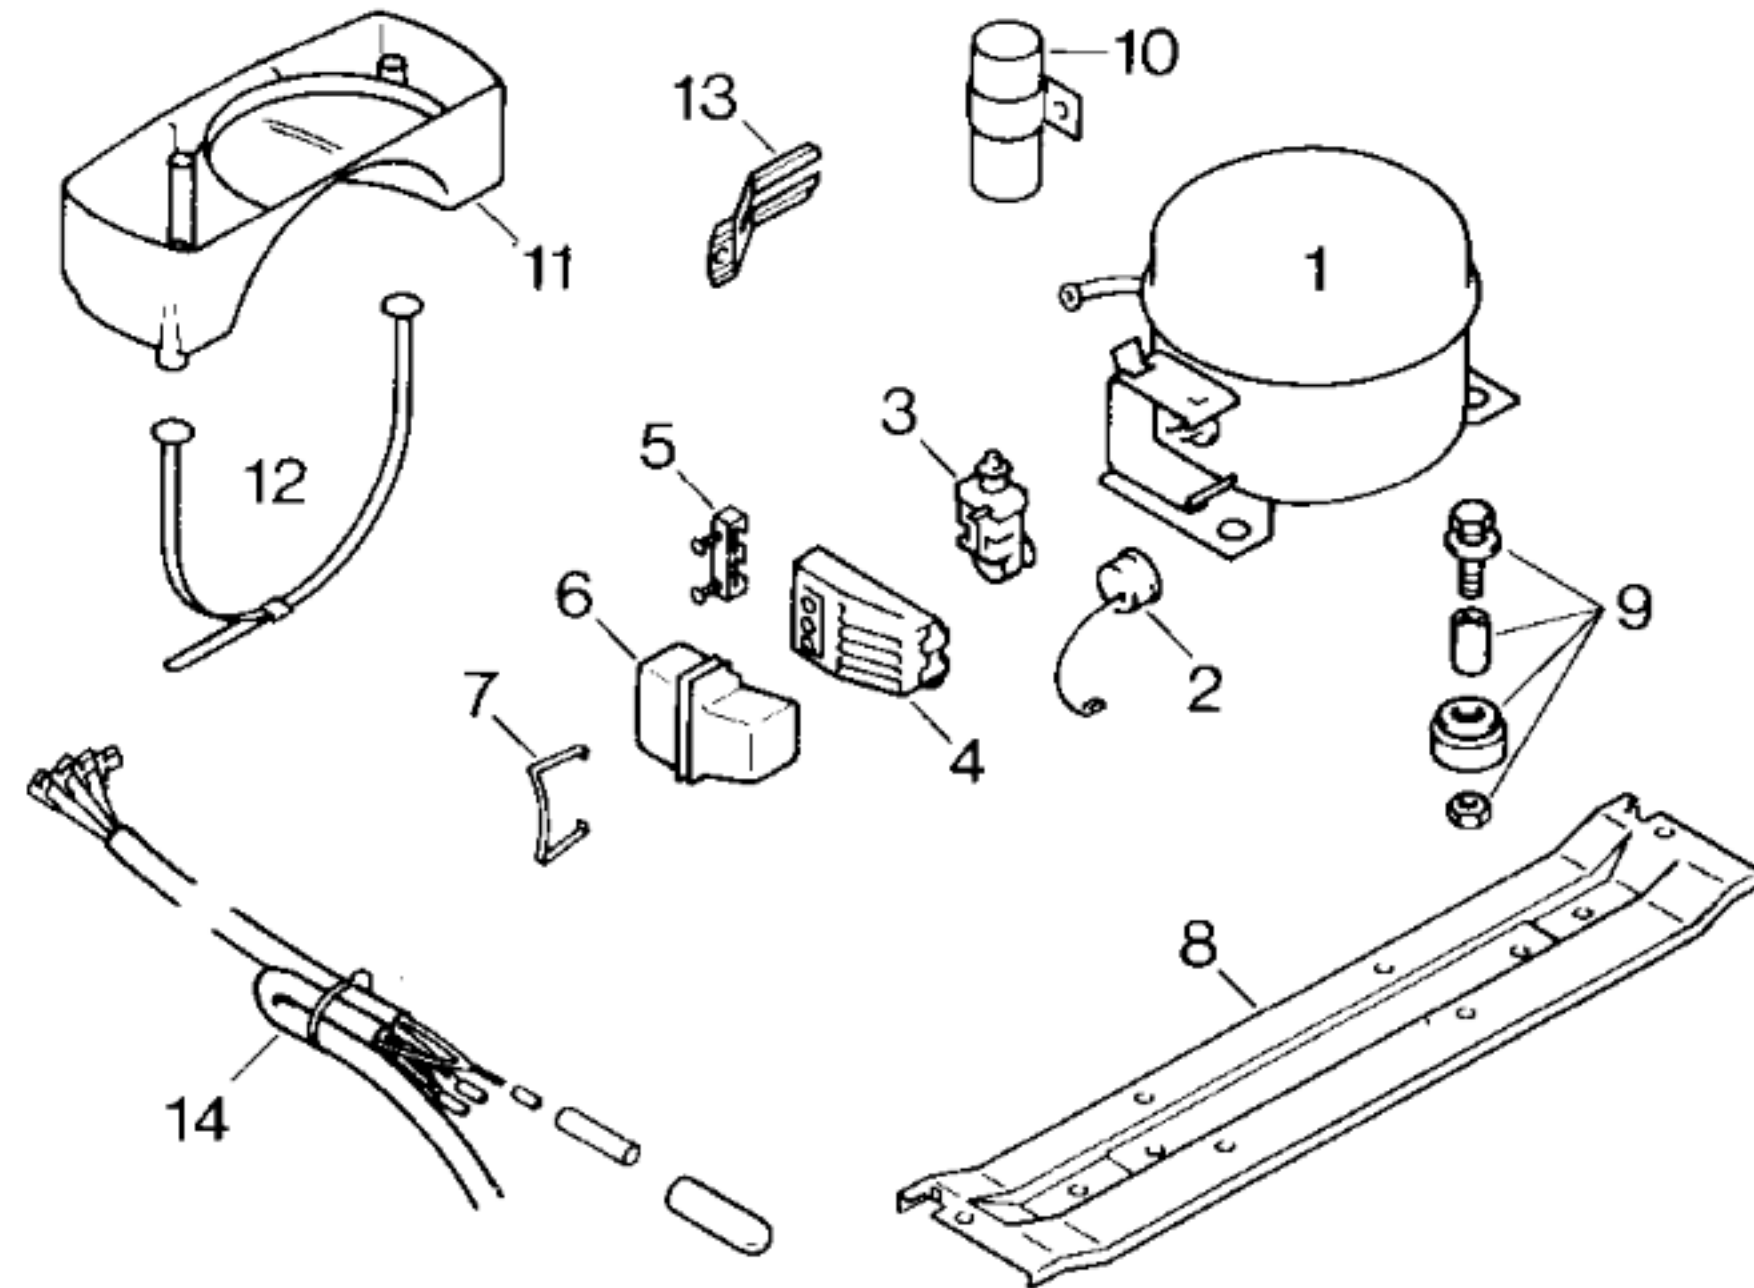

	D1,D2,CH1,CH2,F1,F2		D1,D2,CH1 CH2,F1,F2
Pos.	Bosch	Bosch	Danfoss
	bis Fert.-Nr.5601	ab Fert.-Nr.5602	
1			14 0065/45
2	07 2131/18	07 2131/18	
3	07 2130/18	07 3899/09	02 0108/27
4	04 9865/05	04 9757/02	
5			02 1361/04
6	10 3602/02	04 9758/02	05 1413/06
7			
8			*11 1838/03
9			*05 0166/05/4
10			
11	10 6693/03	10 6693/03	*11 1243/01
12			
13			*04 1568/01/2
14			*05 1226/08

*) Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Bosch	Danfoss		
Typ/Type		V 1040	TL 5 A		
Förderleistung/Delivery/Débit		l/h	1040	920	
Anlaufstrom/Starting current/Cour. de démarrage		A	9,5	9,0	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	17,6	15,7
		Hi/aux	Ω	28,7	18,8
Temp.-Regler/Thermostat		Ranco			
Typ/Type		A 59			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/		„ein“	°C	+ 4	+ 4
Valeurs de commutation		„aus“		- 29	- 20
		(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	130	
Anschlußwert/Conn.load/Puiss. connectée		W	120		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω	3280		
Leistung/Power/Puissance		W	14,8		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			