


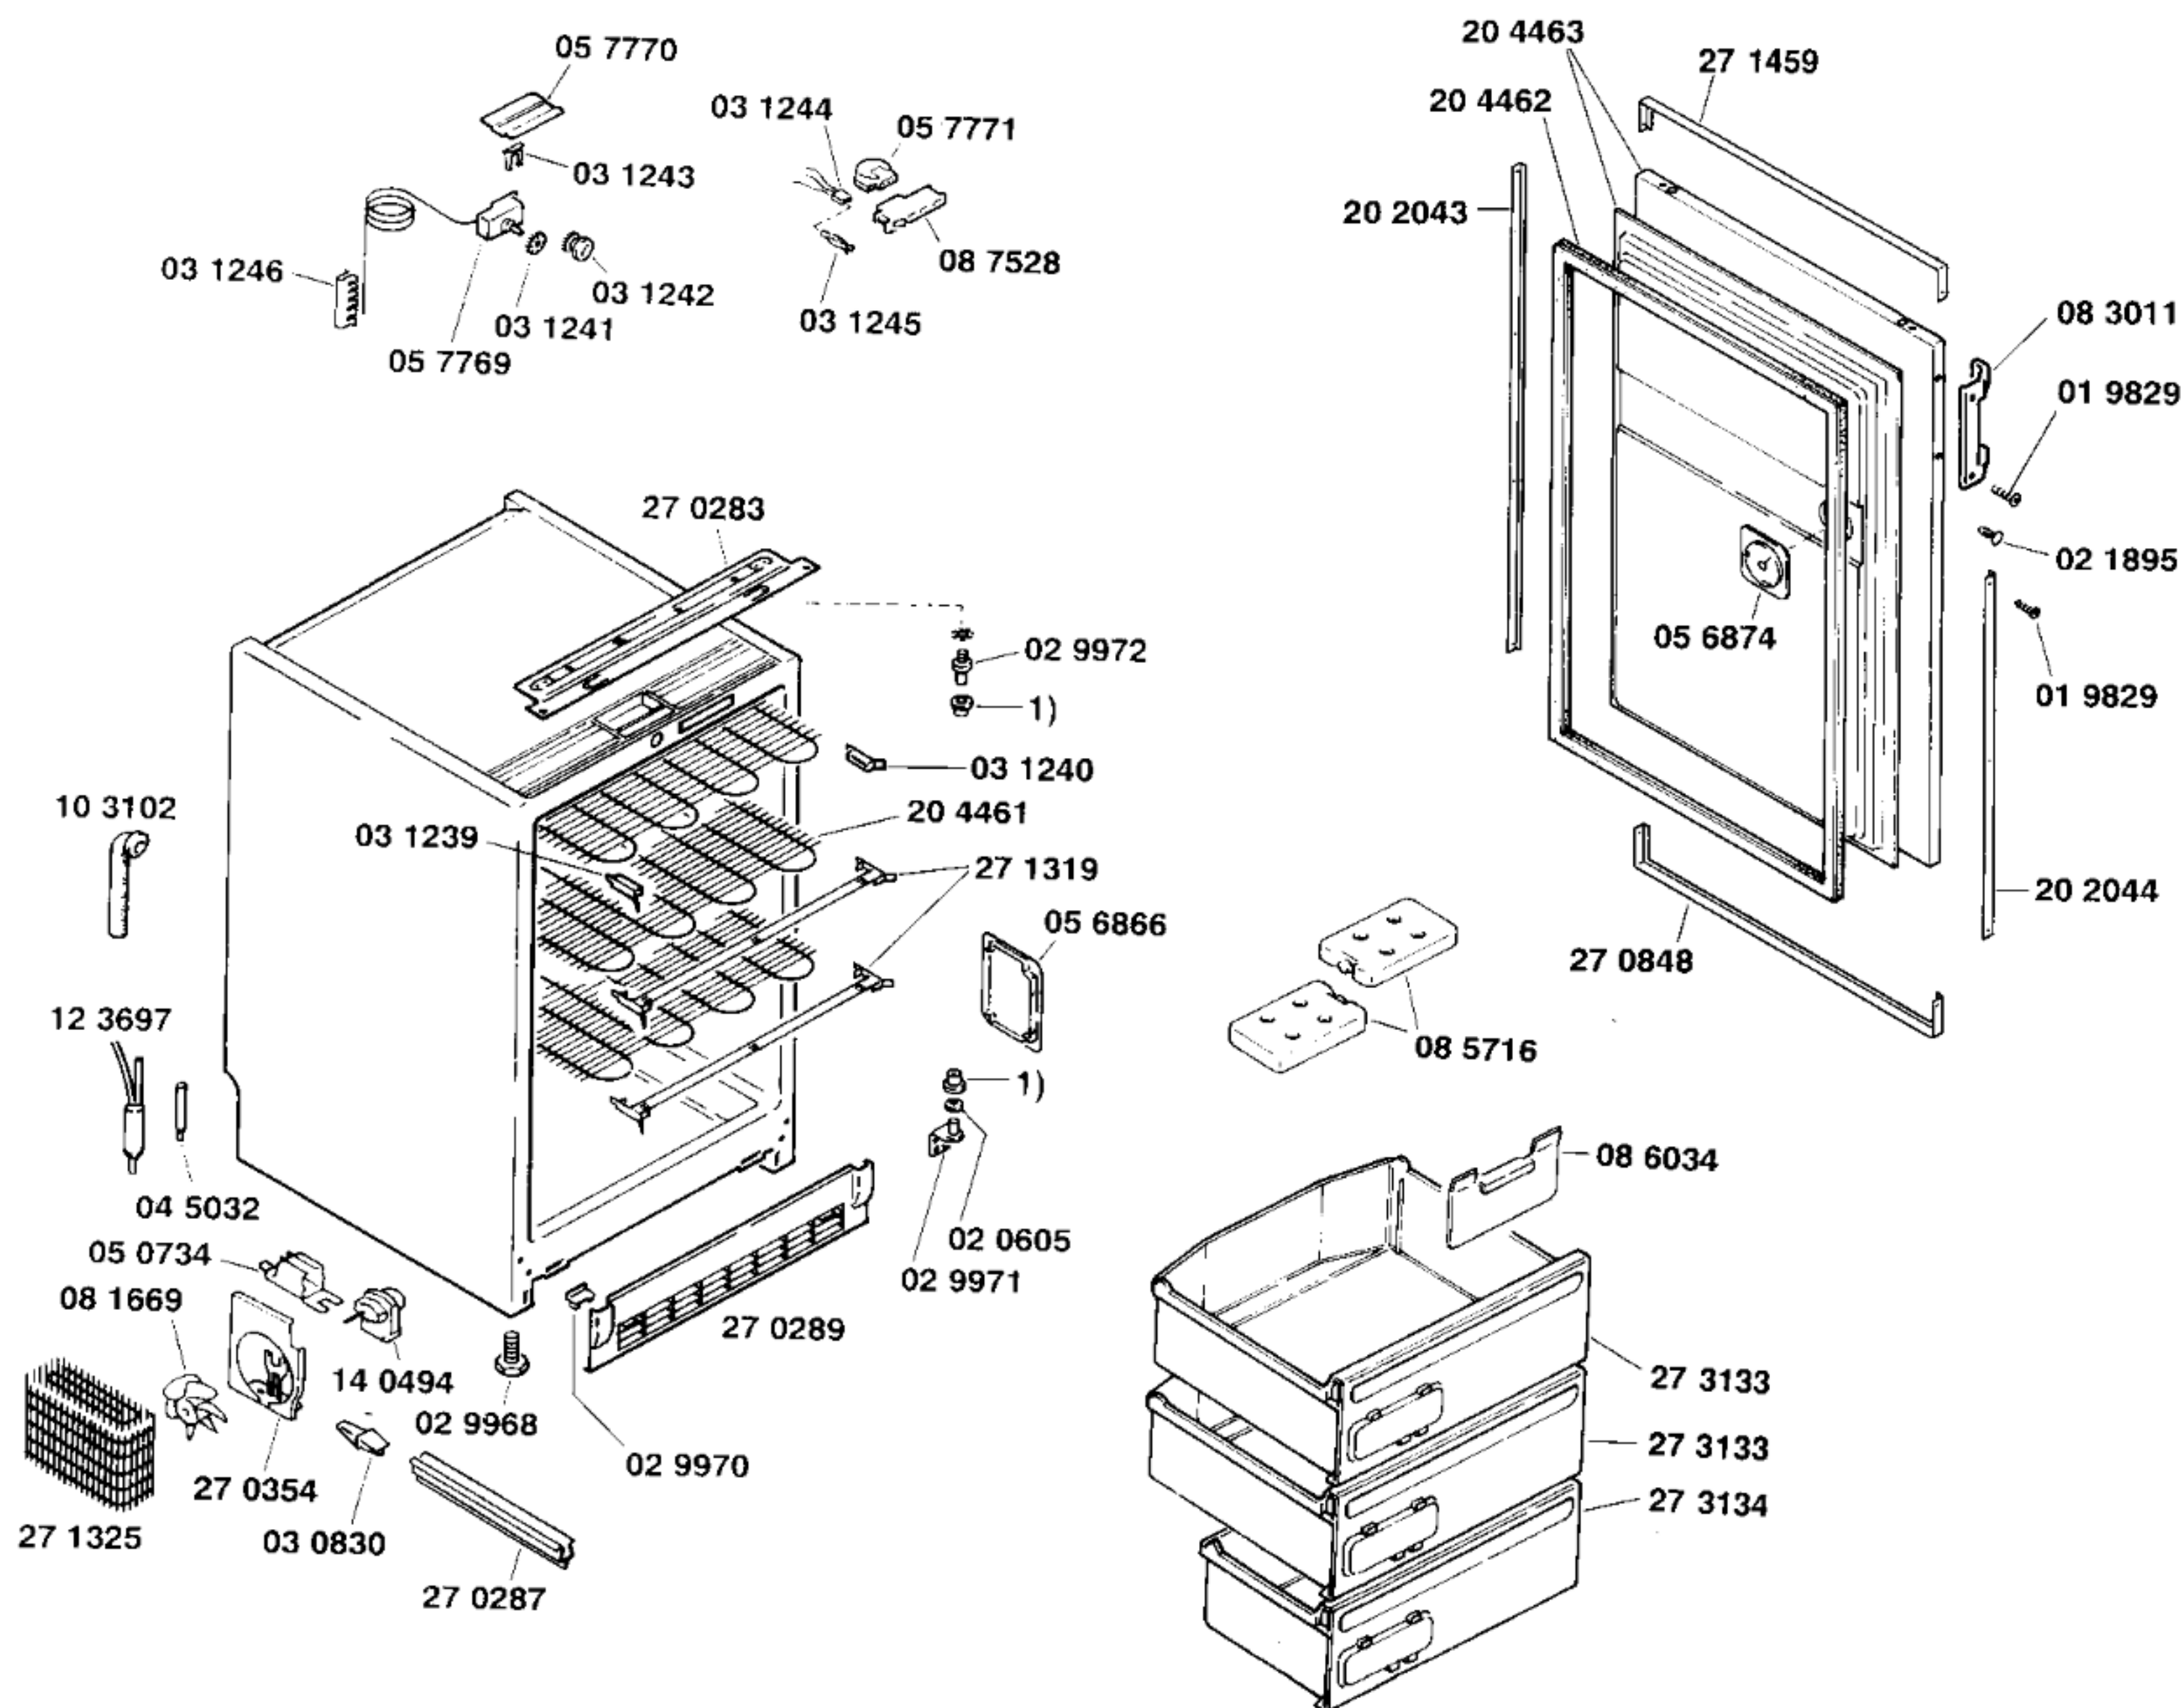


51 4239
Gebrauchsanweisung
(D,GB,F,I,E,NL,SF)
51 4009
Montagewanleitung
(D,GB,F,I,NL,S,SF,E,P,DK,N)

1) 01 9257

Zubehör:

Dekorrahmen
Z4110A1,Alu
Z4110W1,weiss

Sockel
Z4510X0

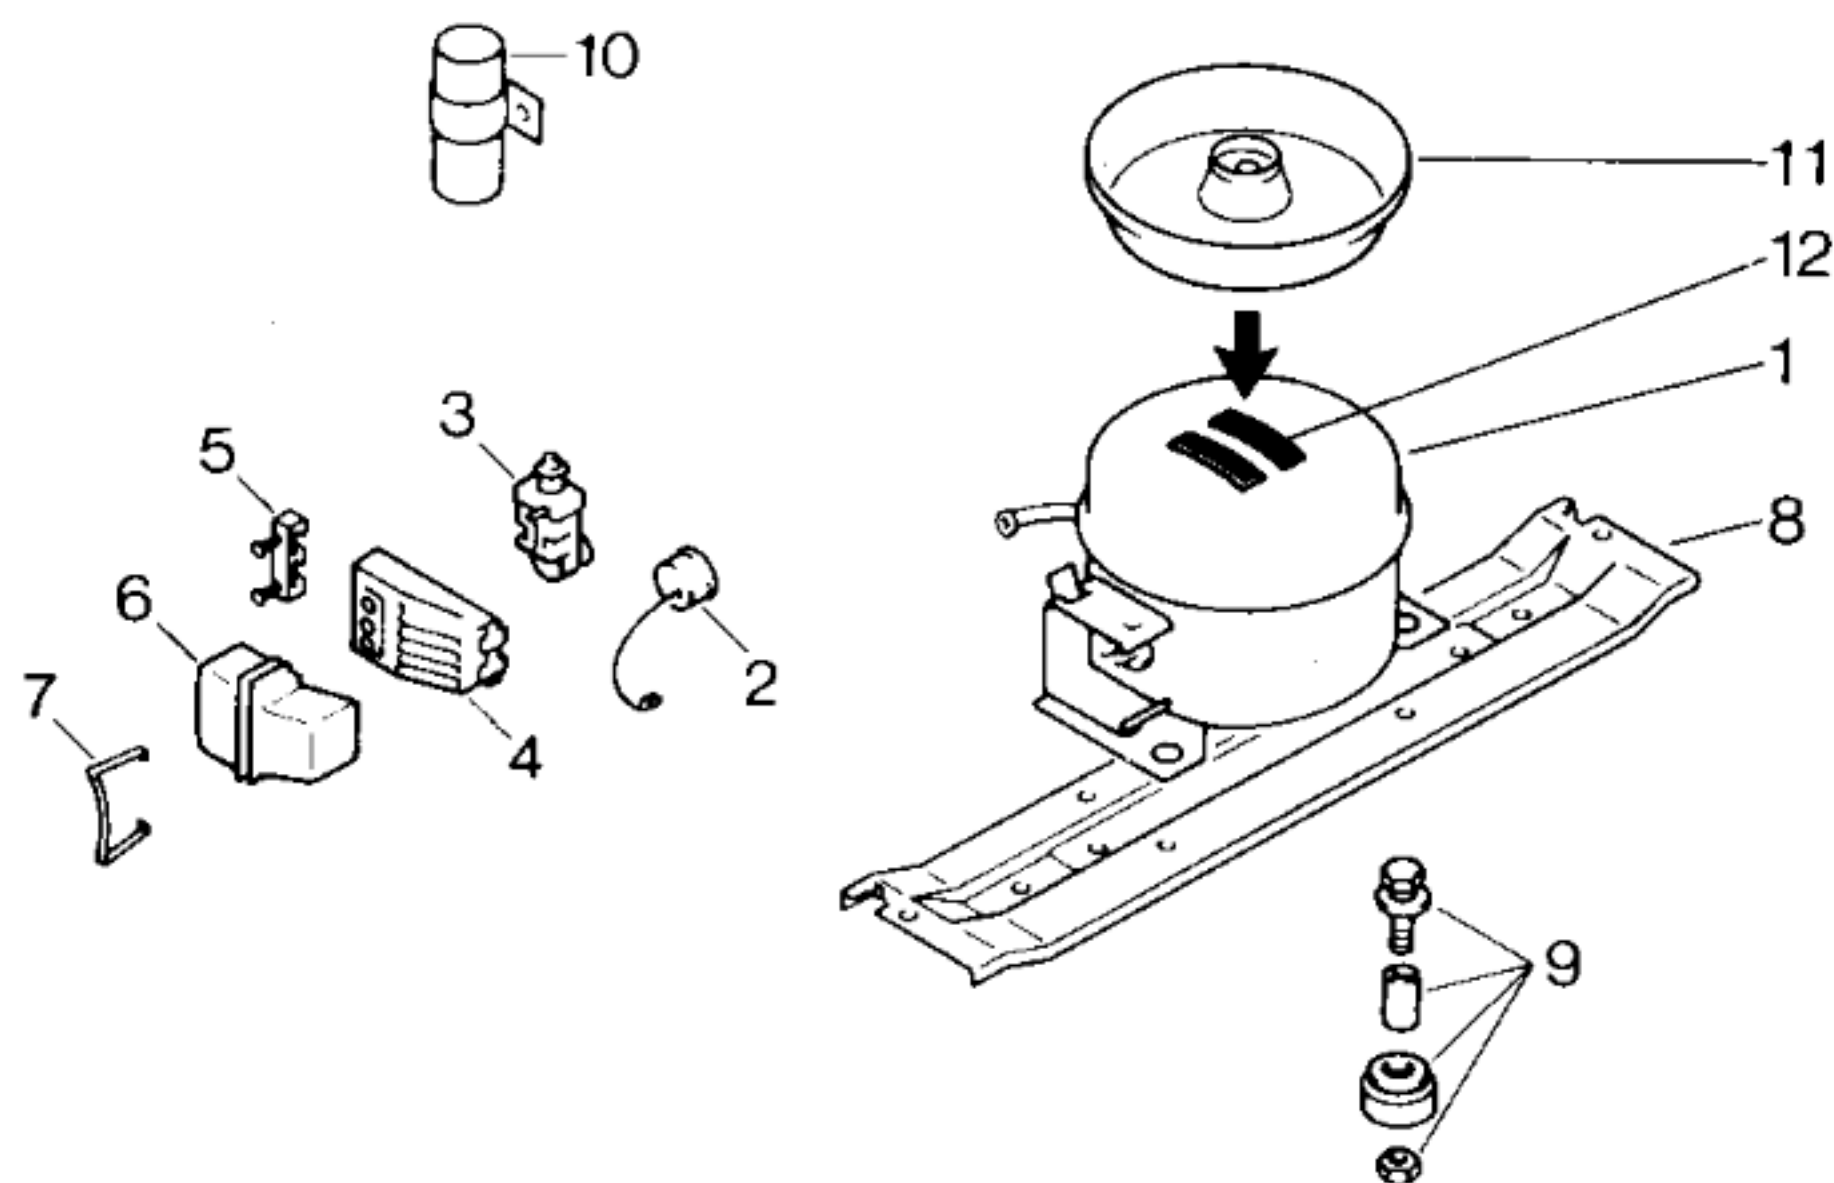

Pos.	EU1, GB1, F1	EU2, GB2	
	Aspera BP1111A	Matsushita S111LKAA	
1	14 0516	14 0571	
2	03 1238		
3	02 7424	03 2034	
4			
5	02 7425		
6	05 5145	05 8457	
7		02 6731	
8	27 0291	27 0291	
9	05 0166	05 0166	
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera	Matsushita	
Typ/Type		BP 1111 A	S111LKAA	
Förderleistung/Delivery/Débit		l/h	873	
Anlaufstrom/Starting current/Cour. de démarrage		A	6,9	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	14,3	
		Hi/aux Ω	34,1	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 SF 2		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		°C		
Valeurs de commutation		„ein“	-25	-17
		„aus“	-33	-23
		(„abtauen“ od.)	-19,5	-13
Füllmenge/Fill.quantity/Charge		R12	g	12
Anschlußwert/Conn.load/Puiss. connectée		W	140	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω	190	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		