

**BOSCH**


GSD3016/01-V01
 GSD3016FF/01-V02
 GSD3016/02-V03
 GSD3016FF/02-V04

KÜHL-,GEFRIERGERÄTE
 Gefrierschränke, Stand

Mat. - Nr. - Konstante
 3740

Gebrauchsanweisungen
 51 6980
 (D,GB,F,I,NL,P,E)
 51 6981
 (S,DK,SF,N)

- 1) 02 6816
- 2) 02 6819
- 3) 02 7786
- 4) 02 6824
- 5) 06 8297
- 6) 06 8299
- 7) 06 8298
- 8) 06 8300
- 9) 06 8499

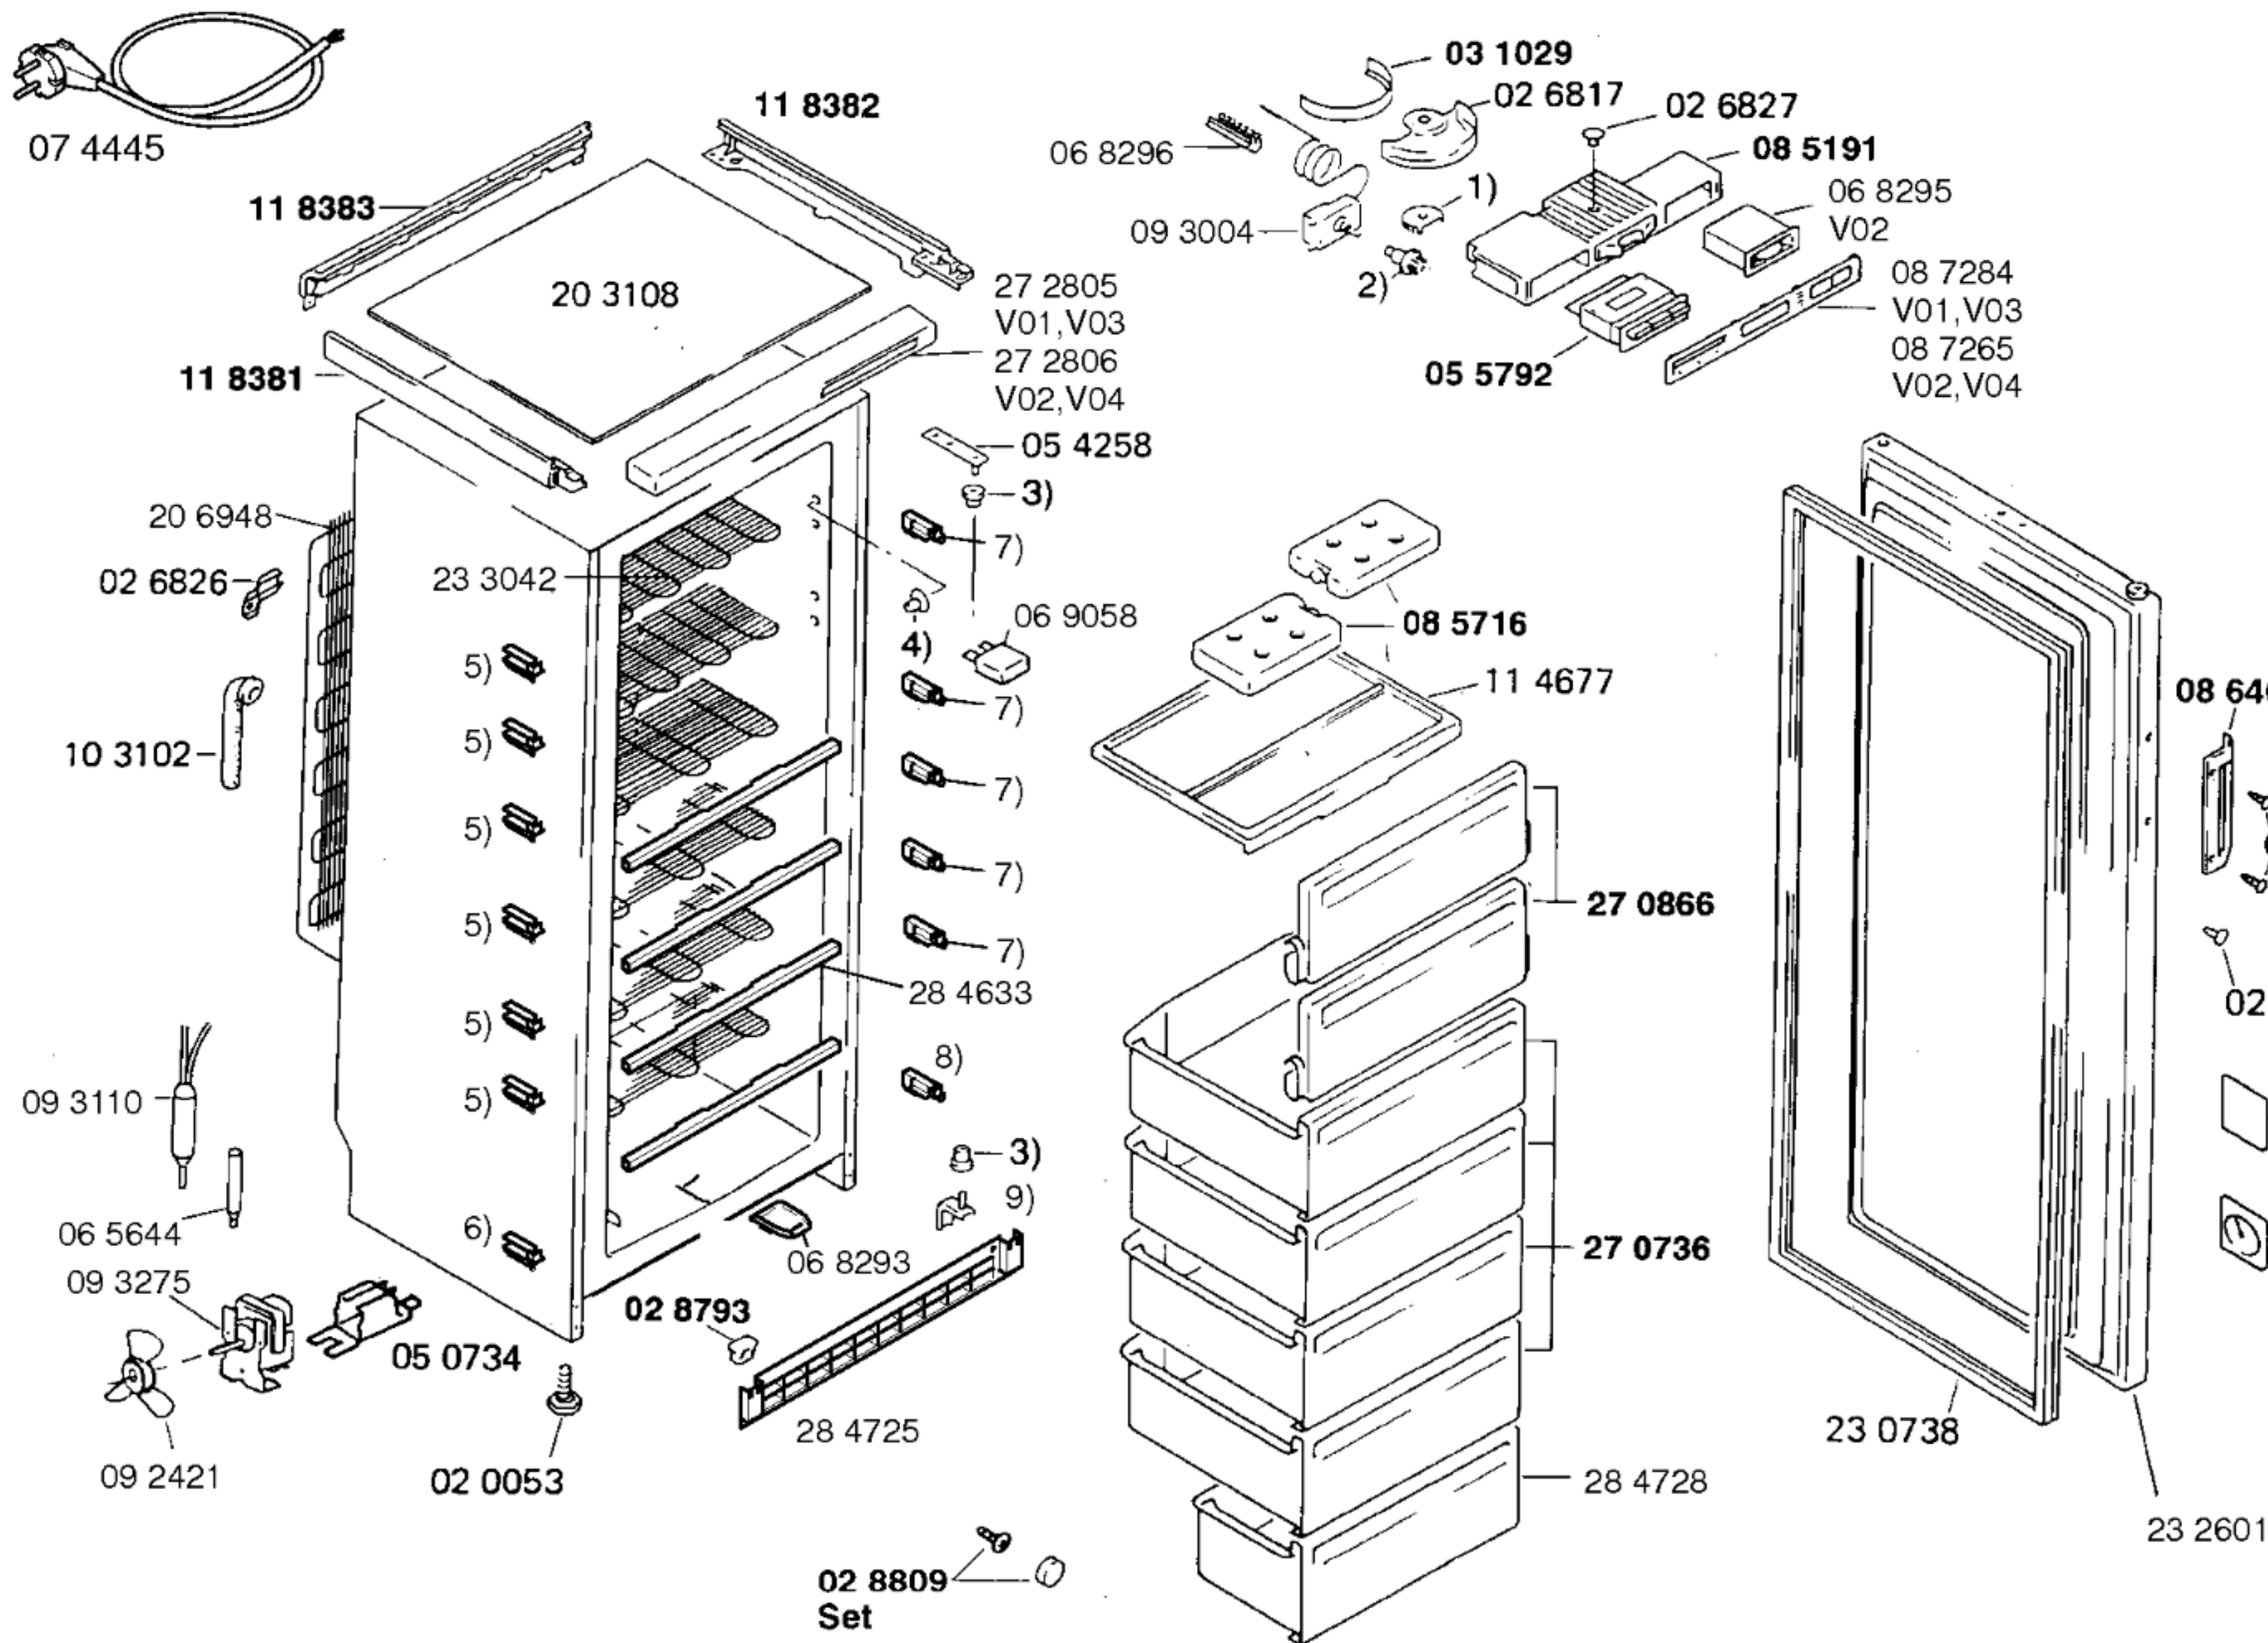


**BOSCH**

GSD3016/01-V01
 GSD3016FF/01-V02
 GSD3016/02-V03
 GSD3016FF/02-V04

KÜHL-,GEFRIERGERÄTE
 Gefrierschränke, Stand

Mat. – Nr. – Konstante
 3740

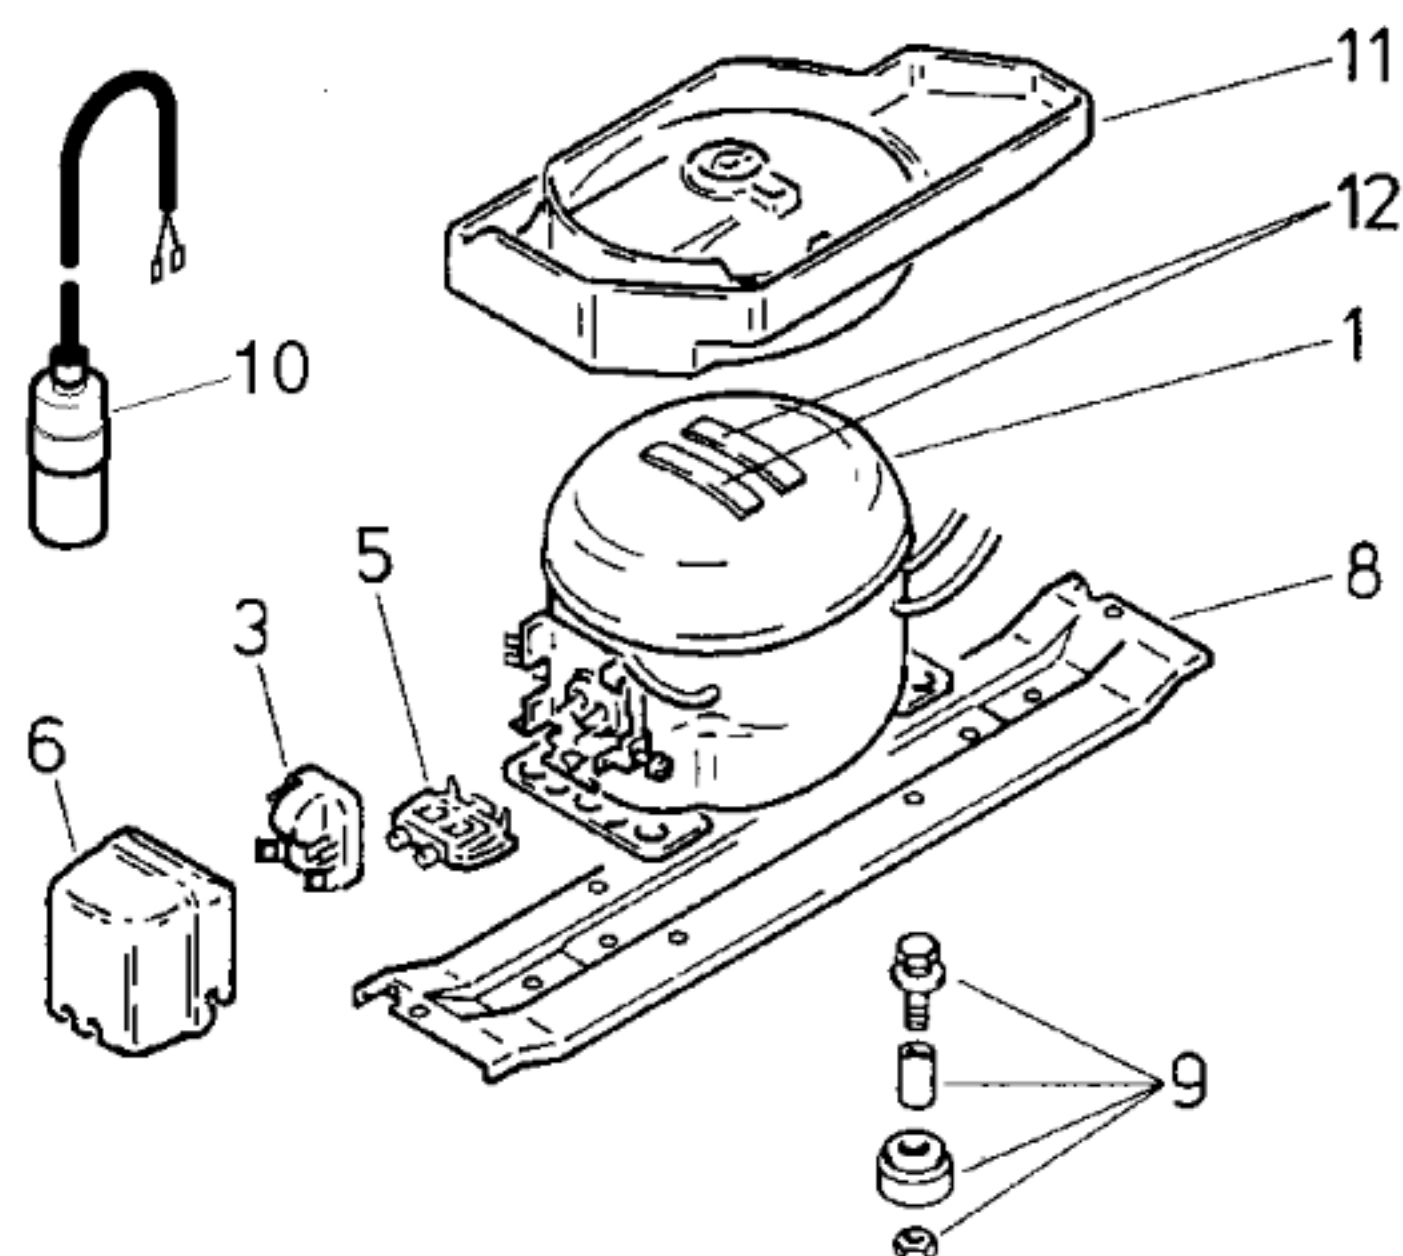

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		NLE 15 K	
Förderleistung/Delivery/Débit	l/h	2637	
Anlaufstrom/Starting current/Cour de démarrage	A	11,4	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	10,7
	Hi/aux	Ω	13
Temp.-Regler/Thermostat		Danfoss	
Typ/Type		077B2157	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“	°C	-22 -14
Valeurs de commutation	„aus“		-32 -22
	(„abtauen“ od.)	„alarm“	-17,5 -10
Füllmenge/Fill.quantity/Charge	R600a	g	85
Anschlußwert/Conn.load/Puiss. connectée	W	120	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

Pos.	Danfoss		
	NLE 15 K		
1	14 1311		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	11 1567		
9	05 0166		
10			
11			
12			