

**BOSCH**

|             |            |                    |            |                    |            |                     |
|-------------|------------|--------------------|------------|--------------------|------------|---------------------|
| KÜHLSCHRANK | KS 160 TLS | - 0 701 164 817-D1 | KS 160 TLS | - 0 701 164 823-D5 | KS 160 TLS | - 0 701 164 827-D9  |
|             |            | - 0 701 164 818-D2 |            | - 0 701 164 824-D6 |            | - 0 701 164 828-D10 |
|             |            | - 0 701 164 819-D3 |            | - 0 701 164 825-D7 |            | - 0 701 164 930-D11 |
|             |            | - 0 701 164 820-D4 |            | - 0 701 164 826-D8 |            | - 0 701 164 931-D12 |

Ident Nummern-Konstante  
3740 .....


\* Teile nur für Tischmodell  
(können nachträglich an Untertischmodell angebaut werden)


Dekorrahmen für Außentür vollst. 19 4373/29

Leiste oben li und unten re 10 6531/06

Leiste oben re und unten li 10 6530/06

Leiste seitlich 12 2309/10

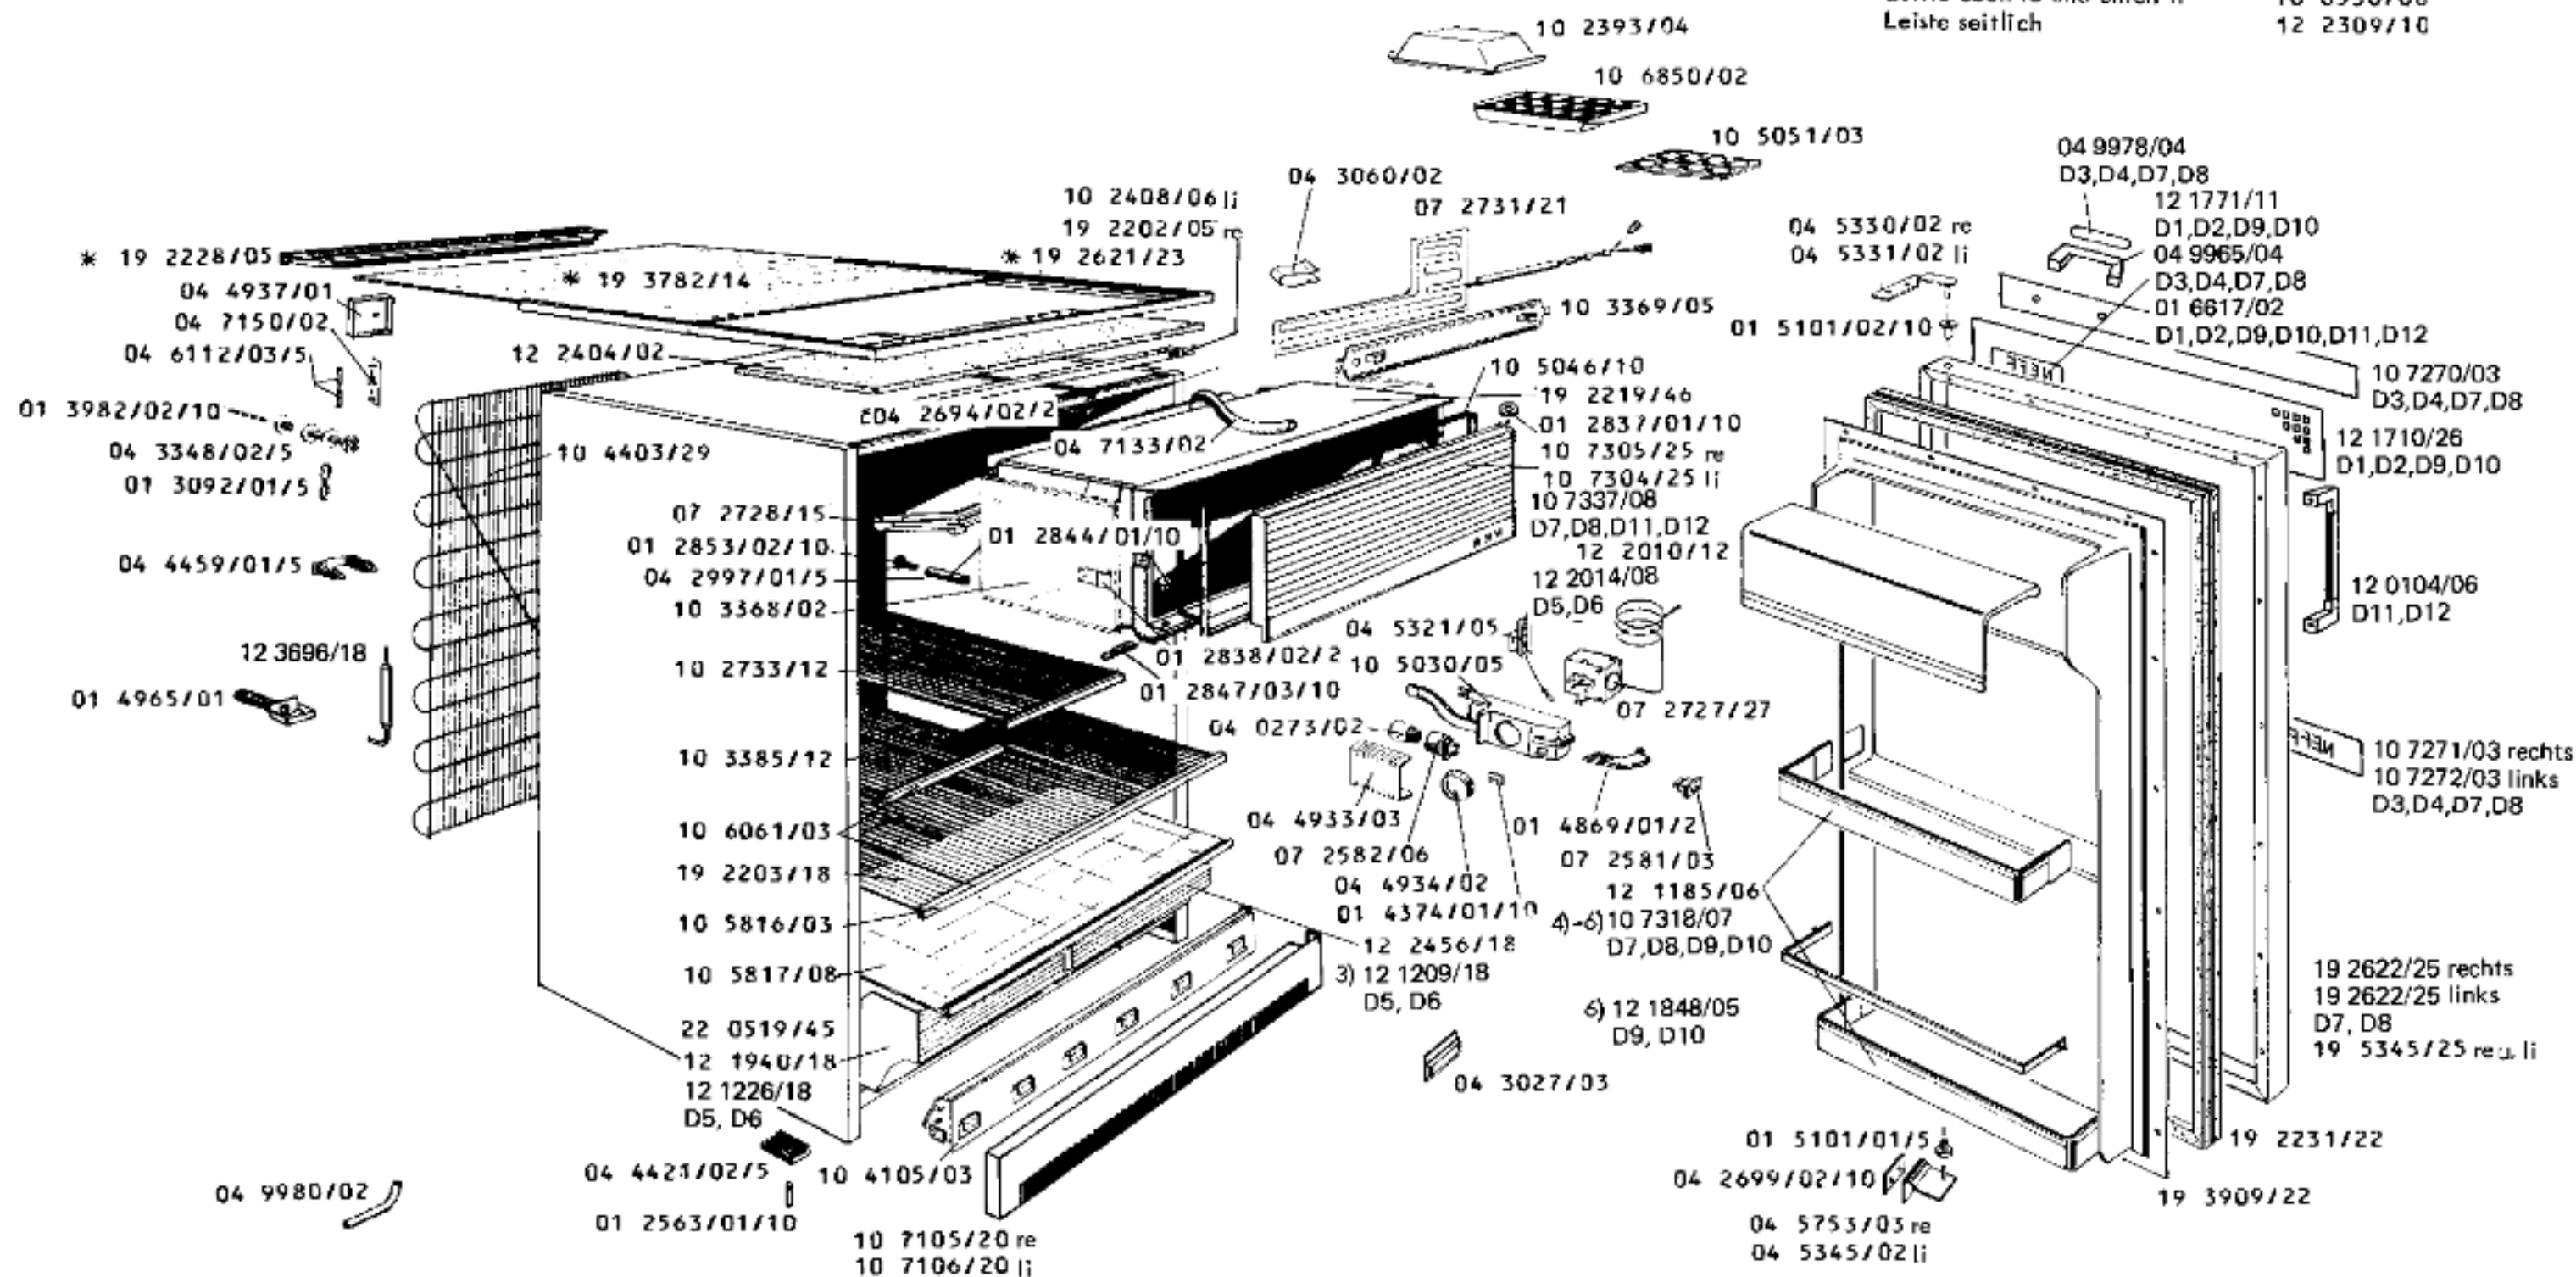

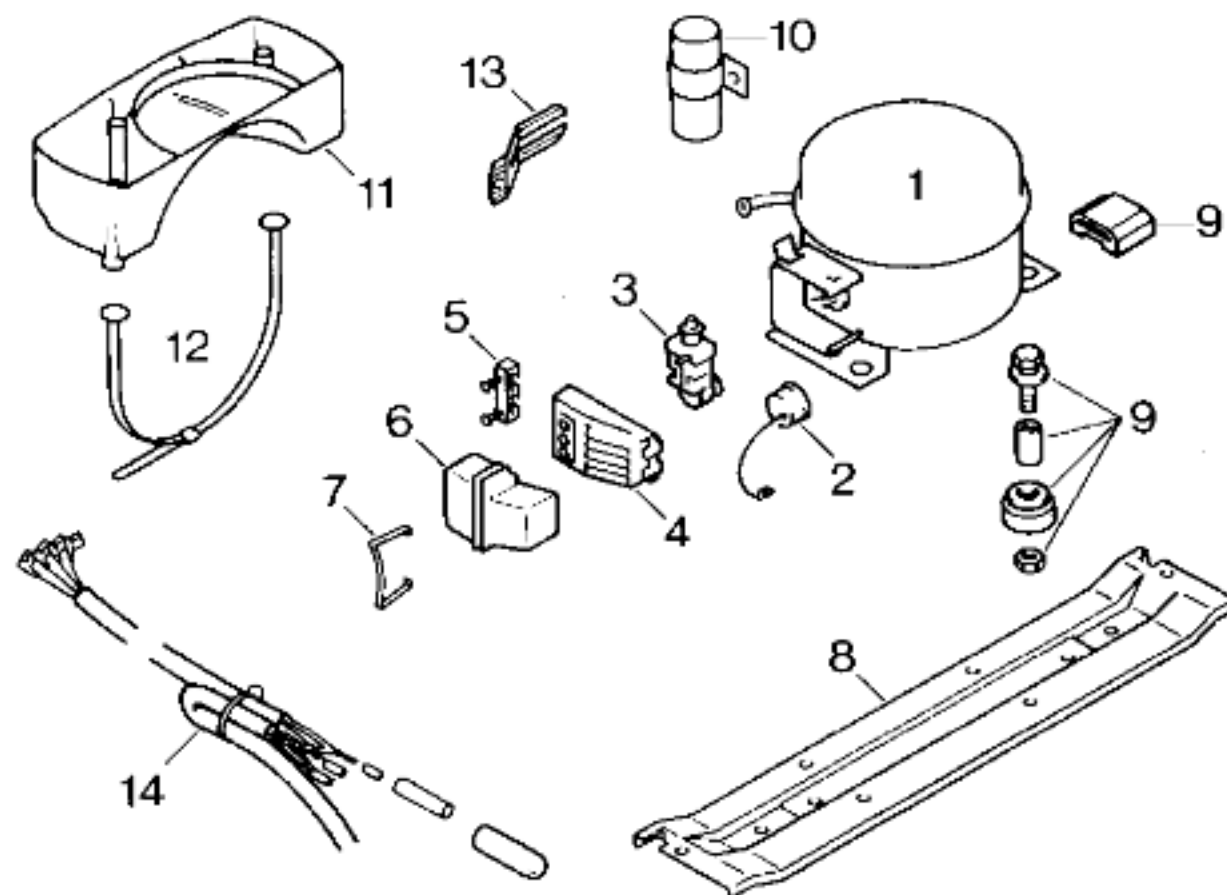

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

|                                                 |  |                 |         |      |      |
|-------------------------------------------------|--|-----------------|---------|------|------|
| Verdichter/Compressor/Compresseur               |  | Bosch           | Danfoss |      |      |
| Typ/Type                                        |  | V 792           | TL 4 A  |      |      |
| Förderleistung/Delivery/Débit                   |  | l/h             | 702     | 702  |      |
| Anlaufstrom/Starting current/Cour. de démarrage |  | A               | 8,3     | 7,8  |      |
| Widerstand/Resistance/Résistance                |  | Ω               | 23,0    | 23,8 |      |
|                                                 |  | Hi/aux          | Ω       | 25,2 | 17,0 |
| Temp.-Regler/Thermostat                         |  | Ranco           |         |      |      |
| Typ/Type                                        |  | A 59            |         |      |      |
| Reglerstellung/Position                         |  | kalt            | warm    |      |      |
| Schaltwerte/Switching values/                   |  | °C              | + 4     |      |      |
| Valeurs de commutation                          |  | „ein“           | - 29    | - 19 |      |
|                                                 |  | „aus“           |         |      |      |
|                                                 |  | („abtauen“ od.) | „alarm“ |      |      |
| Füllmenge/Fill quantity/Charge                  |  | R12             | g       | 130  |      |
| Anschlußwert/Conn. load/Puiss. connectée        |  | W               | 120     |      |      |
| Heizung/Heater/Chauffage                        |  |                 |         |      |      |
| Widerstand/Resistance/Résistance                |  | Ω               | 3280    |      |      |
| Leistung/Power/Puissance                        |  | W               | 14,8    |      |      |
| Ventilator/Blower/Ventilateur                   |  |                 |         |      |      |
| Widerstand/Resistance/Résistance                |  | Ω               |         |      |      |
| Magnetventil/Magnetic valve/Electrovanne        |  |                 |         |      |      |
| Widerstand/Resistance/Résistance                |  | Ω               |         |      |      |
| Spannung/Voltage/Tension                        |  | V               |         |      |      |

| Pos. | D1 - D12   | D1 - D12      |  |  |
|------|------------|---------------|--|--|
|      | Bosch      | Danfoss       |  |  |
| 1    |            | 13 1064/45    |  |  |
| 2    | 07 2115/18 |               |  |  |
| 3    | 07 1804/18 | 02 0108/27    |  |  |
| 4    | 04 9757/02 |               |  |  |
| 5    |            | 02 1361/04    |  |  |
| 6    | 04 9758/02 | 05 1413/06    |  |  |
| 7    |            |               |  |  |
| 8    |            | *11 1839/07   |  |  |
| 9    |            | *05 0166/05/4 |  |  |
| 10   |            |               |  |  |
| 11   | 10 6693/03 | *11 1243/01   |  |  |
| 12   |            |               |  |  |
| 13   |            | *04 1568/01/2 |  |  |
| 14   |            | *05 1226/08   |  |  |

\*| Bei Ersatz des Bosch-Verdichters mitbestellen  
To be ordered when replacing the Bosch compressor  
A commander lors du remplacement du compresseur Bosch