


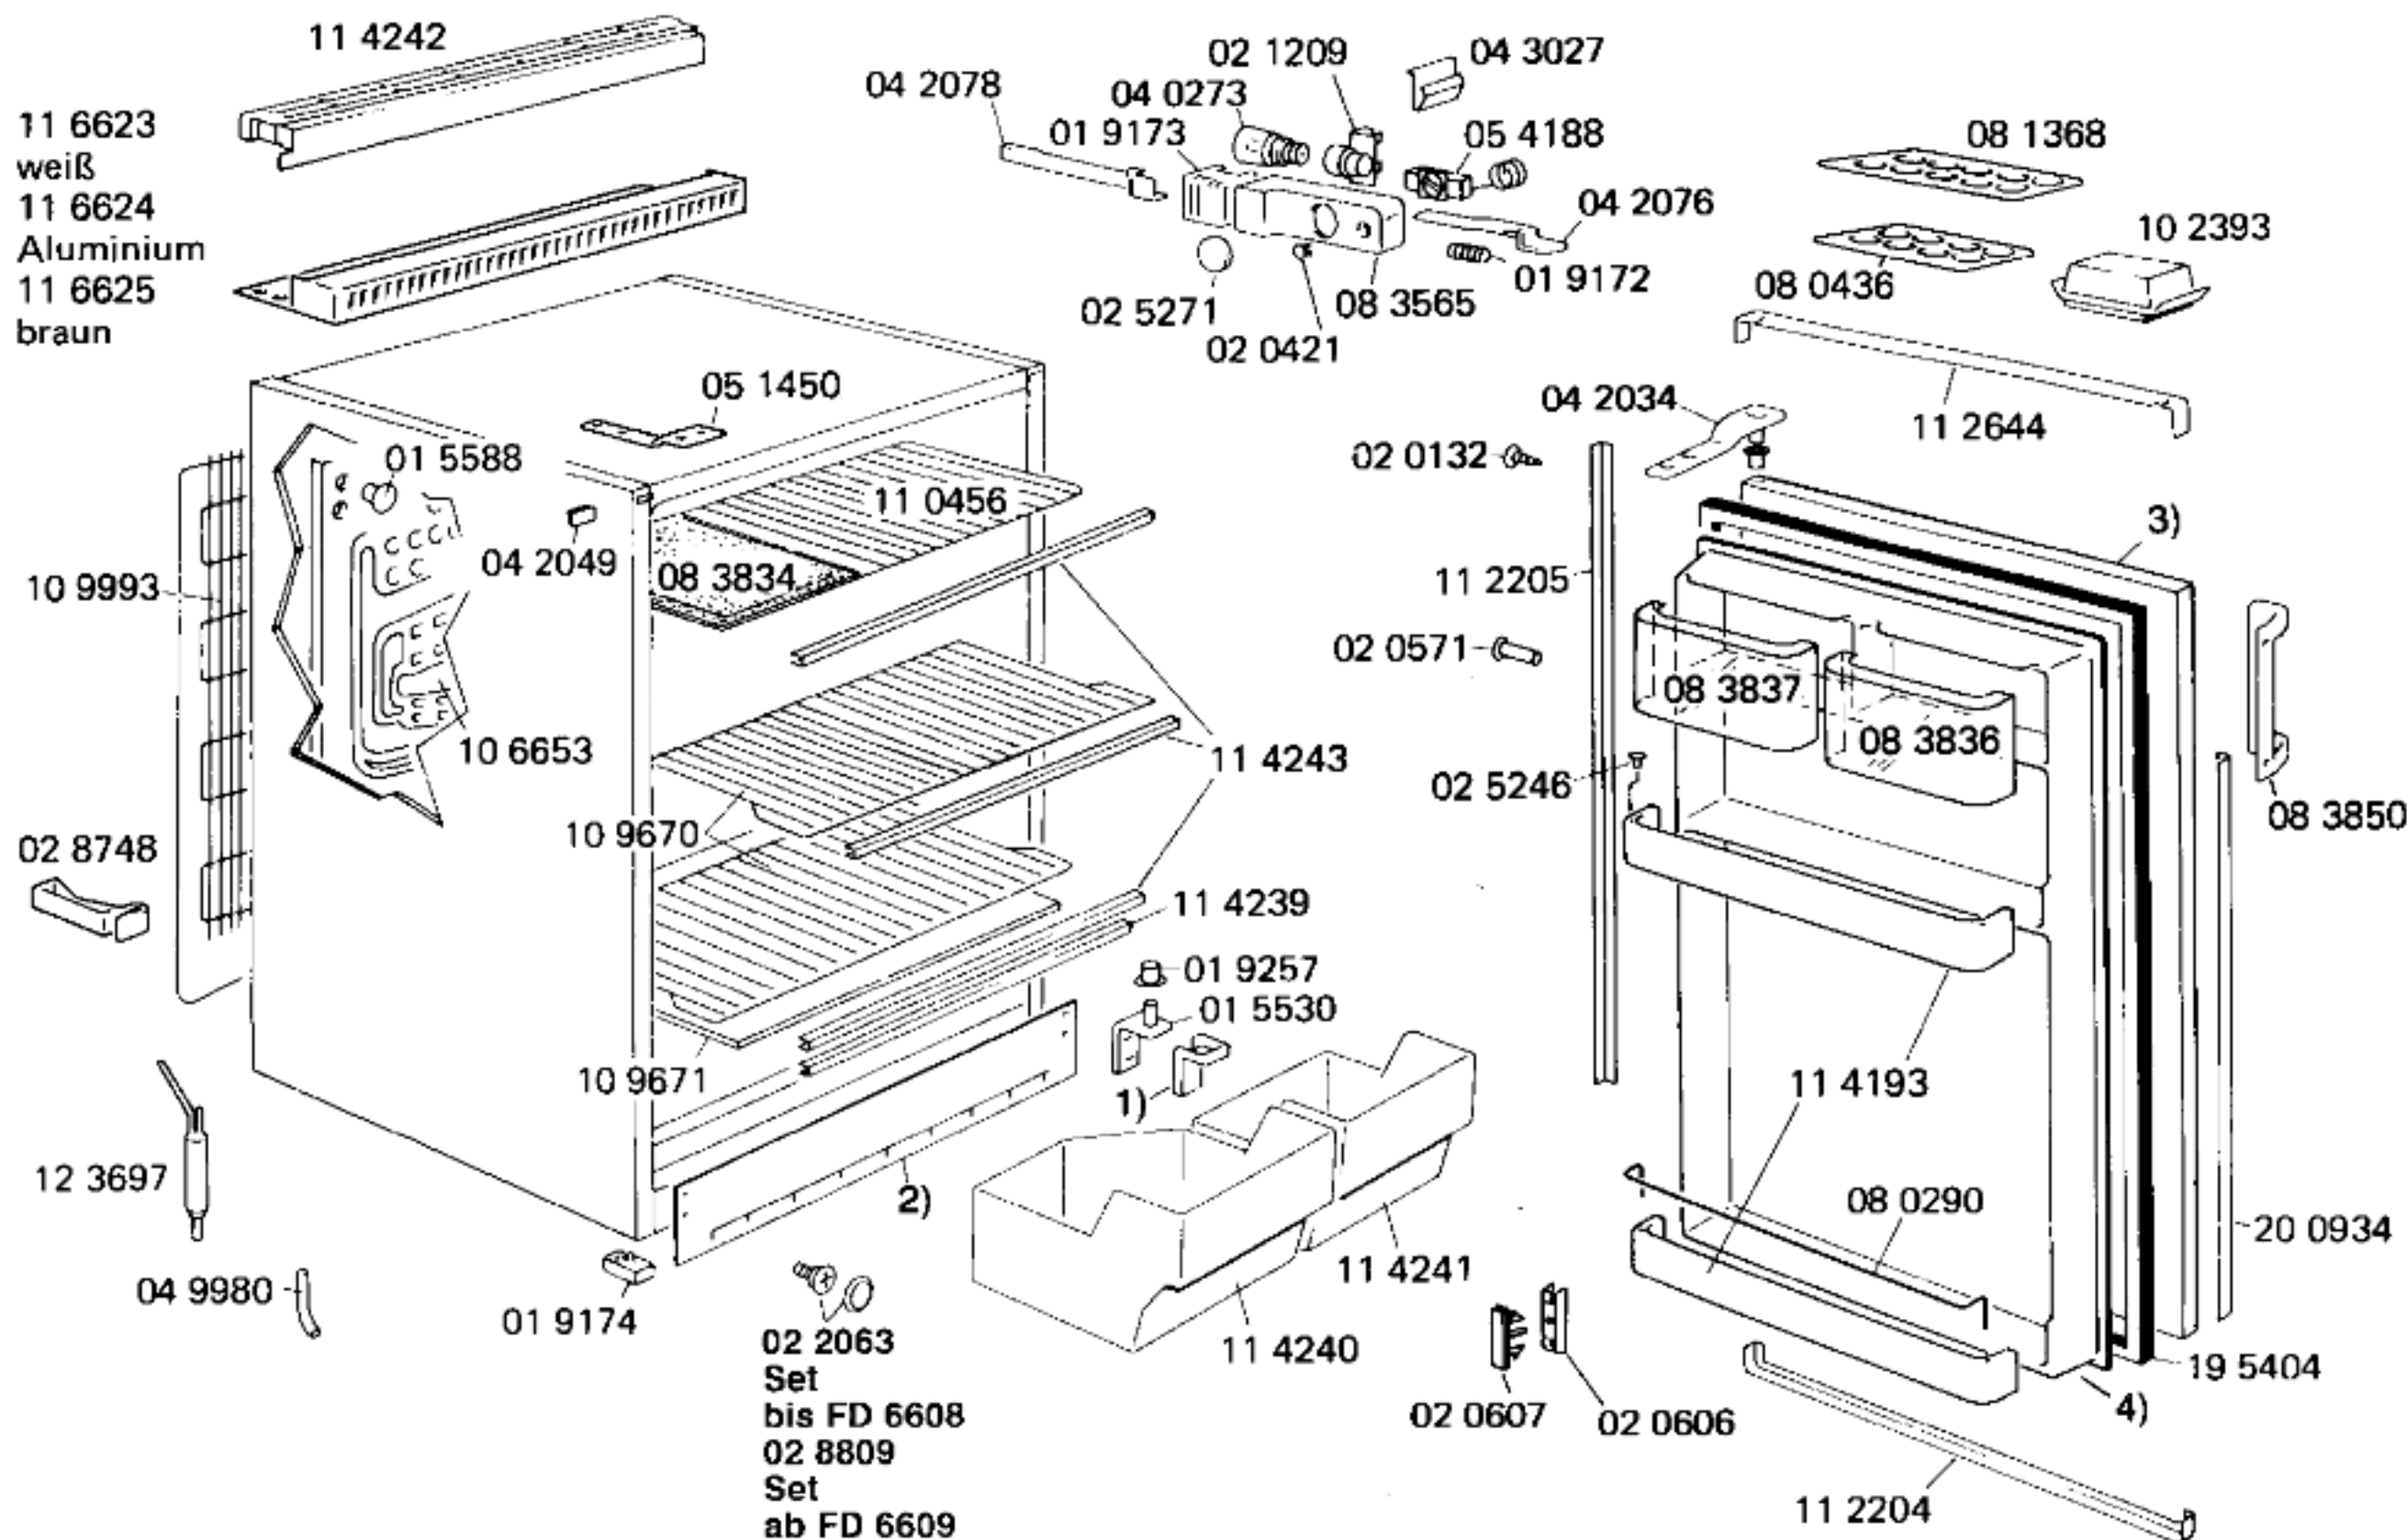


1) 02 5792
bis FD 6608
02 8810
ab FD 6609

2) 11 2207
bis FD 6608
11 7432
ab FD 6609

3) 20 0514
EU1,EU2
20 2950
EU3,EU4
EU5,EU6

4) 20 2517
EU1 - EU4
20 2953
EU5,EU6

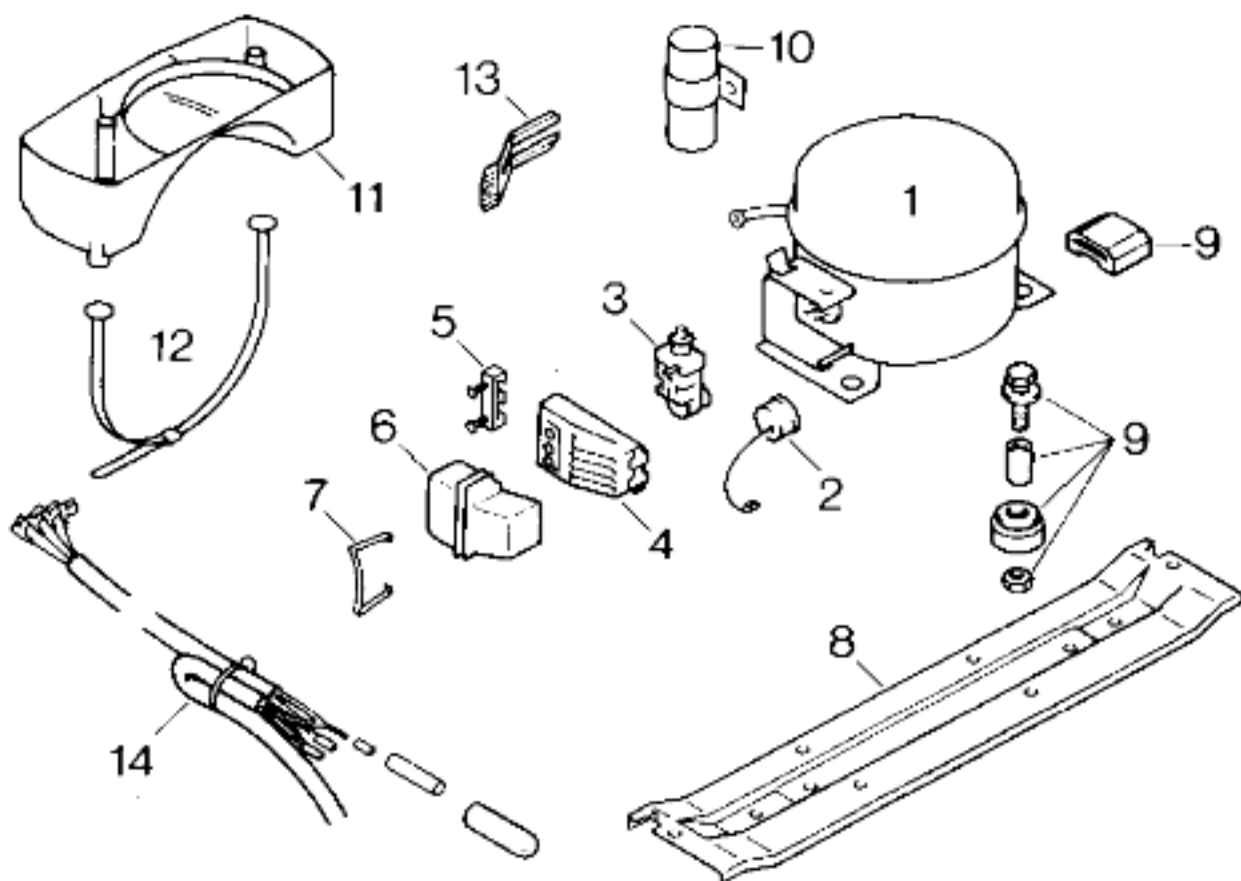

Pos.	bis FD 6505		ab FD 6506	
	EU1, EU3	EU2, EU4	EU4, EU6	EU5
	Necchi	Danfoss	Danfoss	Aspera
1	14 0110	14 0080	14 0364	14 0393
2	02 1627			02 8074
3	02 1577	02 0108	02 0108	02 7424
4	04 9990			
5		02 7310	02 7310	02 7425
6	04 9991	05 1413	05 1413	05 5145
7	04 9996			
8	11 1567	11 1567	11 1567	11 1567
9	05 0166	05 0166	05 0166	05 0166
10				
11	07 5166	11 1243	08 4744	08 4744
12	02 1562			
13	04 1568	04 1568	04 1568	04 1568
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Necchi	Danfoss	Aspera	
Typ/Type		M 3,5 J	TL 3 A	BP 1058 A	
Förderleistung/Delivery/Débit		l/h	576	567	
Anlaufstrom/Starting current/Cour. de démarrage		A	7,2	6,4	
Widerstand/Resistance/Résistance		Ha/main/prin.	33,2	31,0	
		Hi/aux	16,7	29,0	
Temp.-Regler/Thermostat		Ranco			
Typ/Type		A 59			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/		+ 4	+ 4		
Valeurs de commutation		-26,5	-11		
[„abtauen“ od.]		„alarm“			
Füllmenge/Fill.quantity/Charge		R12	g	80	
Anschlußwert/Conn.load/Puiss. connectée		W	100		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			